


ASSEMBLY INSTRUCTIONS FOR #1-0023068001-12/DIF(136728)

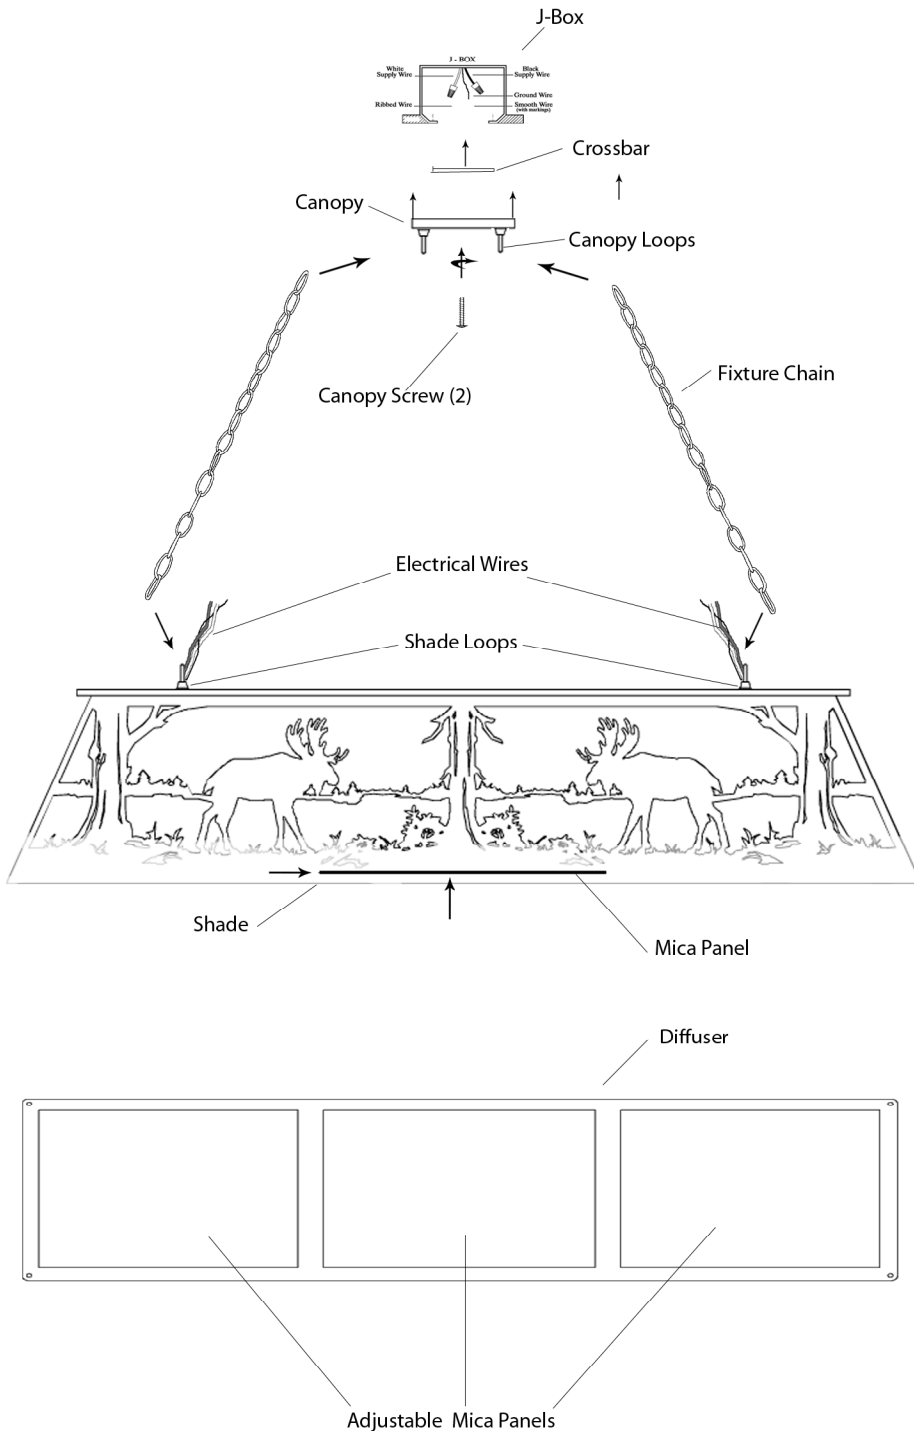

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to J-box with customer supplied screws.
- 2.) Attach fixture chains to shade loops and canopy loops.
- 3.) Thread electrical wires up fixture chain and through canopy.
- 4.) Hold up canopy (with fixture) and wire as per local electrical code.
- 5.) Attach canopy to crossbar with canopy screws provided.

Re-lamping Instructions:

- Push mica panel upwards
- Slide mica panel to one side.
- Reach up into fixture and change light bulb.
- Repeat for remaining two panels.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com