


ASSEMBLY INSTRUCTIONS FOR #137060(48259-276.26WDIMCFL)

Attachment Assembly (3)

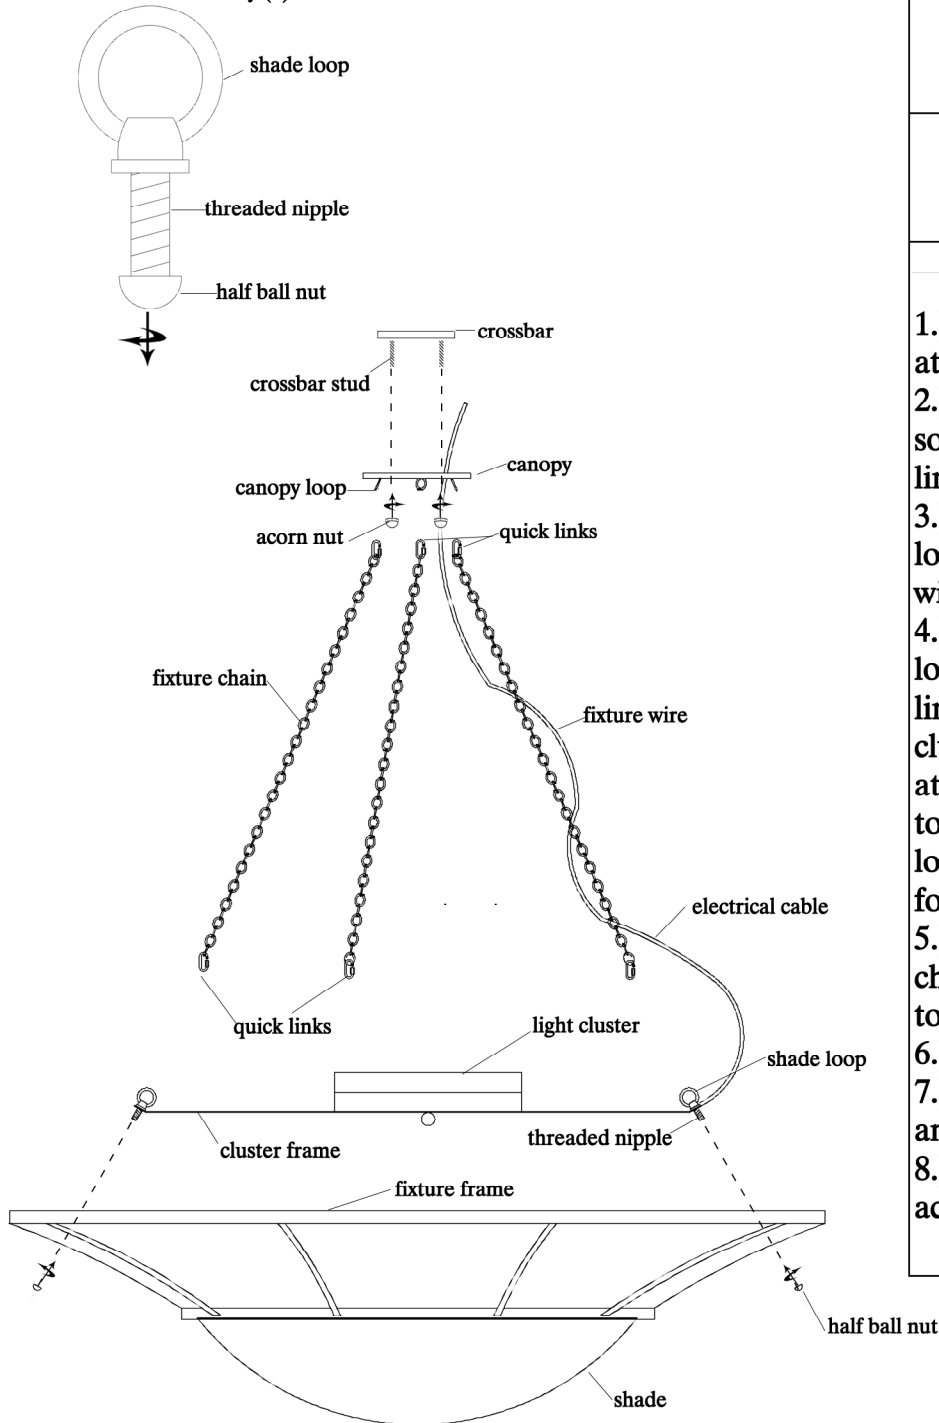

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THIS IS A TWO PERSON JOB

- 1.) Remove the half ball nuts off the attachment assembly and set aside.
- 2.) Place the cluster frame inside the shade so that the holes on the cluster frame line up with the holes on the fixture frame.
- 3.) Insert the threaded nipples, with shade loops attached, into these holes and secure with the half ball nuts.
- 4.) Attach the fixture chain to the canopy loops and shade loops using the quick links provided. (Only one arm of the cluster frame has the electrical cable attached. The fixture chain that attaches to this arm must be attached to the canopy loop that has a hole drilled adjacent to it for the cable to pass through).
- 5.) Thread electrical cable up this fixture chain and insert through the hole adjacent to the canopy loop.
- 6.) Attach the crossbar to a secure location.
- 7.) Raise up the entire fixture to ceiling and wire as per local electrical code.
- 8.) Secure canopy to crossbar by screwing acorn nuts onto crossbar studs.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com