


ASSEMBLY INSTRUCTIONS FOR #36404-8 (137309)

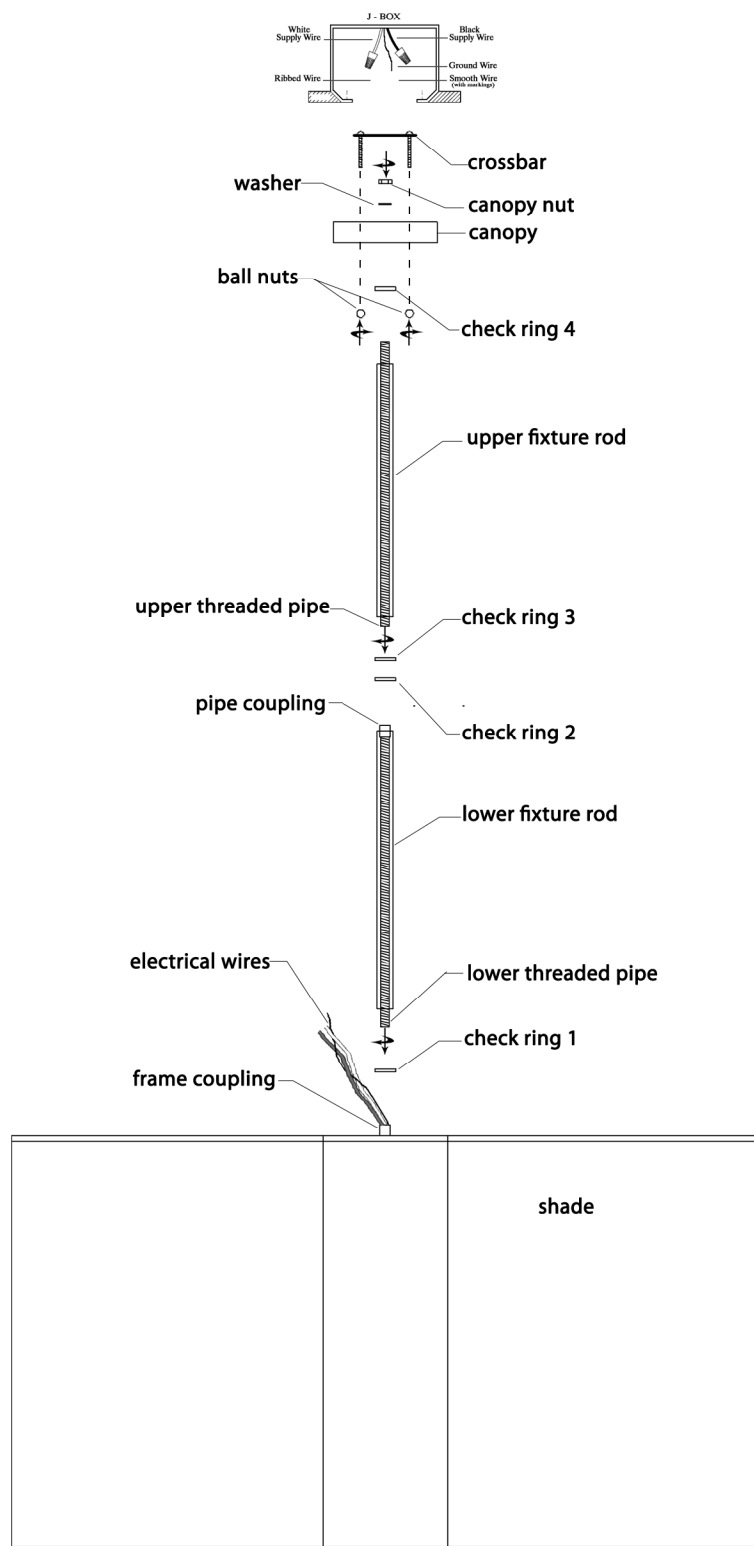

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to j-box using customer supplied screws.
- 2.) Place check ring 2 on top of lower fixture rod and check ring 3 on bottom of upper fixture rod, then screw upper threaded pipe into pipe coupling on top of lower threaded pipe.
- 3.) Place check ring 1 on bottom of lower fixture rod, feed electrical wires up the assembled threaded pipes, and screw lower threaded pipe into frame coupling.
- 4.) Feed electrical wires through check check ring 4, canopy, washer, and canopy nut.
- 5.) Secure canopy to upper fixture rod with canopy nut.
- 6.) Raise up fixture to crossbar, wire as per local electrical codes, and secure canopy to crossbar with ball nuts.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com