


ASSEMBLY INSTRUCTIONS FOR #138426 (30203-1.ORB/EM.M)

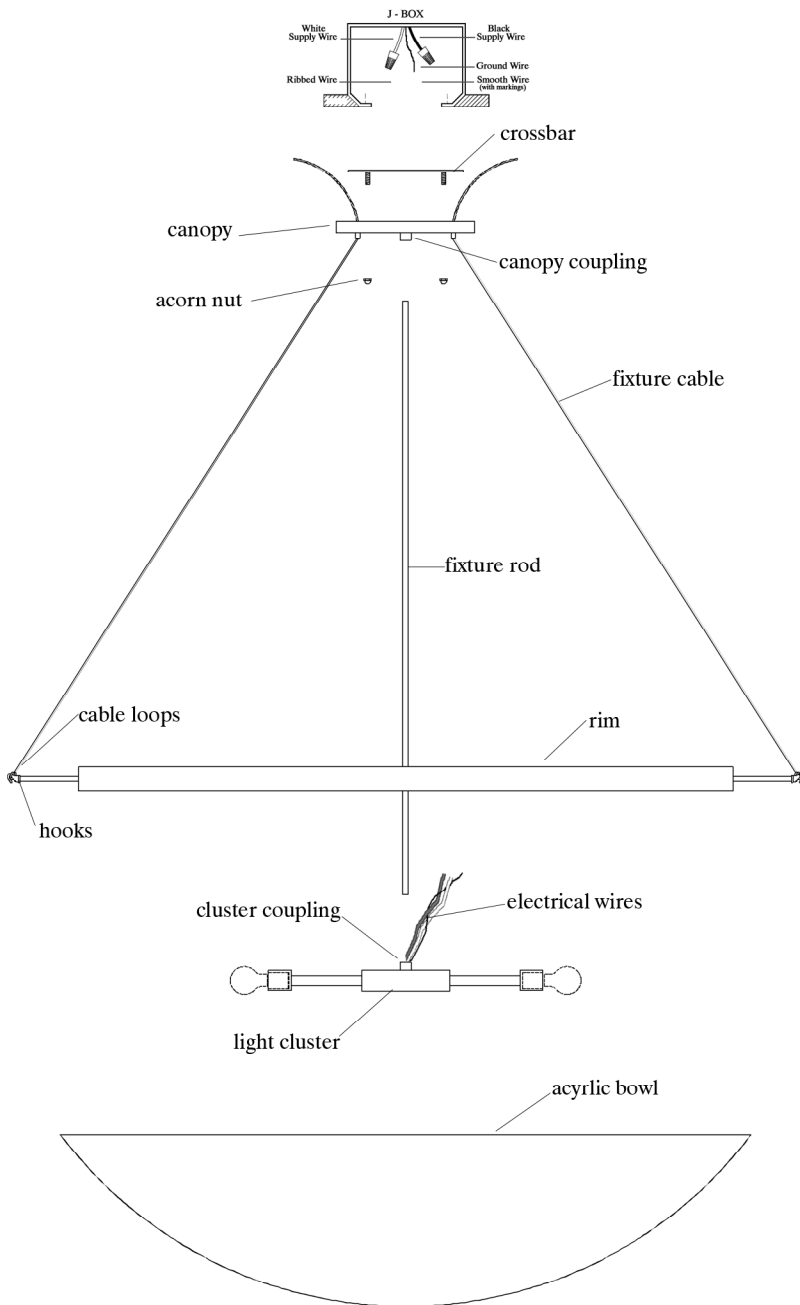

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to j-box using customer supplied screws.
- 2.) Feed electrical wires up through fixture rod and screw fixture rod onto cluster coupling.
- 3.) Insert electrical wires through canopy and screw fixture rod onto canopy coupling.
- 4.) Insert fixture cables through cable grippers. (the length of the cables from the cable grippers to the cable loop should be approximately 53 and 3/4 inches in order to have an overall height of 60)
- 5.) Wire as per local electrical codes.
- 6.) Attach canopy to crossbar using the acorn nuts provided.
- 7.) Attach cable loops to rim hooks, leaving enough space to insert the acrylic bowl.
- 8.) Insert the acrylic bowl into the ring and attach the remaining cable loops to the rim hooks.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com