


# ASSEMBLY INSTRUCTIONS FOR #139985

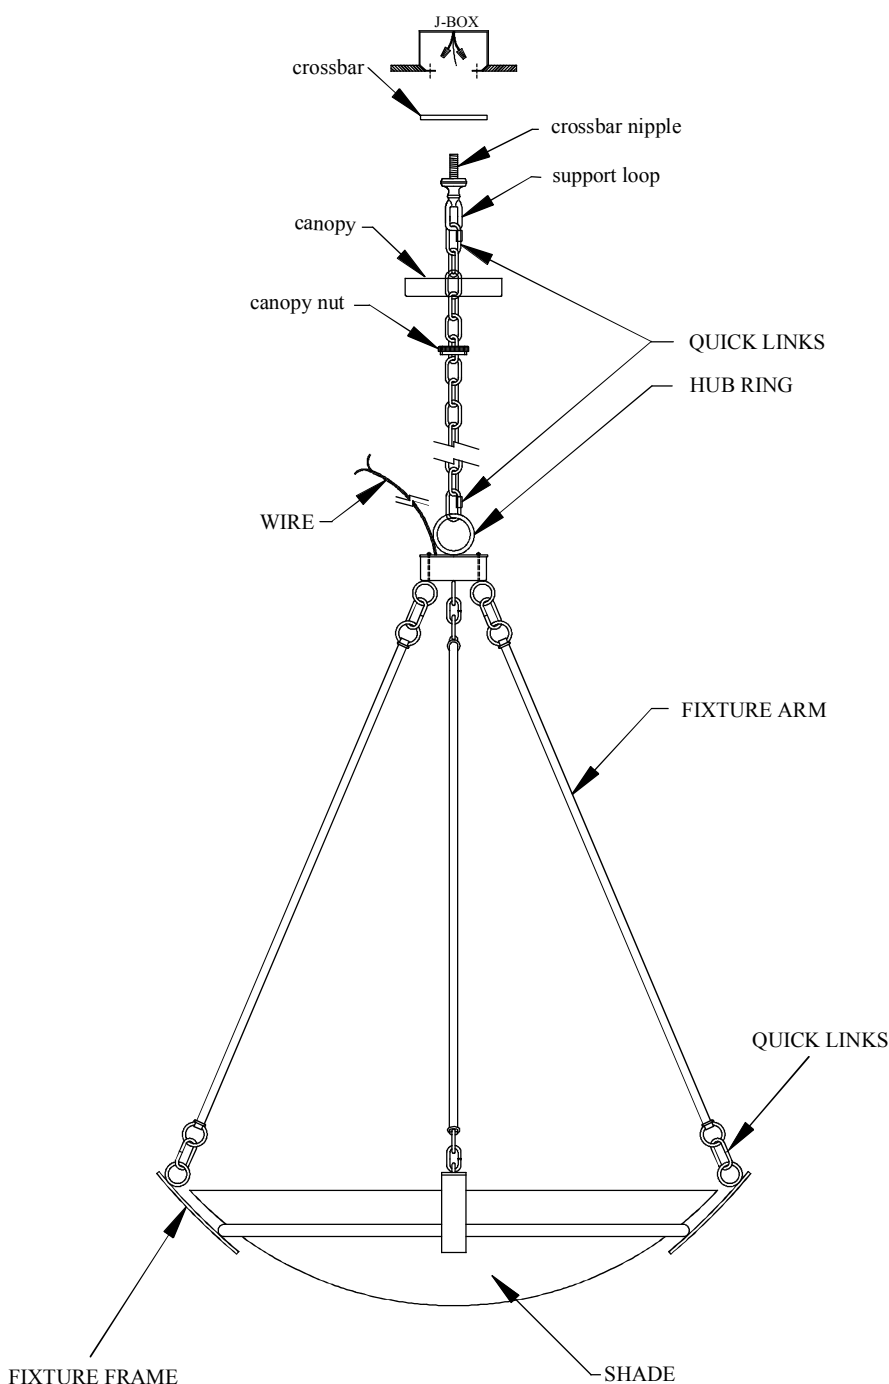


## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR  
CIRCUIT BREAKER BOX BEFORE STARTING  
INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE NOT  
INCLUDED

- 1.) SCREW CROSS BAR ONTO CROSS BAR NIPPLE.
- 2.) CONNECT CHAIN TO SUPPORT LOOP WITH QUICK LINK AND TIGHTEN SECURELY.
- 3.) SLIDE CANOPY THEN CANOPY NUT OVER CHAIN.
- 4.) CONNECT CHAIN TO HUB RING WITH QUICK LINK AND TIGHTEN SECURELY.
- 5.) FEED WIRE THROUGH CHAIN AND SUPPORT LOOP.
- 6.) WHILE SUPPORTING FIXTURE WIRE AS PER LOCAL ELECTRICAL CODES.
- 7.) ATTACH CROSS BAR TO J BOX SECURELY WITH FASTENERS SUPPLIED BY OTHERS.
- 8.) SLIDE CANOPY OVER CHAIN AND SUPPORT LOOP. SCREW CANOPY NUT TO SUPPORT LOOP SECURELY.
- 9.) PLACE SHADE INTO FIXTURE FRAME. ATTACH FRAME ARMS X4 TO FIXTURE FRAME USING QUICK LINK CONNECTORS PROVIDED.

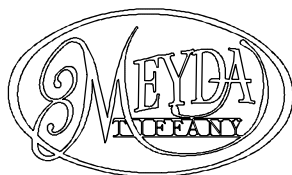

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at [www.meyda.com](http://www.meyda.com)