


ASSEMBLY INSTRUCTIONS FOR #141938

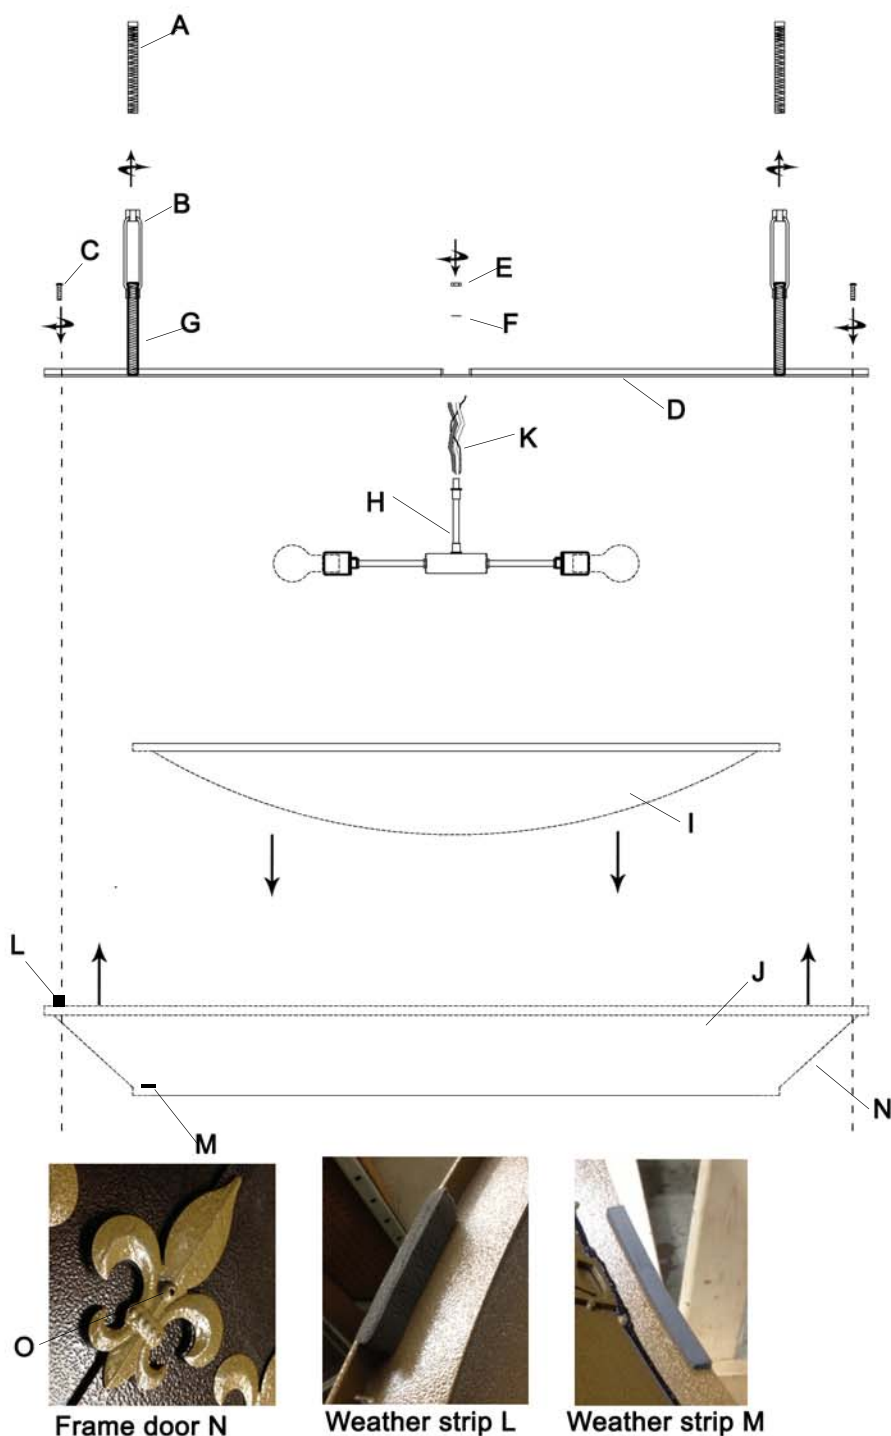

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THIS FIXTURE WEIGHS OVER 50 LBS. NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.

- 1.) Remove cross bar screws (C) from cross bar(D), then cross bar(D) from shade frame (J).
- 2.) Determine location of fixture on ceiling and use cross bar (D) as a template to install customer provided all thread (A).
- 3.) Install all thread (A) to secure location.
- 4.) Feed electrical wires (K) through center of cross bar (D) and attach light cluster (H) to cross bar (D) using washer (F) and nut (E).
- 5.) Place shade frame (J) onto protectively coated saw horse or similar apparatus.
- 6.) Attach weather strip (M) onto bottom ring of shade frame as shown.
- 7.) Carefully place glass shade (I) into shade frame (J) so that it lays on top of weather strip (M).
- 8.) Attach cross bar (D) to shade frame (J) using cross bar screws (C).
- 9.) Attach weather strip (L) to top of shade frame as shown.
- 10.) Remove frame doors (N) from shade frame (J) by unscrewing door screws (O).
- 11.) Put turnbuckles (B) in highest position on threaded pipe (G) and raise cross bar up to customer provided all thread (A).
- 12.) Wire as per local electrical codes.
- 13.) Use the frame door (N) to access the turnbuckles (B) and tighten to customer provided all thread(A), so that weather strip(L) is snug to ceiling.
- 14.) Install light bulbs and re-attach frame doors (N) using door screws (O).



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com