



ASSEMBLY INSTRUCTIONS FOR #142698

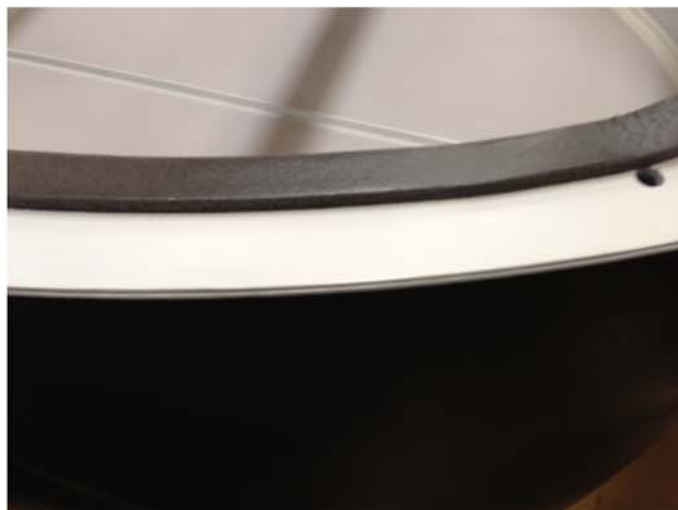

INSTALLING FABRIC DRUM SHADE

- (1) MOUNT CEILING CANOPY & LIGHT CLUSTER TO THE CEILING. WIRE PER LOCAL CODES.
- (2) APPLY FOAM TAPE AS SHOWN IN PHOTO. MOUNT THE DRUM TO THE CEILING USING THE (3) MOUNTING HOLES. ONLY SNUG THE BOLTS TO COMPRESS THE FOAM GASKET SLIGHTLY FOR LIGHT LEAKAGE.
- (3) LOOSEN (6) SET SCREWS AND LET DRUM RELAX SIDE MATERIAL FOR 1 HOUR.
- (4) AFTER YOUR SURE THE SHADE IS NOT TWISTED AND ANY WINKLES ARE STILL PRESENT, FOLLOW THE INSTRUCTIONS BELOW.
- (5) LOCATE THE SUPPORT ROD (D) CLOSEST TO THE WRINKLE IN FABRIC.
- (6) LOOSEN SET SCREW (B)
- (7) USE TWO 9/16" OPEN END WRENCHS BY HOLDING HEX NUT (A) WITH ONE WRENCH AND TURNING HEX NUT (C) CLOCKWISE, THIS WILL LENGTHEN THE .5"Ø SUPPORT ROD (D). CAREFULLY WATCH FOR THE WINKLE TO DISAPPEAR. YOU MAY NEED TO ADJUST MORE THAN ONE SUPPORT ROD (D). DO NOT OVER ADJUST AS YOU MAY STRETCH THE LINEN. WHEN SATISFIED, TIGHTEN SET SCREW (B).
- (8) IF THE WRINKLE PERSISTS, DO NOT FRET. THIS IS SIMPLY DUE TO THE NATURE OF THE MATERIAL AND SHOULD DISSIPATE OVER TIME.

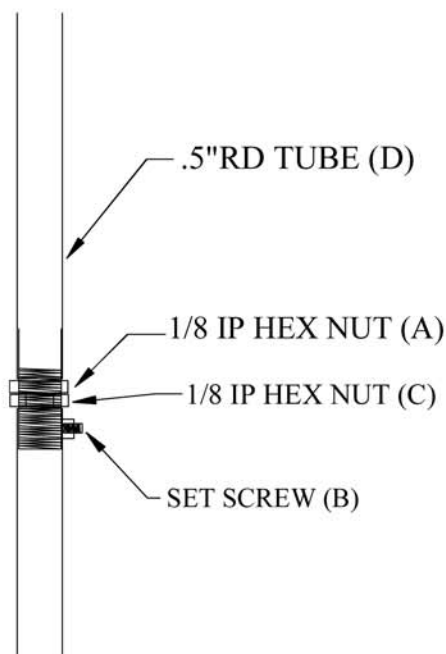

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com