


ASSEMBLY INSTRUCTIONS FOR #143349

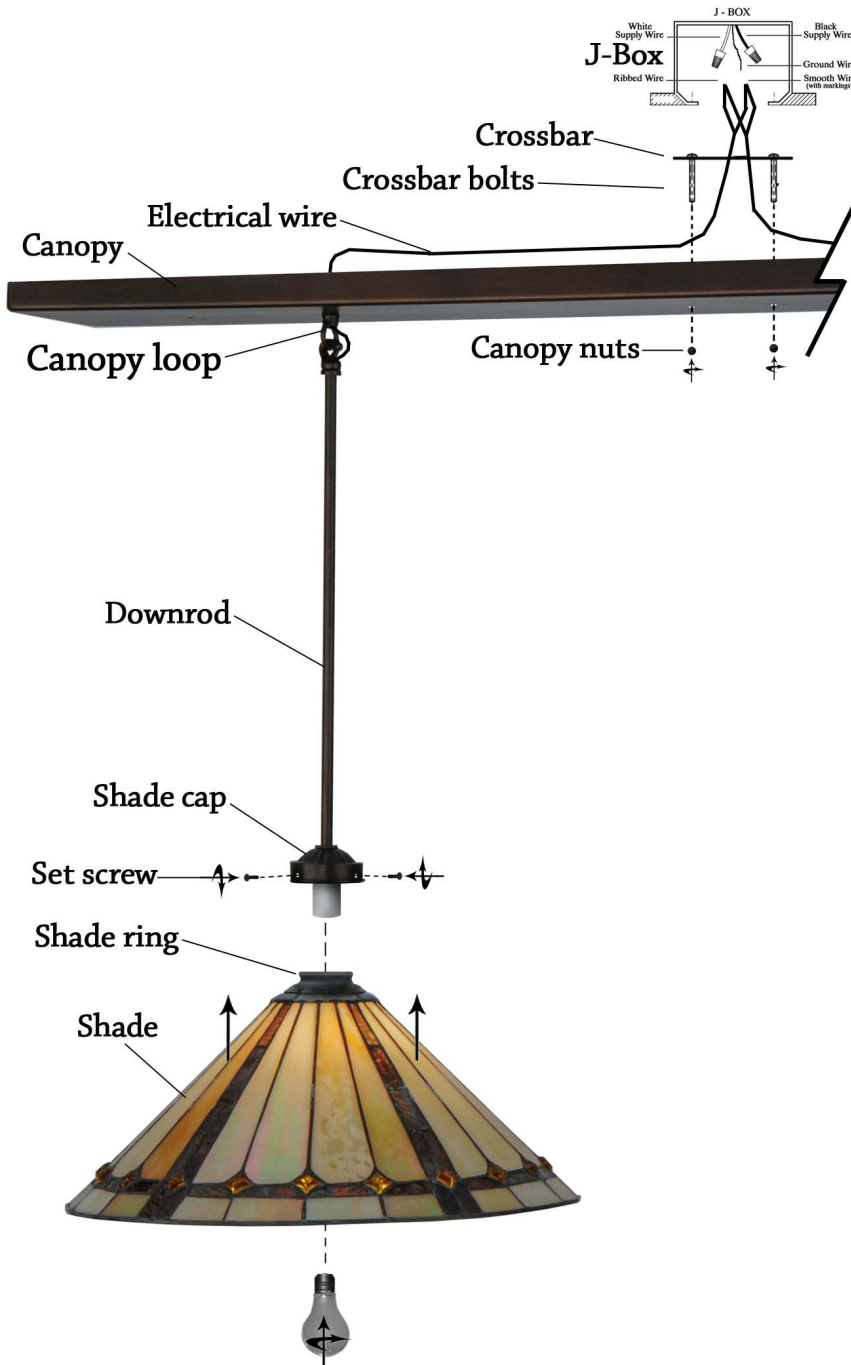


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach Crossbar to J-Box or ceiling. Be sure there is two crossbar bolts pointing down ready to receive canopy.
- 2.) Bring the two arms to the canopy and run the electrical wire through the canopy loops. Hook the downrod onto the canopy loops.
- 3.) Place the shade cap onto the shade so that the shade ring rests within the shade cap. Screw in the (3) set screws into the shade cap, holding shade in place. Repeat for other shade.
- 4.) Raise fixture to ceiling, connect electrical wires as per your local electrical code. Slide canopy up onto the two crossbar bolts, secure canopy flush to ceiling by screwing the two canopy nuts onto the two crossbar bolts.
- 5.) Bulb your fixture, (bulbs provided by others). Power on, enjoy your new fixture!

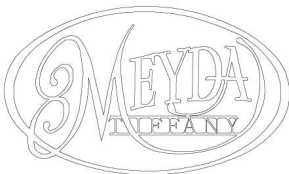

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com