


ASSEMBLY INSTRUCTIONS FOR #143640

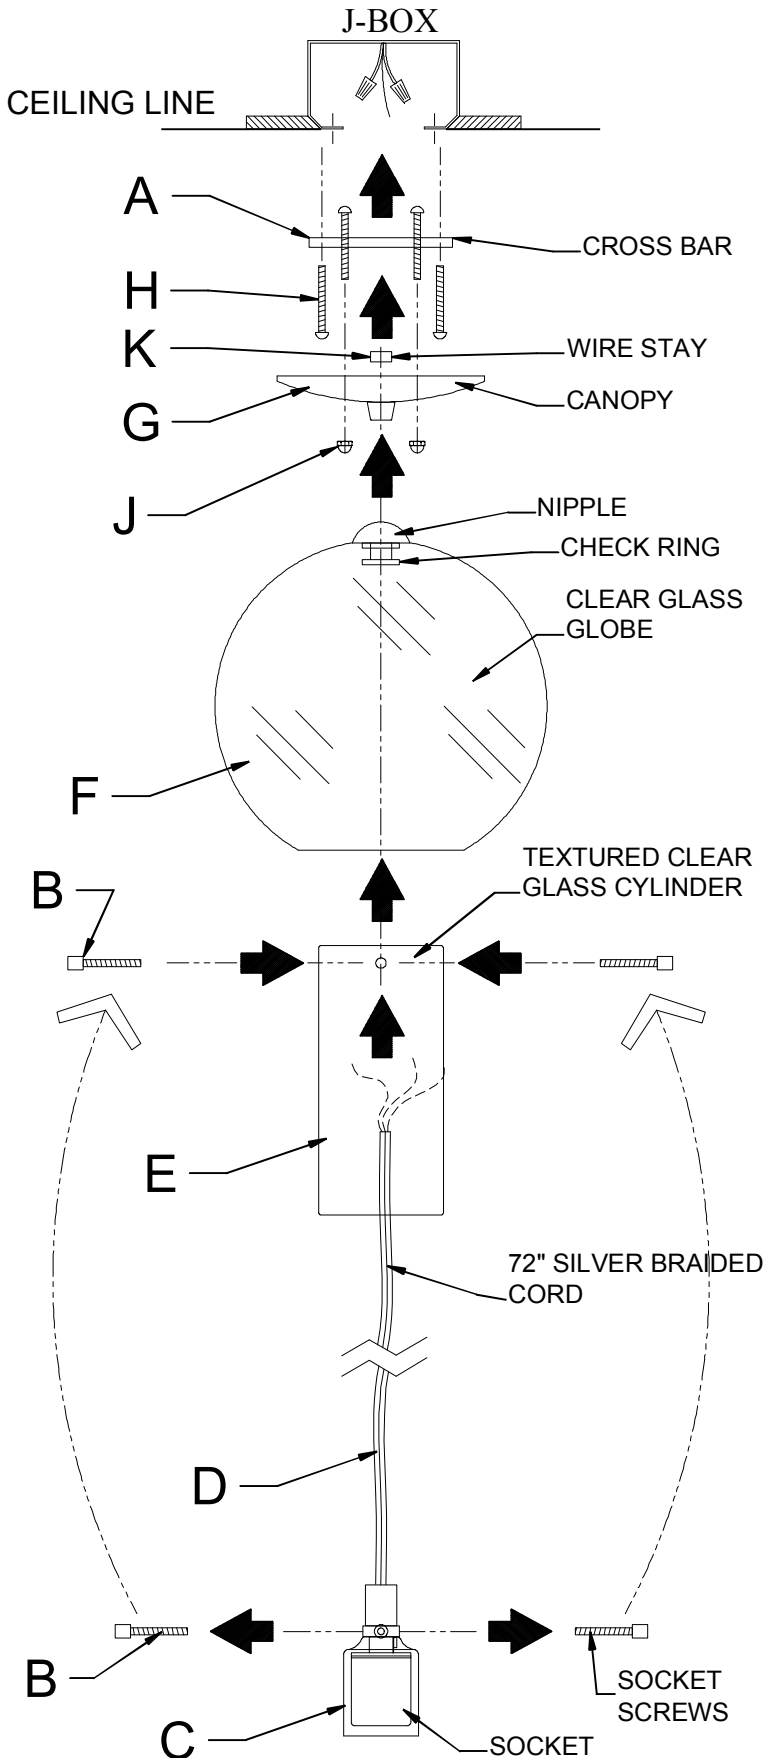

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1) ATTACH CROSS BAR (A) TO SECURE LOCATION WITH FASTENERS (H) PROVIDED BY OTHERS.

2) UN-SCREW SOCKET SCREWS (B) FROM SOCKET (C) THEN THREAD SILVER BRAIDED CORD (D) THROUGH CENTER OF CLEAR GLASS CYLINDER (E).

3) INSERT SOCKET SCREWS (B) INTO OUTSIDE OF GLASS CYLINDER (E) INTO HOLES PROVIDED AND SCREW BACK INTO SOCKET (C) TO SECURE IN PLACE.

4) THREAD SILVER BRAIDED CORD THROUGH CENTER OF NIPPLE AT TOP OF CLEAR GLASS GLOBE (F) TO MAKE TOP OF SOCKET SECURE INTO CHECK RING.

5) THREAD SILVER BRAIDED CORD THROUGH CENTER OF CANOPY (G), ADJUST SILVER BRAIDED CORD TO DESIRED HEIGHT AND MAKE ELECTRICAL CONNECTION AT J BOX.

6) WIRE AS PER LOCAL ELECTRICAL CODES.

7) FASTEN WIRE STAY (K) TO SILVER BRAIDED CORD (D) IN POSITION ABOVE CANOPY.

8) SLIDE CANOPY (G) TO CEILING AND SECURE IN PLACE WITH NUT (J).

9) BULB WATTAGE STICKERS PROVIDED. LOCATE BY OTHERS AT CUSTOMERS DISCRETION.



CUSTOMER PROPOSAL / CUT SHEET

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com

WG 9/20/13