


# ASSEMBLY INSTRUCTIONS FOR #144333

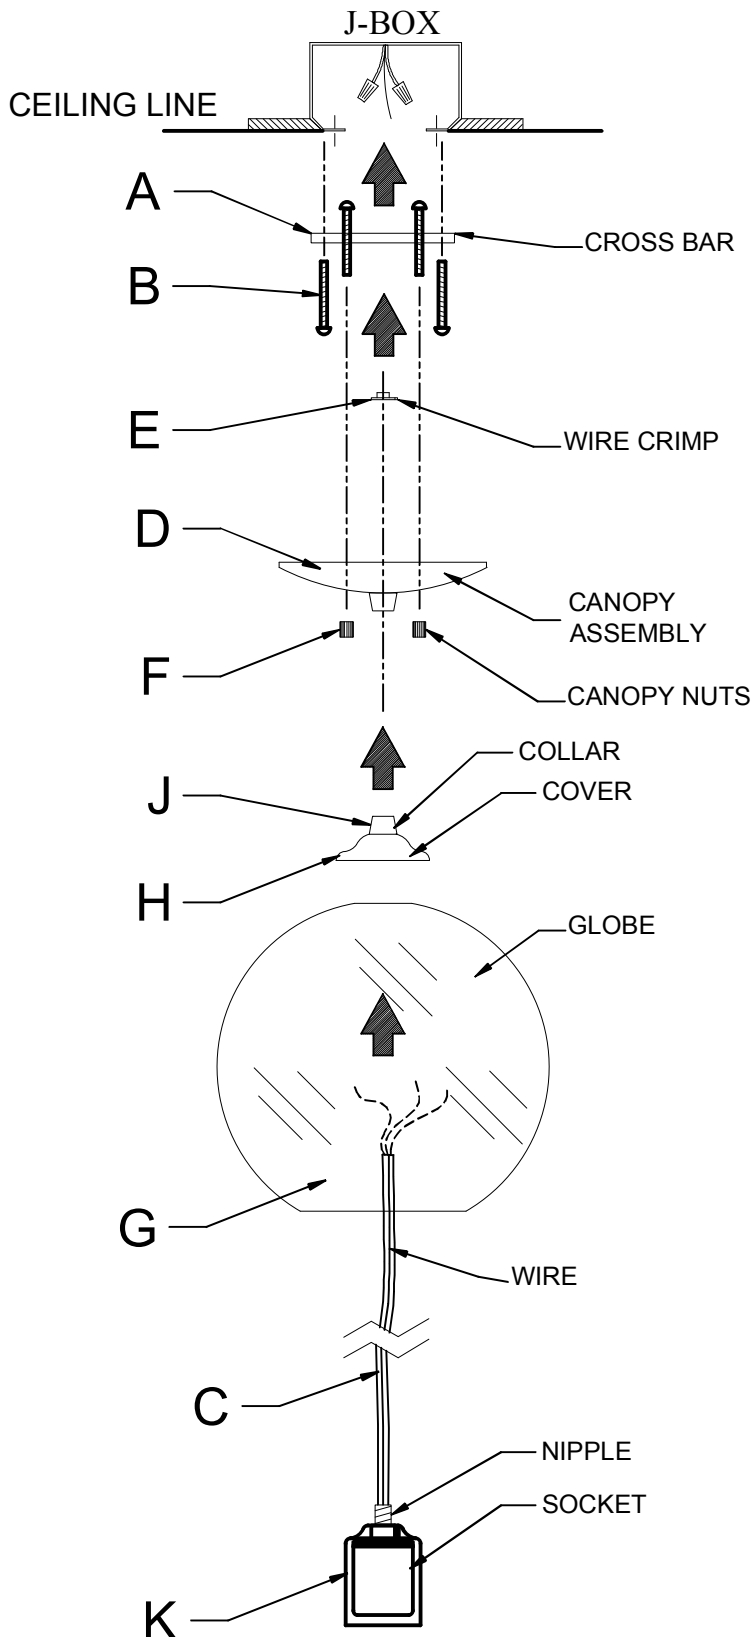

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

**\*\*DO NOT REMOVE PROTECTIVE BUBBLE WRAP FROM GLASS GLOBES UNTIL AFTER INSTALLED\*\***

1) ATTACH CROSS BAR (A) TO "J" BOX WITH FASTENERS (B) PROVIDED BY OTHERS.

2) THREAD WIRE (C) THROUGH GLOBE (G) AND THEN THROUGH COVER (H) AND COLLAR (J).

3) SECURE COVER (H) TO GLOBE (G) WITH COLLAR (J) SCREWED DOWN ONTO NIPPLE FROM SOCKET (K).

4) THREAD WIRE (C) THROUGH CENTER OF CANOPY ASSEMBLY (D) LEAVING ENOUGH LENGTH TO MAKE CONNECTION TO "J" BOX.

5) SECURE WIRE IN PLACE AT CANOPY WITH WIRE CRIMP (E).

6) WIRE AS PER LOCAL ELECTRICAL CODES.

7) PLACE FIXTURE ASSEMBLY TO CEILING AND SECURE IN PLACE WITH CANOPY NUTS (F).



CUSTOMER PROPOSAL / CUT SHEET

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at [www.meyda.com](http://www.meyda.com)

WG 12/9/13