


ASSEMBLY INSTRUCTIONS FOR #144631

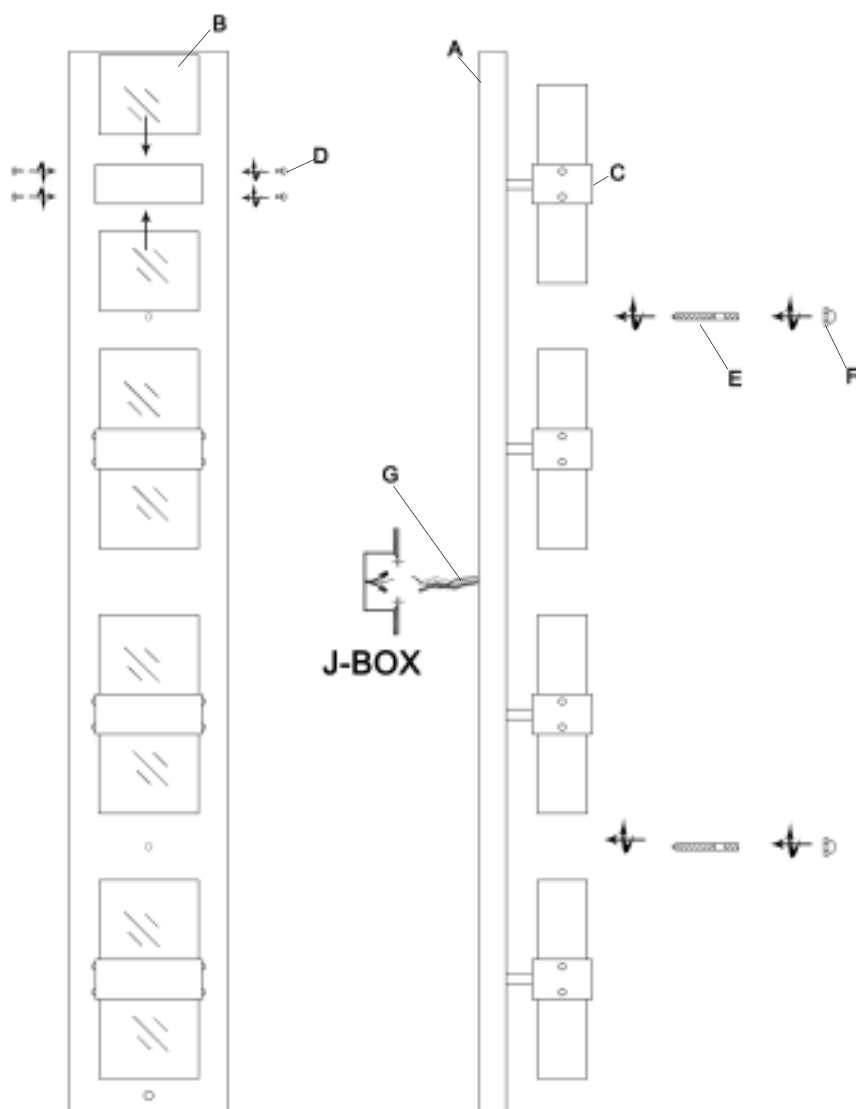

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THE GLASS SHADES ARE VERY BRITTLE AND REQUIRE GREAT CAUTION DURING INSTALLATION

- 1.) Determine placement of back plate (A) on wall and mark where lag bolts (E) will be attached.
- 2.) Screw lag bolts (E) into wall where you have previously marked.
- 3.) Wire electrical wires (G) to j-box as per local electrical codes.
- 4.) Place back plate (A) onto lag bolts (E) and secure with acorn nuts (F).
- 5.) Install light bulbs using protective wrapping. Do not touch G9 bulbs with bare hands.
- 6.) Place glass (B) into glass holder (C) and secure with glass screws (D).
- 7.) Repeat step 6 for remaining glass shades.

NOTE: Each piece of glass has been custom made to fit its respective glass holder. Both the glass holder and the glass have been labeled.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com