


ASSEMBLY INSTRUCTIONS FOR #144950

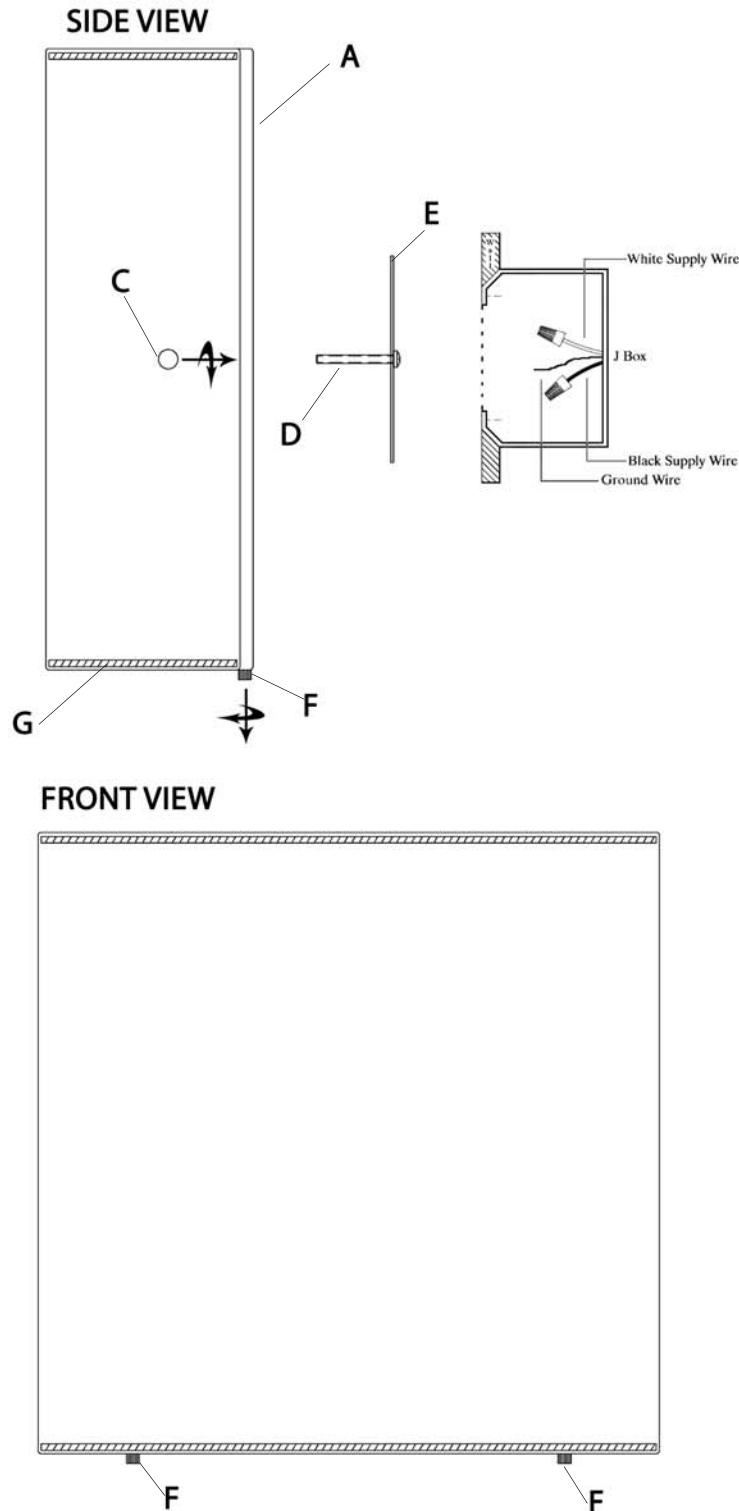

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Unscrew shade knobs (F) and remove bottom diffuser (G).
- 2.) Attach cross bar (E) to j-box using customer provided screws.
- 3.) Wire as per local electrical codes.
- 4.) Attach backplate (A) to cross bar (E) by screwing ball nuts (C) onto screws (D).
- 5.) Install light bulbs.
- 6.) Reattach bottom diffuser and secure with shade knobs (F).



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com