


ASSEMBLY INSTRUCTIONS FOR #144966/144970

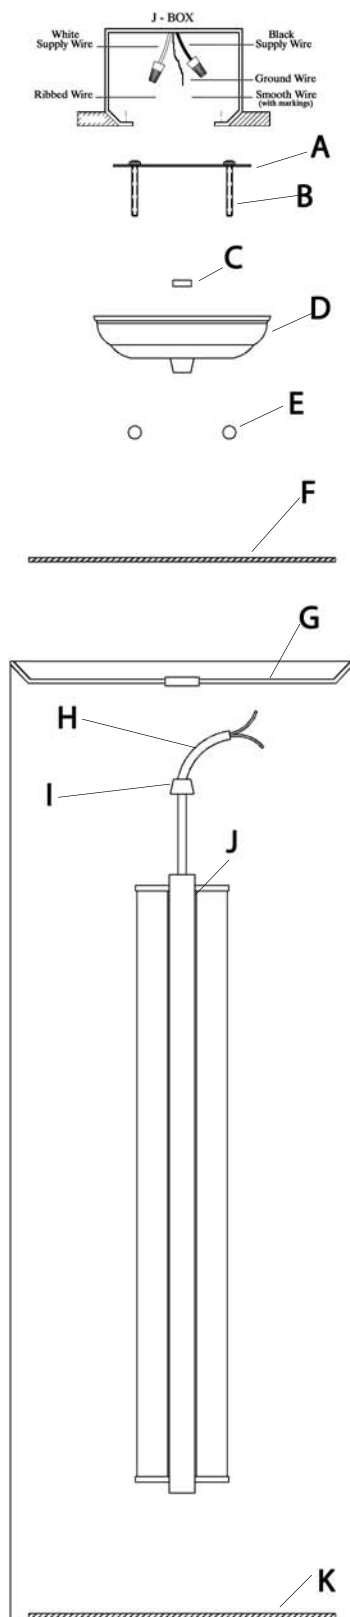

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Remove tapered coupling (I) from electrical wire (H) and set aside.
- 2.) Feed electrical wire (H) through the center of shade spider (G) and top diffuser (F).
- 3.) Place tapered coupling (I) back onto electrical cord (H) and tighten to nipple on top of light cluster (J).
- 4.) Attach cross bar (A) to j-box using customer provided screws.
- 5.) Feed electrical wire (H) through canopy (D), determine desired overall height, and crimp strain relief (C) to electrical wire (H) above canopy (D).
- 6.) Wire as per local electrical codes.
- 7.) Secure canopy (D) to cross bar (A) by screwing ball nuts (E) onto screws (B).
- 8.) Attach bottom diffuser (K).



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com