
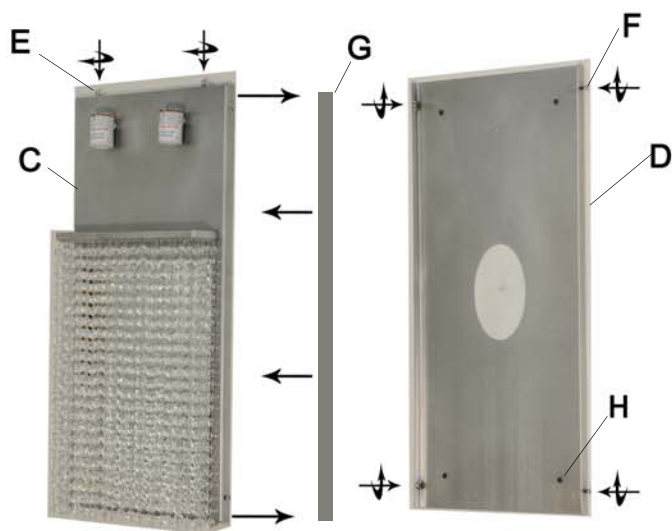


ASSEMBLY INSTRUCTIONS FOR #145914

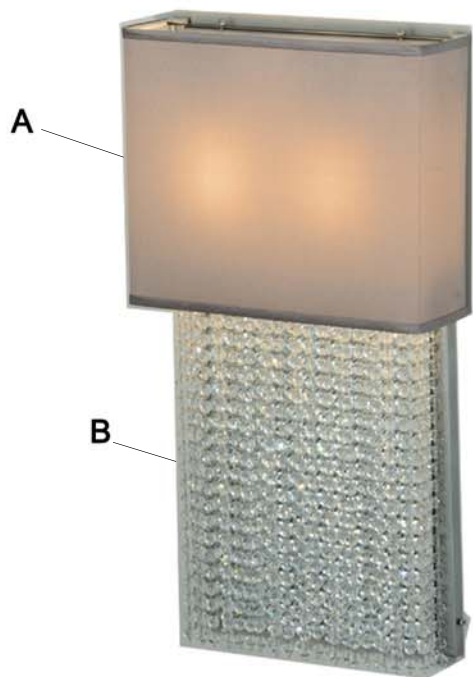

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Determine position of mounting plate (D) on wall.
- 2.) Attach mounting plate (D) to a secure location using customer provided screws (H).
- 3.) Place insulation (G) into back plate (C) and pull electrical wires through slit in insulation (G).
- 4.) Wire as per local electrical codes.
- 5.) Place back plate (C) onto mounting plate (D) and secure with back plate screws (F).
- 6.) Attach crystal strands (B) onto back plate (C) as shown and remove any excess wires at the bottom of crystal strands (B).
- 7.) Place fabric shade (A) onto back plate (D) and secure with shade nuts (E).



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com