


ASSEMBLY INSTRUCTIONS FOR #147753


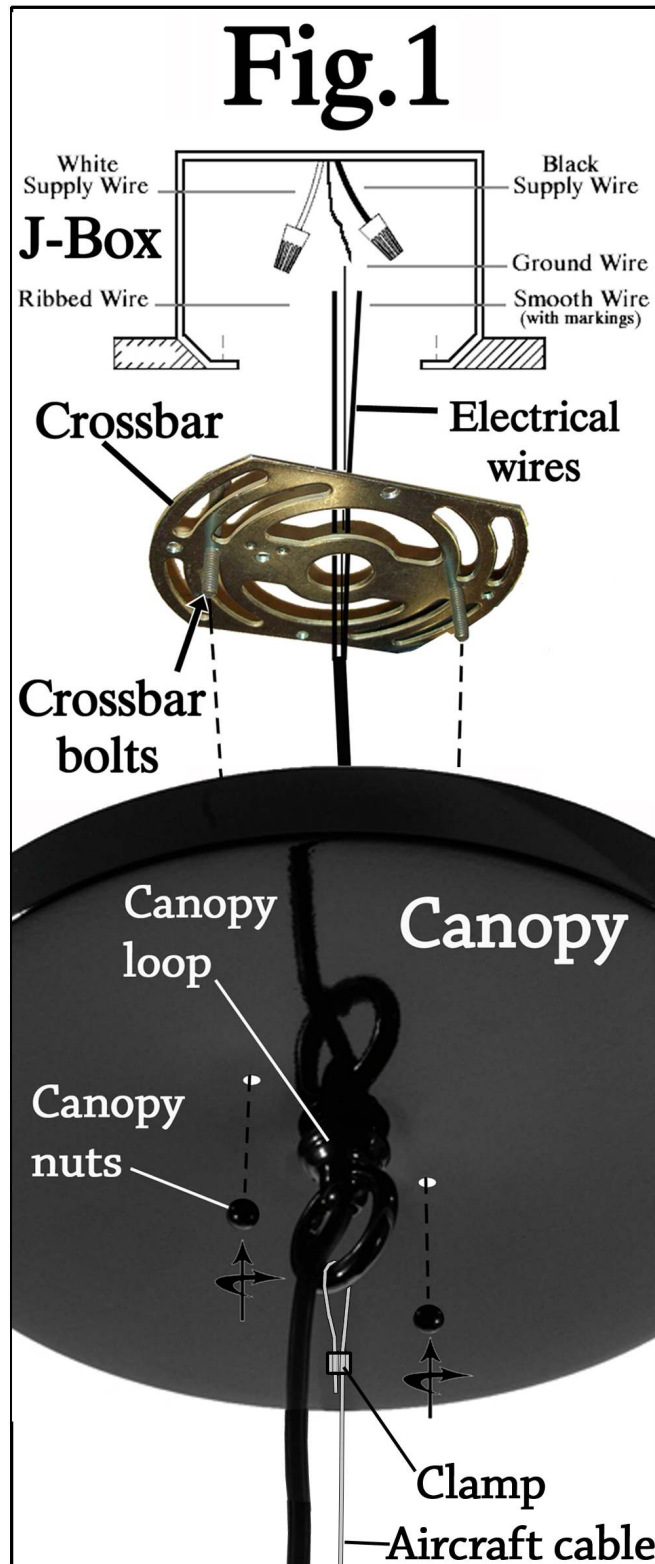


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to ceiling or J-Box. Be sure there is two bolts pointing down ready to receive canopy. (Fig.1)
- 2.) Determine desired height, run your aircraft cable through the shade & canopy loops. Loop the cable onto itself and clamp together tight. (Fig.1&2) Run electrical cable up through the canopy loop and to power source. Connect all electrical wires as per your local codes. (Fig.1)
- 3.) Slide canopy up onto the two crossbar bolts. Secure canopy flush to ceiling by screwing the two canopy nuts onto the two crossbar bolts. (Fig.1)
- 4.) Bulb your fixture, (bulbs provided by others), power on, enjoy your new fixture!

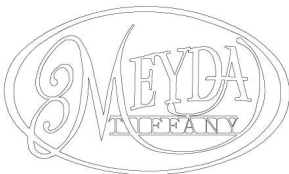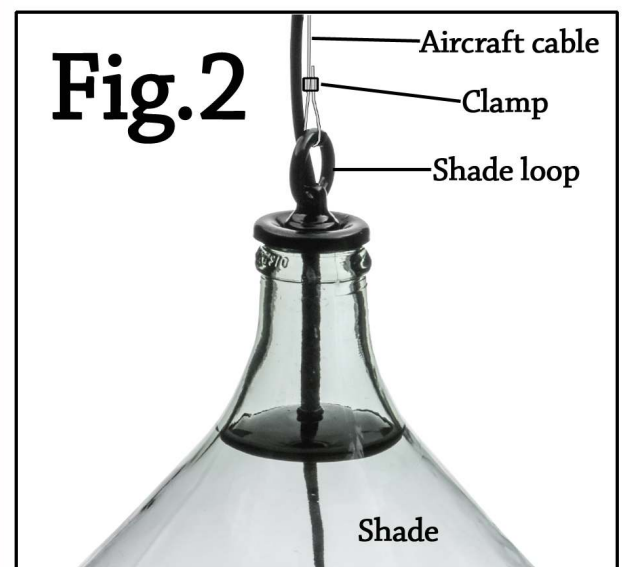

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com