


ASSEMBLY INSTRUCTIONS FOR #14860 SG342-20-1-REY19-1

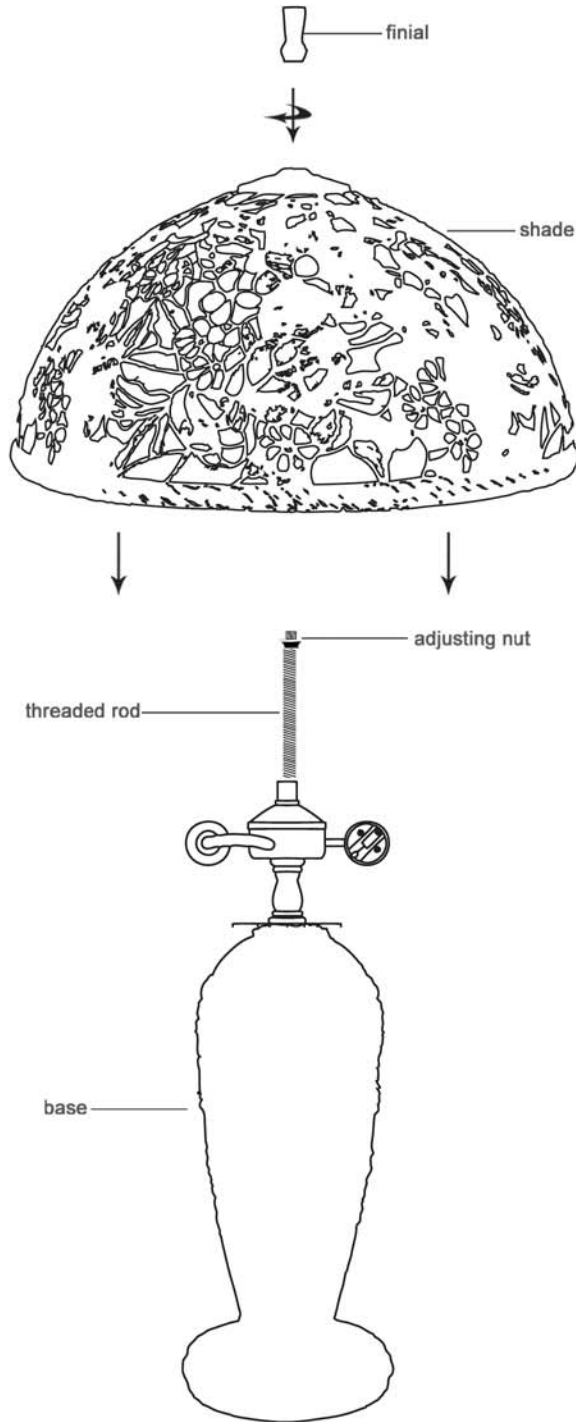

IMPORTANT
 CAREFULLY UNPACK AND IDENTIFY ALL
 PARTS BEFORE ASSEMBLY. BULBS ARE
 NOT INCLUDED

- 1. Screw bulbs(3) into sockets.**
- 2. Place shade onto base threaded rod and seat on to adjusting nut.**
- 3. Screw finial onto threaded rod and tighten.**



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com