


ASSEMBLY INSTRUCTIONS FOR #150776

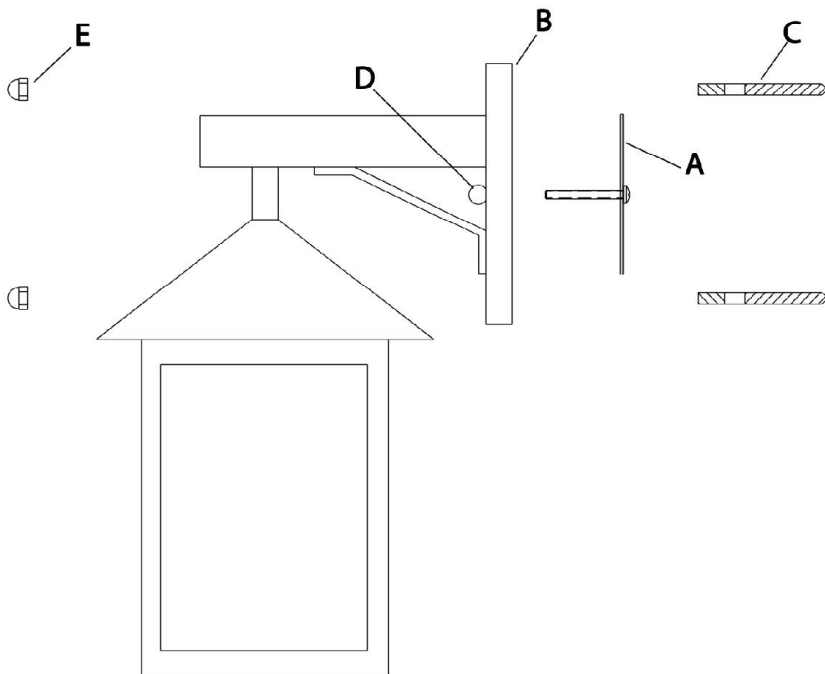

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

This installation requires drilling holes through the back plate in line with the studs on wall

- 1.) Attach cross bar (A) to j-box using customer provided screws.
- 2.) Locate studs in wall, they are using 16 or 12 inches apart.
- 3.) Drill 4 holes in back plate (B) to line up with the wall studs, 2 holes on each side of the back plate.
- 4.) Drill 4 matching starter holes into the wall studs.
- 5.) Screw the 4 hanger bolts (C) into the 4 holes in the wall.
- 6.) Wire as per local electrical codes.
- 7.) Place back plate (B) onto hanger bolts.
- 8.) Secure back plate (B) to crossbar (A) with ball nut (D).
- 9.) Secure 4 acorn nuts (E) onto hanger bolts (C).



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com