

ASSEMBLY INSTRUCTIONS FOR MILK BOTTLE PENDANT

ITEM # 151225

FIG. A

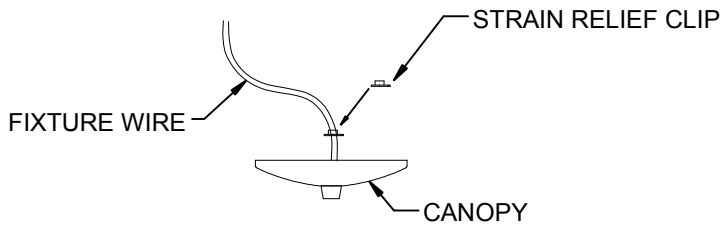


FIG. B


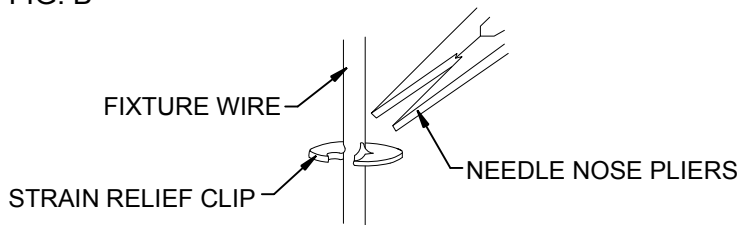


FIG. C

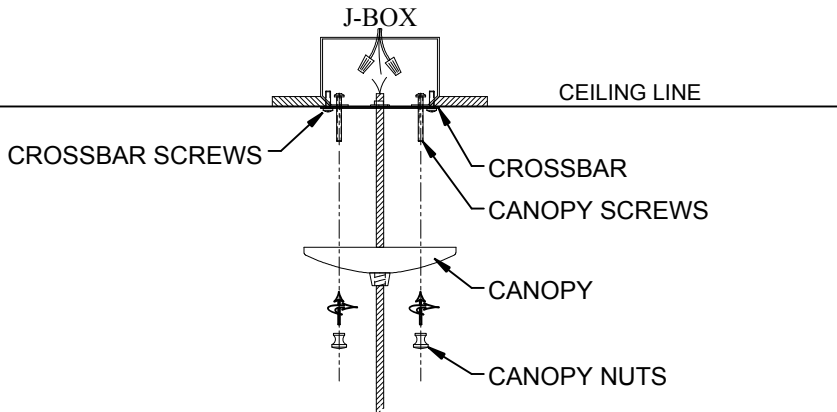

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION


CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1) THREAD FIXTURE WIRE THROUGH CANOPY, DETERMINE THE OVERALL LENGTH OF FIXTURE FROM CEILING TO THE BOTTOM OF SHADE.

2) ADD 1" TO PRE-DETERMINED FIXTURE WIRE LENGTH AND PLACE STRAIN RELIEF CLIP ONTO WIRE AT THIS LOCATION. FIG. A

3) USING NEEDLE NOSE PLIERS, CRIMP STRAIN RELIEF CLIP ONTO FIXTURE WIRE. FIG. B

4) SCREW CROSSBAR ONTO J-BOX, MAKE SURE CANOPY SCREWS PROTRUDE DOWNWARD FROM CROSSBAR SO THAT WHEN CANOPY IS PLACED TO CEILING, 1/4" OF THREAD IS EXPOSED FROM CANOPY. WIRE AS PER LOCAL ELECTRIC CODE. SCREW CANOPY NUTS ONTO CANOPY SCREWS AND TIGHTEN. FIG. C

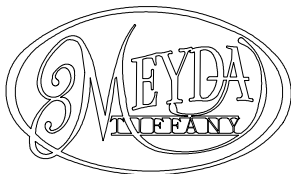

"A Commitment to Excellence in Lighting and Service"
 CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009
 MONDAY - FRIDAY 8:00a.m - 6:00p.m ET
 visit us on the web at www.meyda.com