


ASSEMBLY INSTRUCTIONS FOR #151942

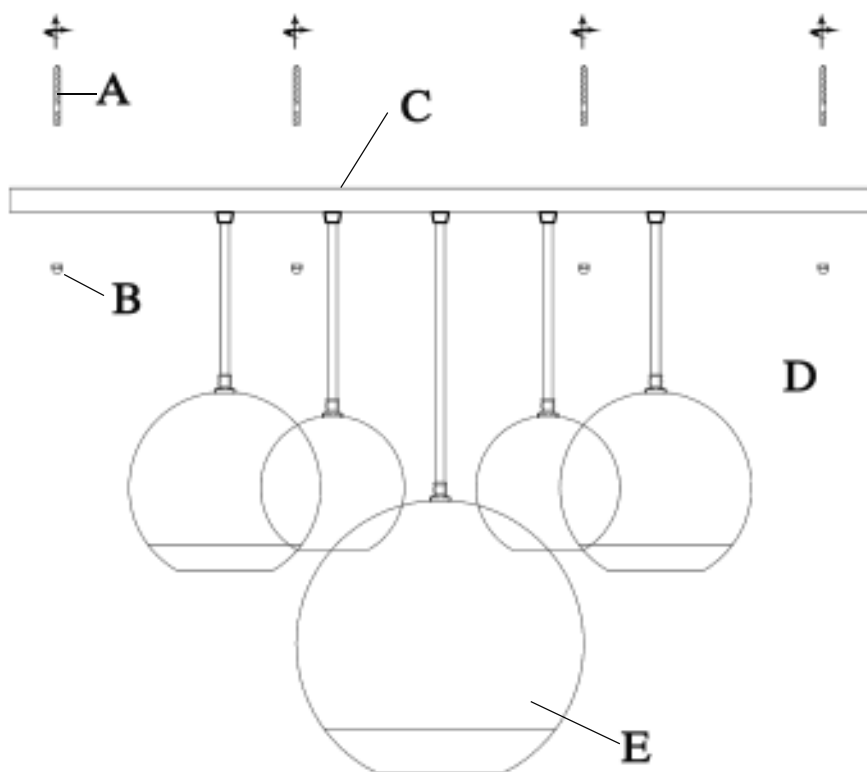

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

Do NOT remove protective bubble wrap from glass globes(E) until after installed

- 1.) Use canopy (C) as a template to drill starter holes for hanger bolts(A).
- 2.) Mount all hanger bolts(A) to a secure location.
- 3.) Feed electrical cords(D) through canopy(C) and determine desired overall height of each individual glass globe(E).
- 4.) Crimp metal strain reliefs to electrical cords(D) above canopy(C).
- 5.) Raise up canopy (C) and wire as per local electrical codes.
- 6.) Secure canopy(C) to hanger bolts(A) using acorn nuts(B).
- 7.) Remove protective bubble wrap from glass globes(E).



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com