


# ASSEMBLY INSTRUCTIONS FOR #151952

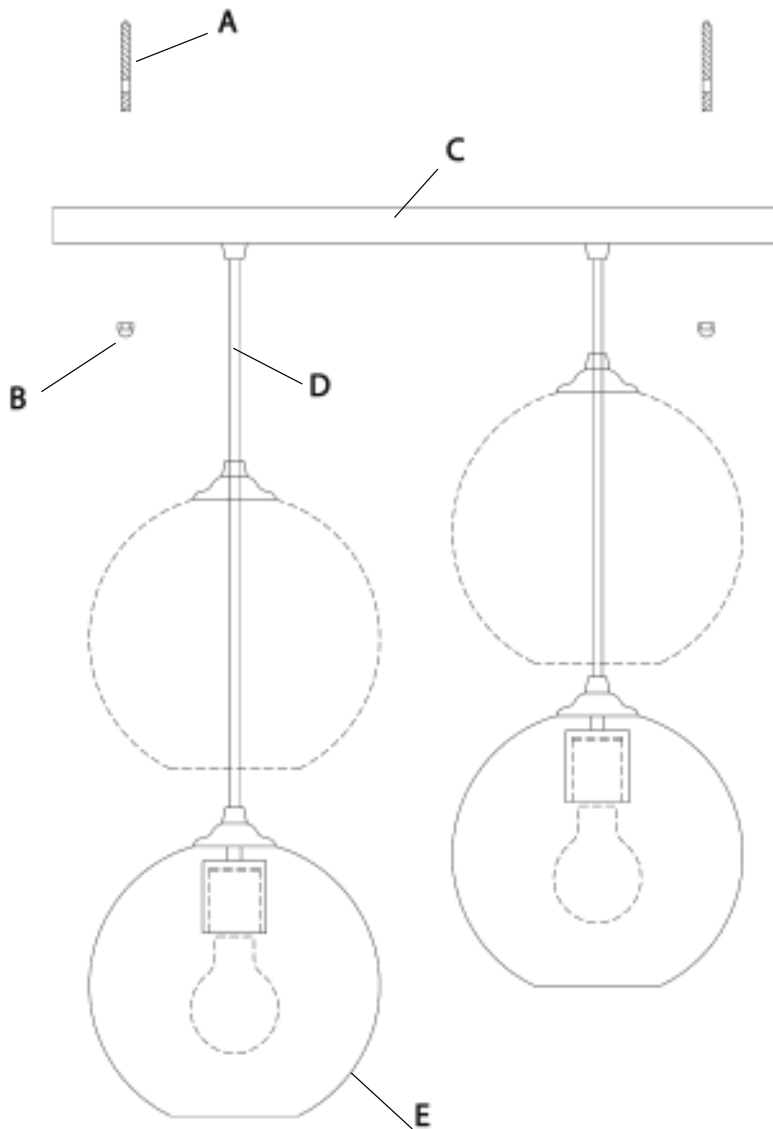

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

**\*Do NOT remove protective bubble wrap from glass globes(E) until after installed\***

- 1.) Use canopy (C) as a template to drill starter holes for hanger bolts(A).
- 2.) Mount all hanger bolts(A) to a secure location.
- 3.) Feed electrical cords(D) through canopy(C) and determine desired overall height of each individual glass globe(E).
- 4.) Crimp metal strain reliefs to electrical cords(D) above canopy(C).
- 5.) Raise up canopy (C) and wire as per local electrical codes.
- 6.) Secure canopy(C) to hanger bolts(A) using acorn nuts(B).
- 7.) Remove protective bubble wrap from glass globes(E).



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)