

UNPACKING INSTRUCTIONS FOR # 154401



CAREFULLY UNPACK AND IDENTIFY ALL PARTS
BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.REMOVE LID AND THEN ANY FREE BAGS OF PEANUTS FIG.1,FIG2.
- 2.REMOVE FOAM PADDED BRACES SEEN IN FIG.2.(1,2,&3)
- 3.YOU MAY CUT A WINDOW INTO THE SIDE OF THE BOX TO REMOVE ANY FREE BAGS OF PEANUTS FIG.3
- 4.YOU MAY REMOVE THE LARGE BAG WITH PEANUTS AND CANOPY FROM THE BOX AT THIS TIME, IF YOU HAVE A PLACE TO HANG IT. HANG IT BY THE CANOPY. YOU WILL NOW REMOVE THE LARGE BAG OF FREE FLOATING PEANUTS, BEING CAREFULL TO CUT THE TAPE THAT HOLDS THE BAG CLOSED.
- 5.YOU ARE LEFT WITH A BALL OF PACKING MATERIAL, CAREFULLY CUT THE TAPE THAT HOLDS BUBBLE WRAP TOGETHER. FIG.4
- 6.REMOVE THE NEXT BAG AGAIN BEING CAREFULL WHEN CUTTING TAPE THAT HOLDS BAG TOGETHER. WITH THE BAG YOU WILL HAVE BAGS OF STYROFOAM THAT WILL FALL AWAY AND WITH THE BAG.
7. LIKE A SURGEON YOU WILL CUT THE BAGS AWAY FROM EACH OTHER BEING CAREFULL WHEN REMOVING THEM. CUTTING ONLY THE TAPE YOU WILL BE ABLE TO SAVE YOURSELF A MESS AND BE SURE TO NOT CUT THE LIGHT CLUSTER. SEE FIG.5
- 8.REMOVE FINAL PIECES FROM IN BETWEEN NEON LIGHT TUBES CAREFULLY.

2ND AVE.™



LIGHTING

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-843-1602

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.2ndave.com

ASSEMBLY INSTRUCTIONS FOR #154401

FIG.1

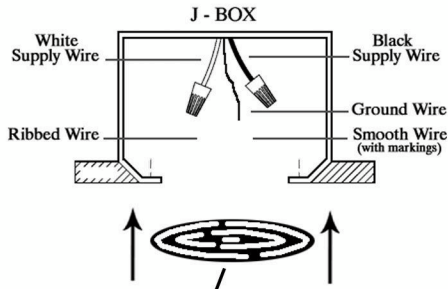


FIG.2

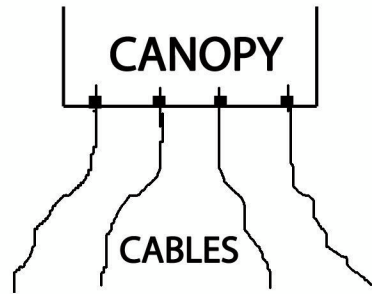


FIG.3


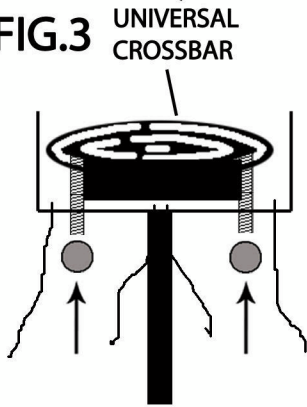


FIG.4

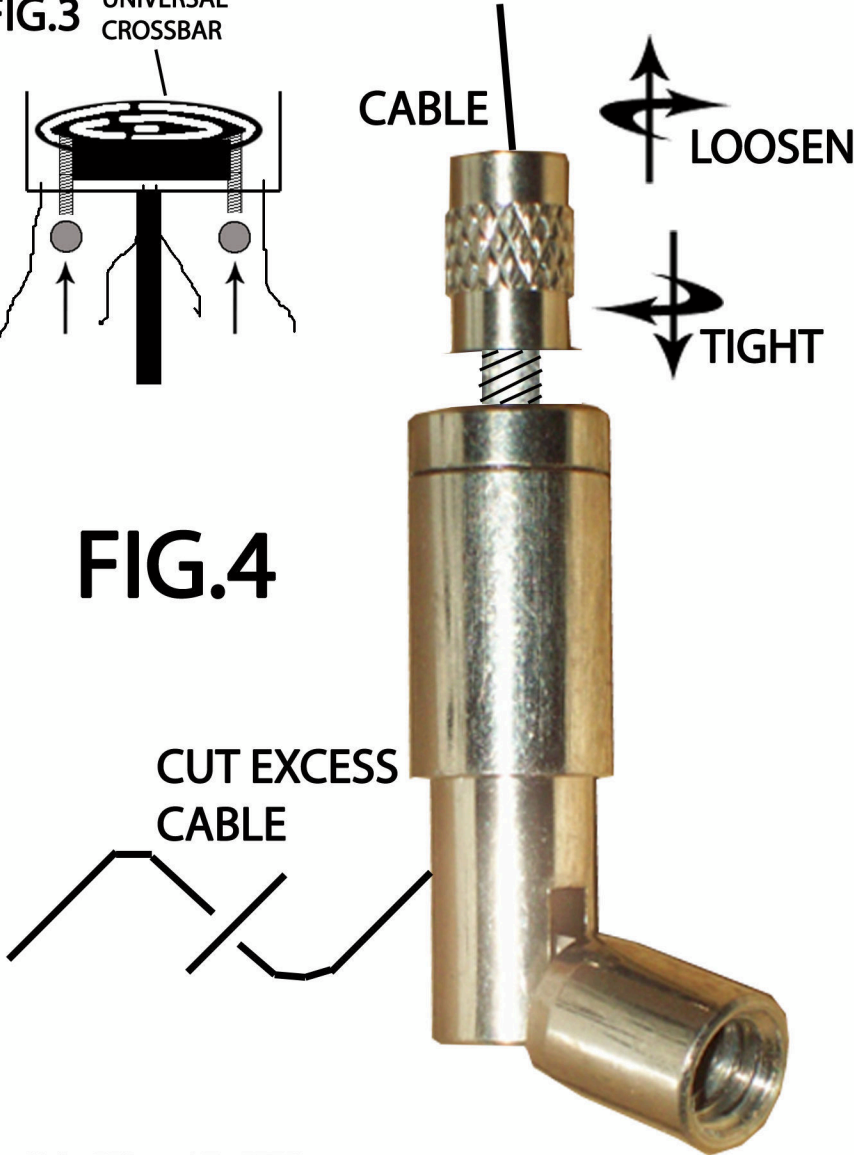

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. ATTACH UNIVERSAL CROSSBAR TO JBOX SEE FIG.1.

2. RUN AIRCRAFT CABLES (4) THROUGH CANOPY SO THAT THE CRIMPED END IS INSIDE THE CANOPY. SEE FIG.2

3. BRING LIGHT CLUSTER TO THE CEILING AND CONNECT WIRES ACCORDING TO LOCAL CODES.

4. RAISE CANOPY TO CEILING AND SCREW THE NUTS INTO PLACE ONTO THE SCREWS ATTACHED TO THE UNIVERSAL CROSS BAR. SEE FIG.3

5. RAISE DRUM SHADE TO THE END OF THE CABLES, INSERT CABLES INTO CABLE GRIPPER. TO DO SO LOOSEN THE END WITH COARSE GRIP, YOU DO NOT NEED TO TAKE IT ALL THE WAY OFF. INSERT CABLE INTO THAT END, IT WILL RUN ITS NATURAL PATH AND COME OUT JUST BEFORE THE JOINT. WHEN YOU HAVE SHADE AT DESIRED LENGTH TIGHTEN THE COARSE END THAT YOU LOOSENED. YOU MAY HAVE TO ADJUST EACH ONE TO LEVEL SHADE OUT. WHEN YOU ARE SURE OF THE LENGTH NEEDED YOU MAY CUT EXCESS CABLE. SEE FIG.4

2ND AVE.™



LIGHTING

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-843-1602

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.2ndave.com