


ASSEMBLY INSTRUCTIONS FOR # 155020

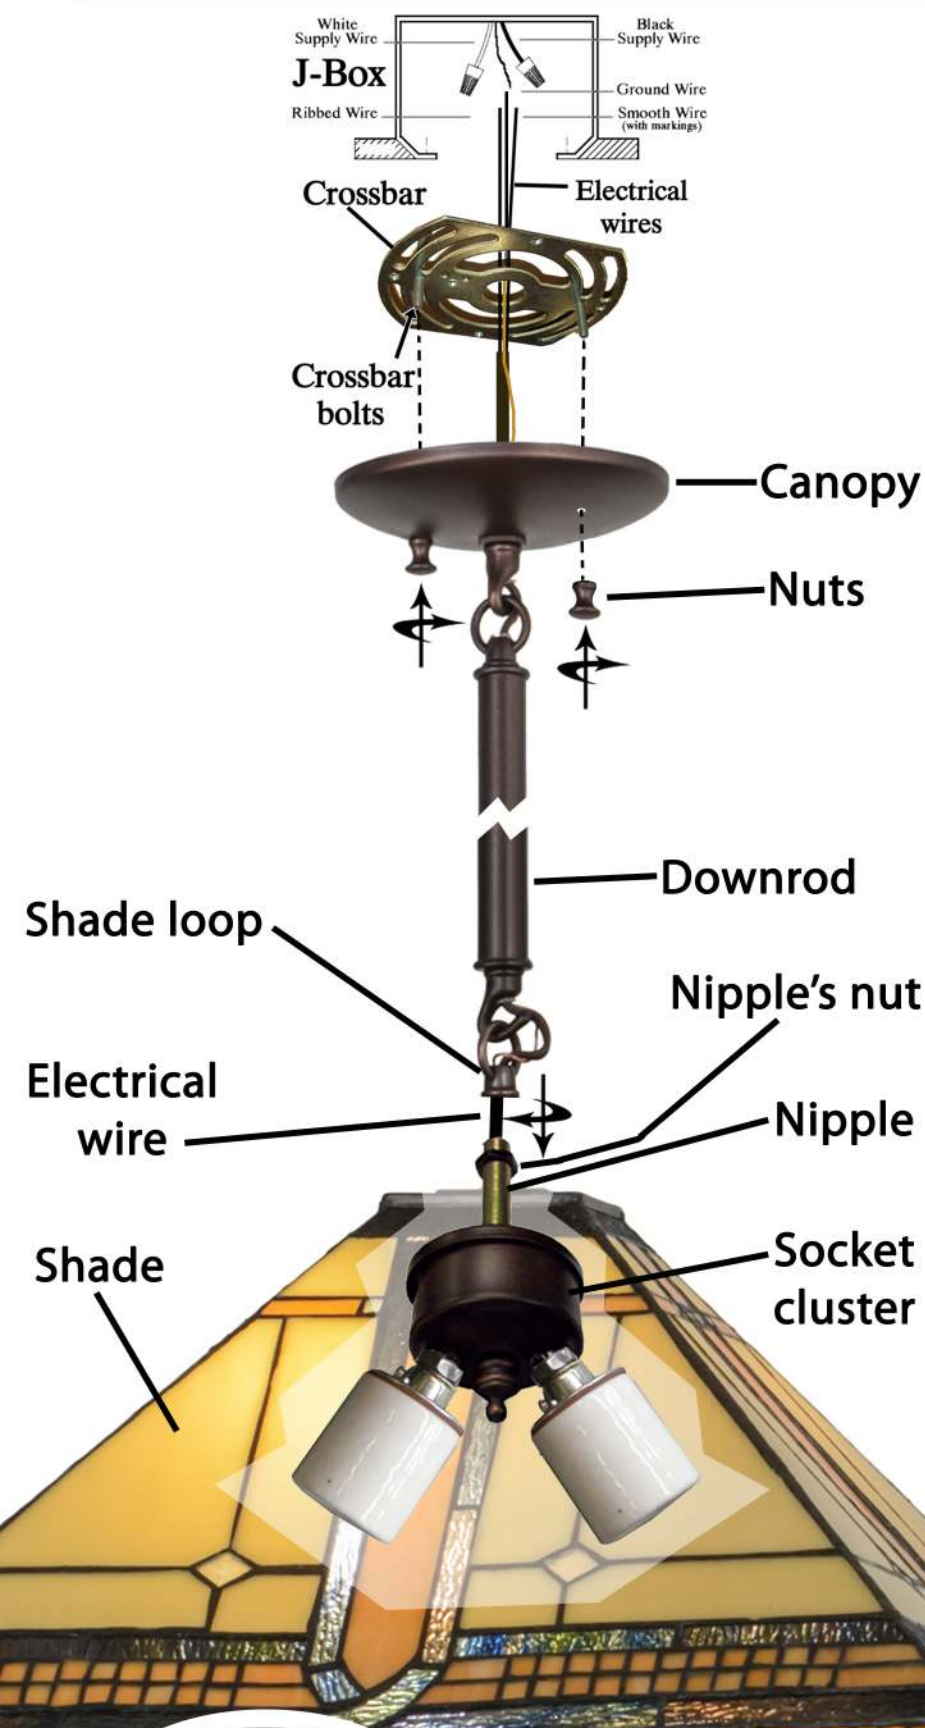

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach your crossbar to your J-Box or ceiling. Be sure there is two bolts pointing down from crossbar ready to receive canopy and nuts.
- 2.) Assemble your shade: Run your electrical wire through the shade. Your socket cluster will have a nipple to insert through the shade as well. Adjust the nipple's nut so that the shade loop has enough to screw onto. Screw the shade loop onto the nipple.
- 3.) Run your electrical wires up the length of the downrod and through the canopy.
- 4.) Hook your downrod onto the shade loop and hook the canopy onto the downrod.
- 5.) Bring entire fixture to the J-Box and connect all electrical wires as per your local codes. You may be able to screw your canopy nuts on just enough to make your wire connections. Once connected, screw your canopy nuts on all the way so that canopy is flush with ceiling.
- 6.) Bulb your fixture, power on, enjoy!
- 7.) Have a Meyda Fine Day!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com