

# ASSEMBLY INSTRUCTIONS FOR ACETYLENE TANK CAP PENDANT

## ITEM # 155120

FIG. A

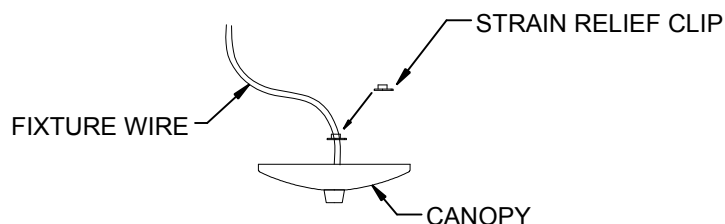


FIG. B


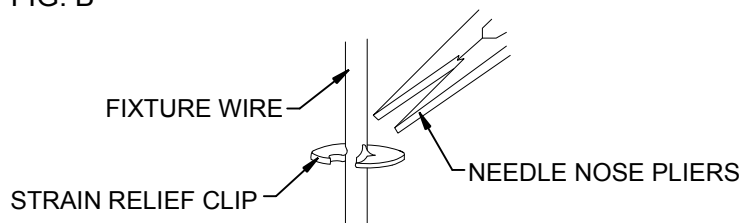


FIG. C

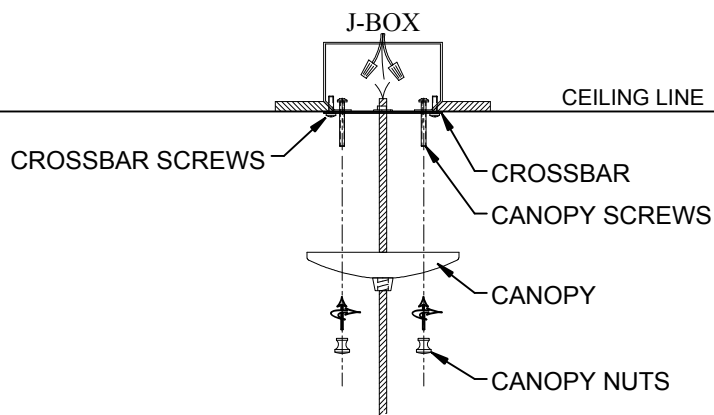

### IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR  
CIRCUIT BREAKER BOX BEFORE STARTING  
INSTALLATION


CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE NOT  
INCLUDED

1) THREAD FIXTURE WIRE THROUGH  
CANOPY, DETERMINE THE OVERALL  
LENGTH OF FIXTURE FROM CEILING TO  
THE BOTTOM OF SHADE.

2) ADD 1" TO PRE-DETERMINED FIXTURE  
WIRE LENGTH AND PLACE STRAIN  
RELIEF CLIP ONTO WIRE AT THIS  
LOCATION. FIG. A

3) USING NEEDLE NOSE PLIERS, CRIMP  
STRAIN RELIEF CLIP ONTO FIXTURE  
WIRE. FIG. B

4) SCREW CROSSBAR ONTO J-BOX,  
MAKE SURE CANOPY SCREWS  
PROTRUDE DOWNWARD FROM  
CROSSBAR SO THAT WHEN CANOPY IS  
PLACED TO CEILING, 1/4" OF THREAD IS  
EXPOSED FROM CANOPY. WIRE AS PER  
LOCAL ELECTRIC CODE. SCREW  
CANOPY NUTS ONTO CANOPY SCREWS  
AND TIGHTEN. FIG. C

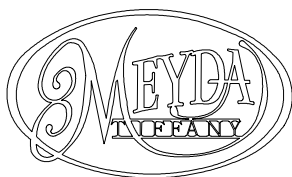

*"A Commitment to Excellence in Lighting and Service"*  
CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009  
MONDAY - FRIDAY 8:00a.m - 6:00p.m ET  
visit us on the web at [www.meyda.com](http://www.meyda.com)