


ASSEMBLY INSTRUCTIONS FOR #155249

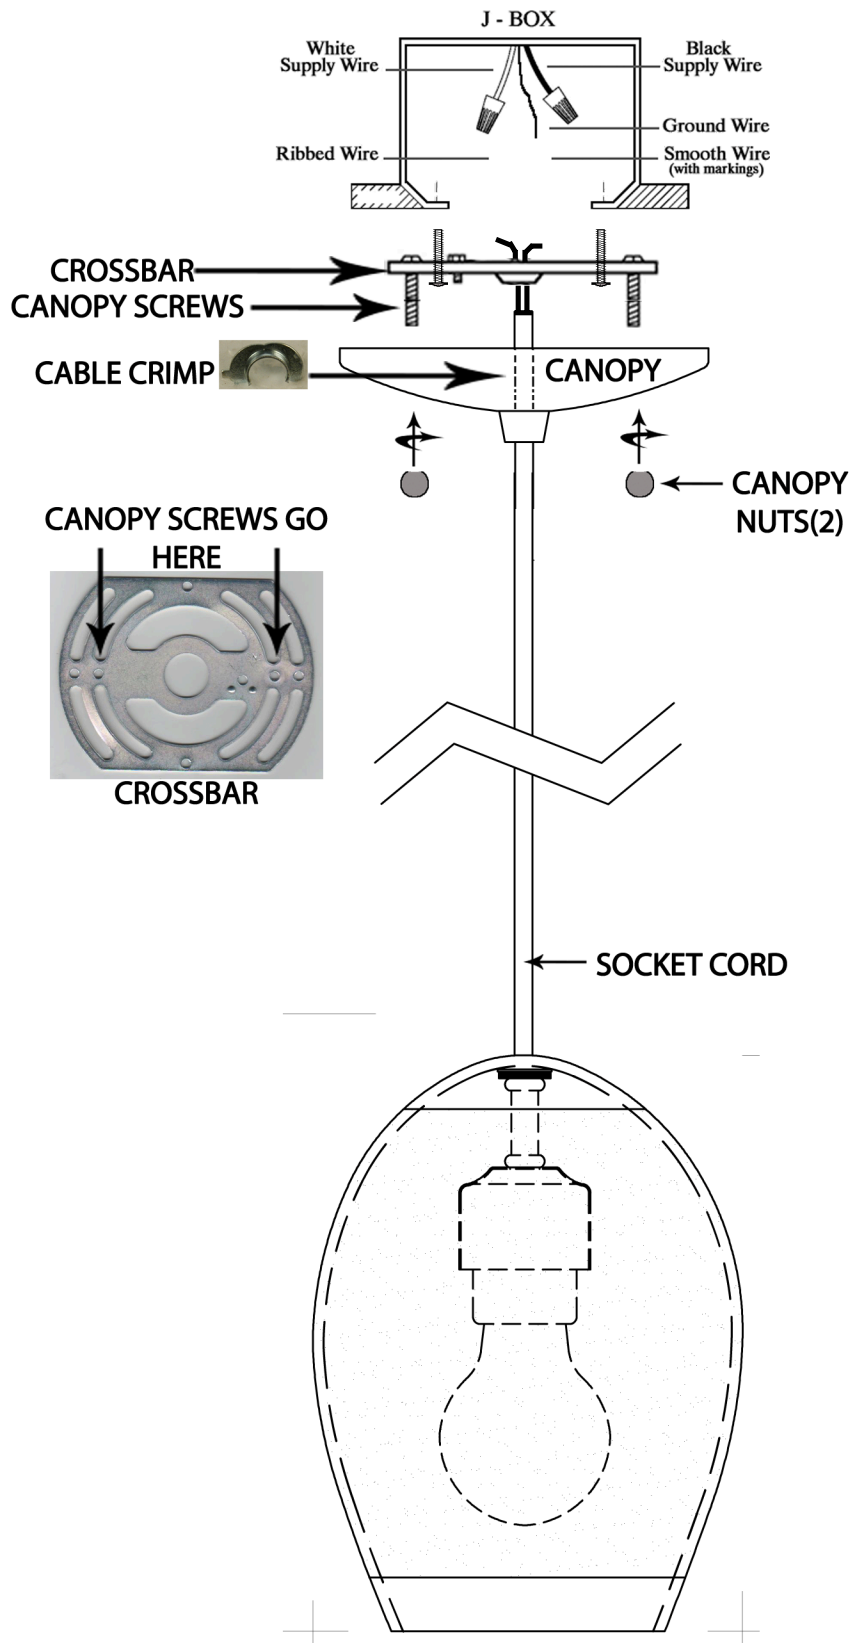

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1) ATTACH CROSS BAR TO J-BOX, ALLOWING THE TWO CANOPY SCREWS TO HANG DOWN TOWARDS THE CANOPY AS SEEN IN FIG.1
- 2) PASS SOCKET CORD THROUGH THE GLASS SHADE AND THROUGH THE CANOPY.
- 3) FIND THE DESIRED HEIGHT OF THE FIXTURE AND PLACE CRIMP ABOVE THE CANOPY HOLDING THE ELECTRICAL CORD AT YOUR FIXTURES HEIGHT. BEFORE YOU CUT EXCESS CORD BE SURE OF FIXTURES HEIGHT!
- 4) ATTACH WIRES AS PER LOCAL CODES.
- 5) SLIDE CANOPY UP INTO PLACE ON THE TWO CANOPY SCREWS AND SECURE WITH THE TWO CANOPY NUTS PROVIDED.
- 6) BULB YOUR FIXTURE, TURN ON THE POWER, ENJOY YOUR NEW FIXTURE AND HAVE A MEYDA FINE DAY!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com