

ASSEMBLY INSTRUCTIONS FOR # 155956 PG.1

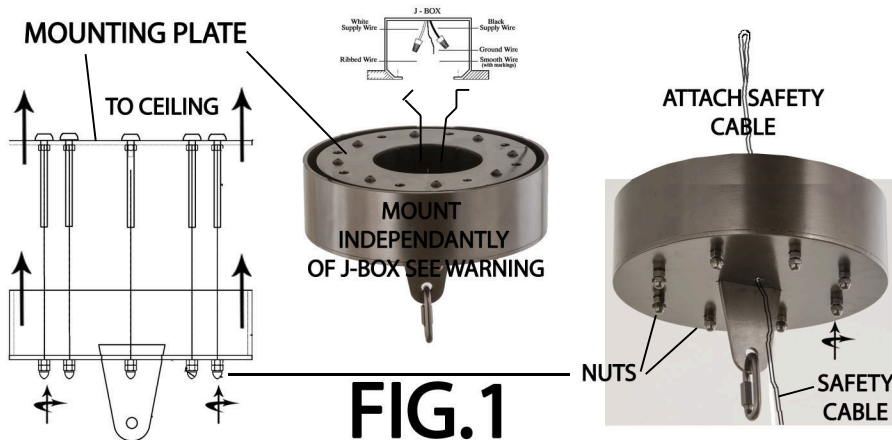
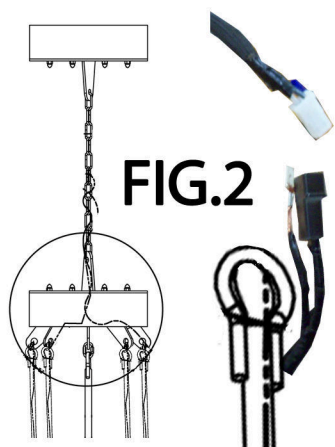
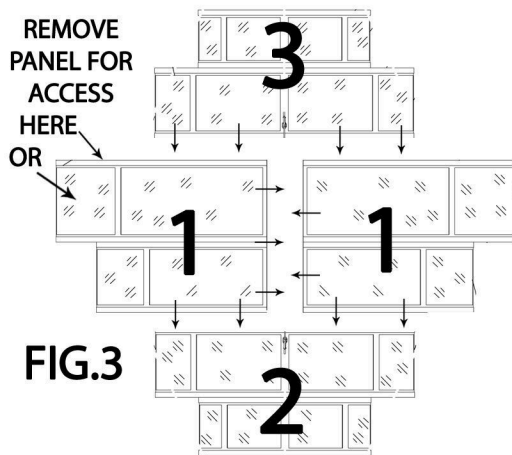

FIG.1

FIG.2

FIG.3

FIG.4

FIG.5

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THIS FIXTURE WEIGHS OVER 50 LBS. NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.

- 1) ATTACH MOUNTING PLATE TO CEILING BE SURE TO ALLOW FOR 1000 LBS. (FIG.1)
- 2) WIRE AS PER LOCAL ELECTRICAL CODES.
- 3) ATTACH SAFETY CABLE WHICH WILL RUN FROM THE CEILING, THE LENGTH OF THE CHAIN TO THE HUB. IT IS ATTACHED TO HUB SO YOU WILL HAVE TO RUN IT THROUGH CANOPY AND ATTACH TO CEILING BEFORE FASTENING CANOPY. (FIG.1)
- 4) SECURE CANOPY INTO PLACE WITH CANOPY NUTS. (FIG.1)
- 5) ATTACH CHAIN AND HUB TO CANOPY.
- 6) HANG THE ARMS FROM THE HUB & CONNECT THE WIRES, USING PLUG CONNECTORS PROVIDED. (FIG.2)
- 7) ASSEMBLE THE SHADE ON THE GROUND USING THE PROVIDED NUTS AND BOLTS: (FIG.4&5) ASSEMBLE THE TWO MIDDLE HALVES FIRST AND CONNECT THE MIDDLE TO THE BOTTOM. (FIG.3) LEAVE BOTTOM DISC DIFFUSER FOR LAST, (SO YOU ARE NOT STANDING ON IT). BEFORE ATTACHING TOP TIER PUT YOUR LIGHT CLUSTERS INSIDE OF UNIT. ATTACH TOP TIER TO THE MIDDLE THAT IS ALREADY ATTACHED TO BOTTOM TIER. (FIG.3) AT THIS TIME YOU MAY REMOVE A PANEL AS SEEN IN FIG.3 SO THAT YOU CAN CLIMB INSIDE THE SHADE.

ASSEMBLY INSTRUCTIONS FOR #155956 PG.2

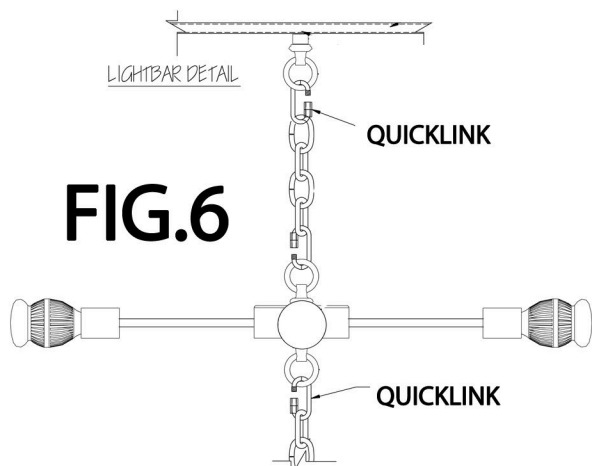


FIG.6

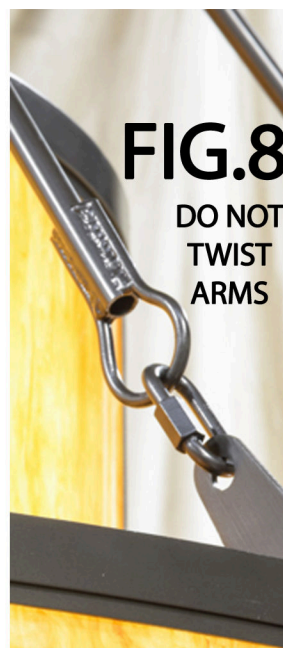


FIG.8

DO NOT
TWIST
ARMS


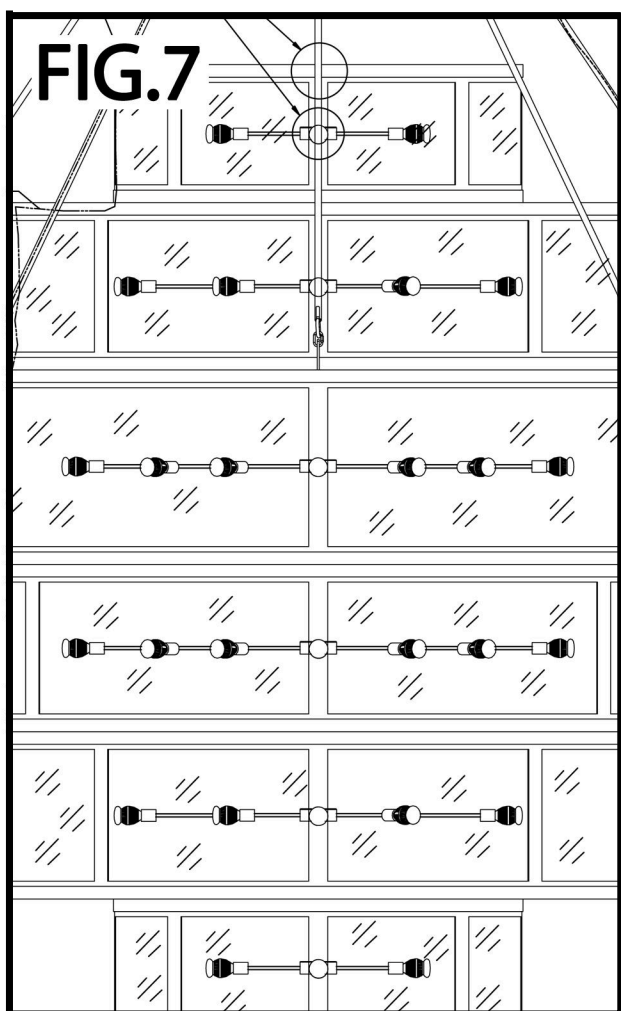


FIG.7

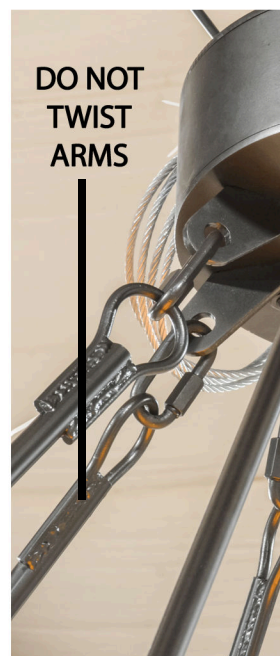

DO NOT
TWIST
ARMS

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

8) INSIDE THE SHADE BE CAREFUL & ONLY STEP ON THE SHADES FRAME. ATTACH THE LIGHT CLUSTERS IN THEIR APPROPRIATE ORDER. (FIG.6&7) ATTACH ALL WIRES.

INSTALL BULBS. **IT IS HIGHLY RECOMMENDED TO USE MED. BASED OMNIDIRECTIONAL LED LIGHTS SO THAT YOU WILL BE CHANGING THE LIGHTS LESS.**

9) REPLACE THE PANEL YOU REMOVED TO ACCESS THE INSIDE.

10) LIFT SHADE INTO PLACE AND CONNECT ARMS TO SHADE, (FIG.8) MAKE ELECTRICAL CONNECTIONS USING PLUG CONNECTORS. ALL PLUGS SHOULD BE CONNECTED AT THIS TIME.

11) ATTACH BOTTOM DISC DIFFUSER (SPECIAL NOTE: ALL BUT ONE SCREW MEASURES 1/4-20, THE ONE SCREW MEASURES 5-18 BE SURE TO SCREW THESE INTO THEIR APPROPRIATE HOLES!)

12) TURN POWER ON, ENJOY YOUR NEW FIXTURE, AND HAVE A MEYDA FINE DAY!

THIS FIXTURE WEIGHS OVER 50 LBS. NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.

2ND AVE.™



LIGHTING

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-843-1602

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.2ndave.com