


# ASSEMBLY INSTRUCTIONS FOR # 156314

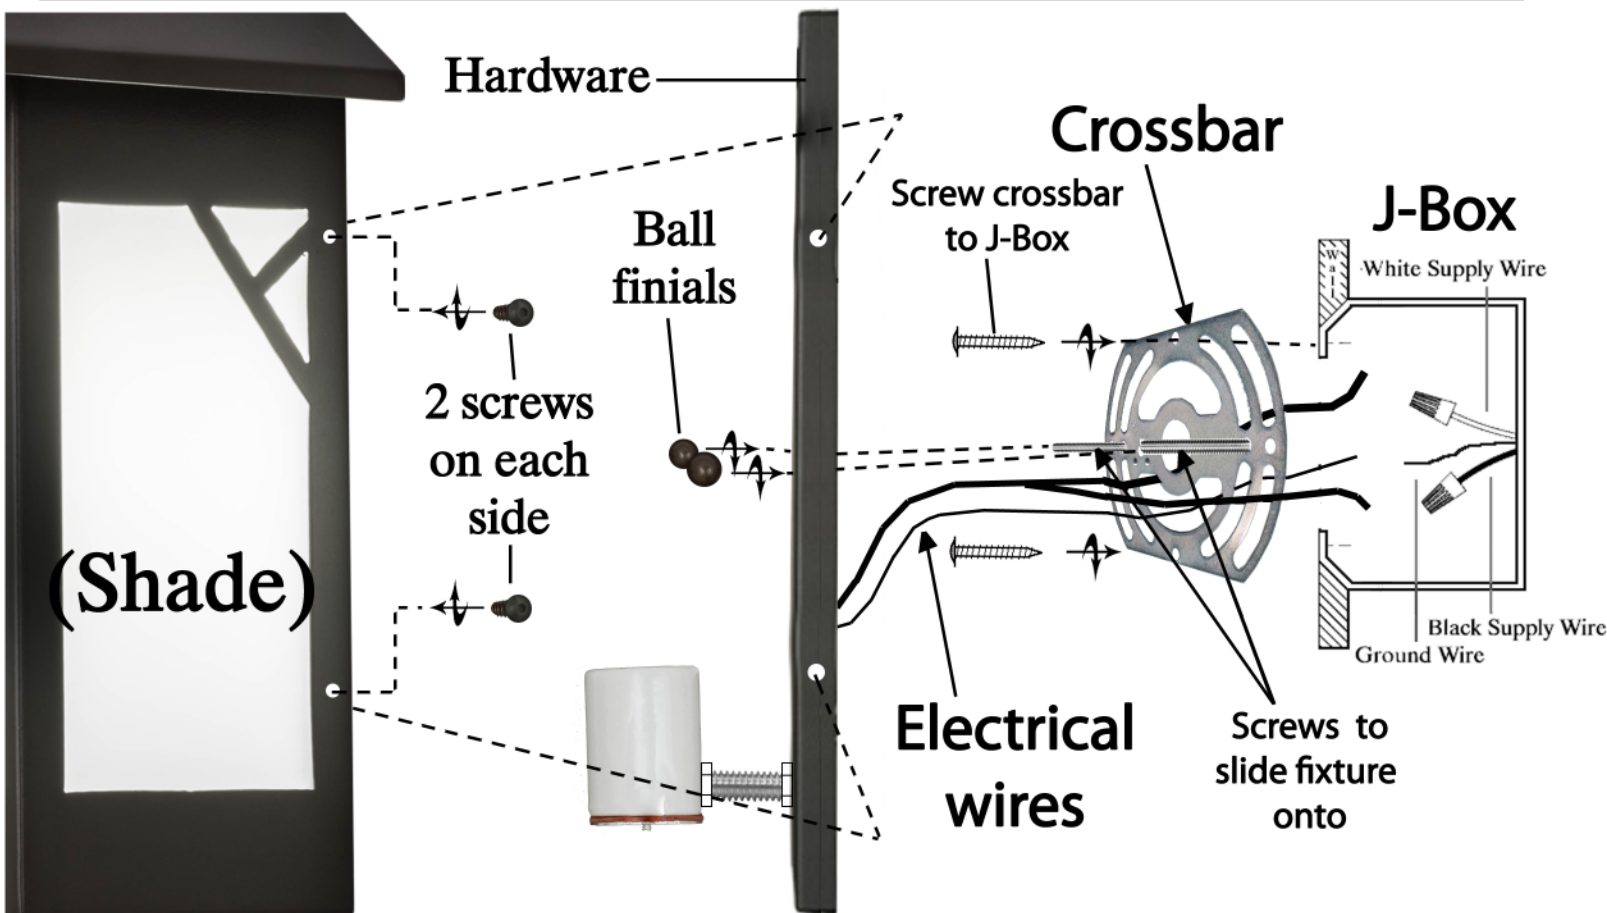

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to J-Box. There should be two bolts pointing out of crossbar away from J-Box to receive your hardware.
- 2.) Bring your hardware light cluster to your J-Box and attach all electrical wires as per local codes.
- 3.) Slide your hardware onto your two bolts protruding from crossbar. Secure hardware in place with two ball finials.
- 4.) You may bulb your sconce now.
- 5.) Place shade onto hardware and line up the four holes on side of shade to the four holes on side of hardware. Secure shade in place with the four screws provided.
- 6.) Power on. Enjoy your new fixture. Have a Meyda Fine Day!



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)