


ASSEMBLY INSTRUCTIONS FOR #159508

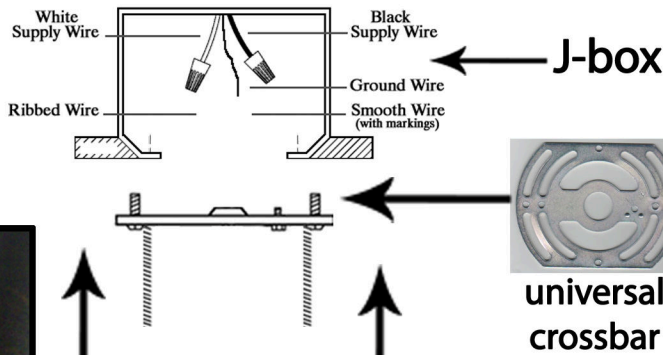

IMPORTANT


TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1) First peel paper off of diffuser, and place sandblasted side down, paper side up.
- 2) Place diffuser into the square pocket of the x-frame.
- 3) Remove plastic from white shade and place white shade onto x-frame.
- 4) Place the canopy w/frame onto the white shade so that the holes at the end of the frame and the holes on the white shade line up.
- 5) Secure canopy and shade to the x-frame with the screws provided. (See Fig.1)
- 6) Attach universal crossbar to your j-box, this crossbar will have two screws pointing down towards fixture.
- 7) Bring fixture to j-box and connect all electrical wires as per your local codes.
- 8) Slide canopy onto the two screws pointing down from the crossbar. Secure fixture in place with nuts provided. (See Fig.2)
- 9) Lamping provided by others.
- 10) Power on, enjoy your new light, and HAVE A MEYDA FINE DAY!!

Fig.1

Fig.2

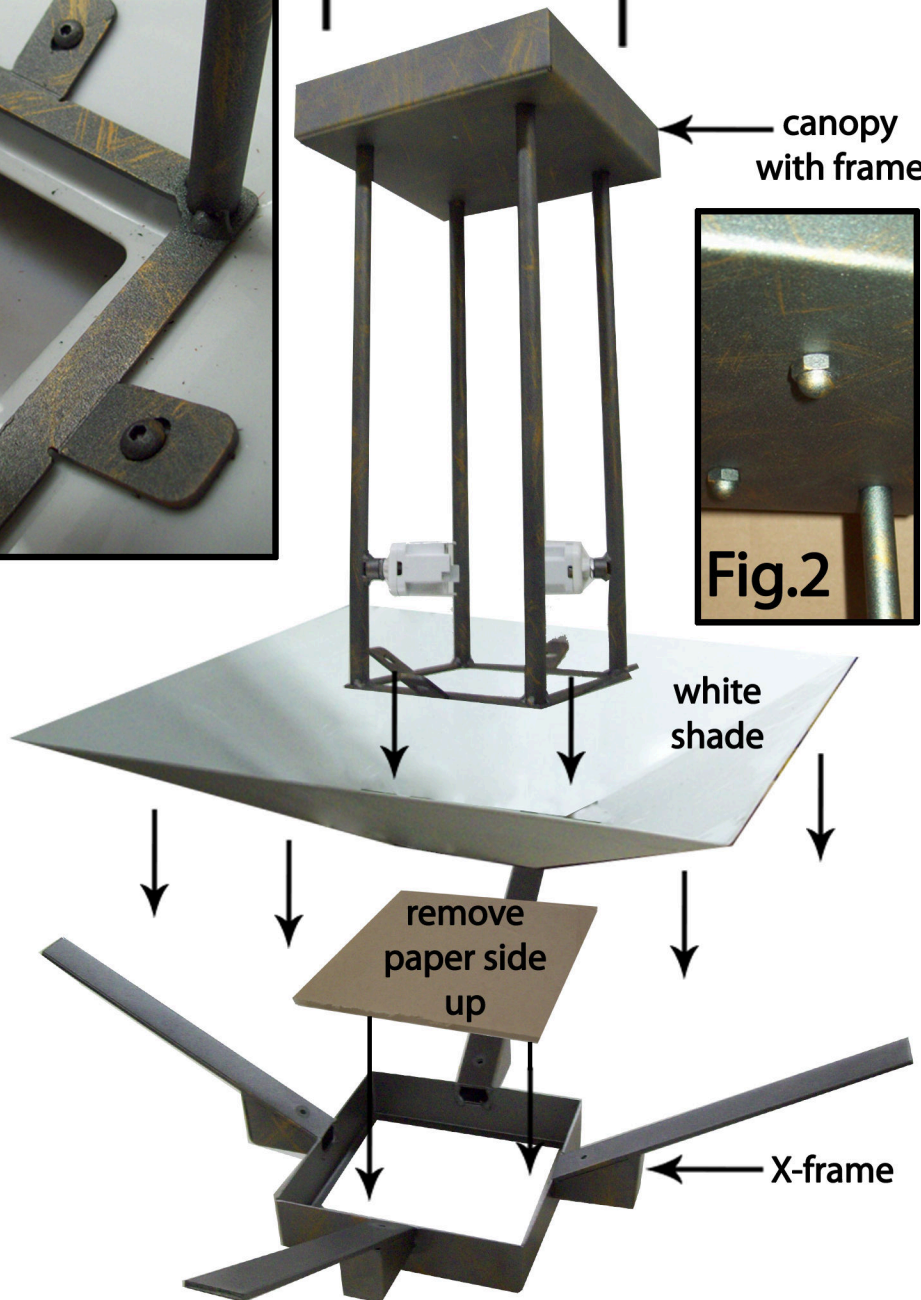

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com