

INSTALLATION INSTRUCTIONS

FOR ITEM 159928 COUNTRY INN WALL SCONCE


Meyda
CUSTOM LIGHTING

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Be sure power is off at the main breaker box prior to installation. Read all instructions in their entirety before beginning installation.

1. Carefully unpack all components and make certain that everything is accounted for.
2. Disassemble Sconce Faceplate by removing Screws from each side of Fixture. (FIG. A)
3. Once Faceplate has been removed, Unscrew Brass Balls from face of Backplate to release Universal Crossbar with Mounting Studs.
4. Attach Universal Crossbar to J-box ensuring that Lead Wires remain accessible.
5. Make electrical connection from Driver wires to Lead Wires following all Local Codes and Procedures. Brown wire from Driver will be connected to Power and Blue wire will connect to Neutral. (FIG. B)
6. Once successful electrical connection has been made, slide Backplate onto Mounting Studs.
7. Screw Brass Balls onto Mounting Studs until Backplate is flush with wall and secure.
8. Attach Faceplate to Backplate by threading Screws through holes on each side of Faceplate and into Backplate.
9. Power on and ENJOY!!

(FIG. A)

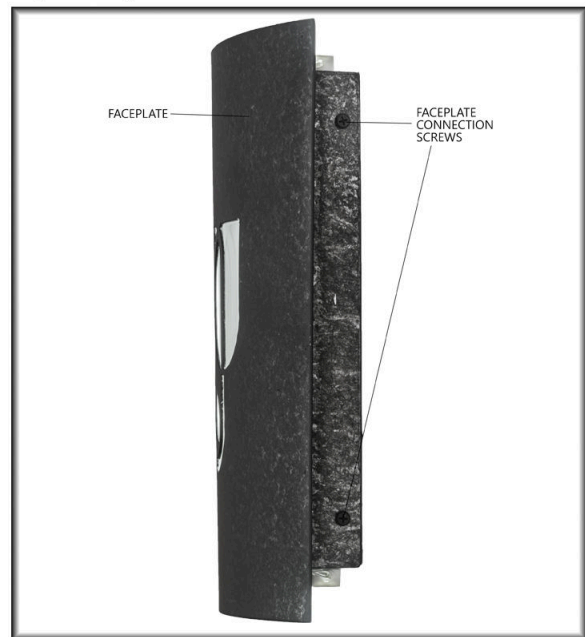

(FIG. B)

