


# ASSEMBLY INSTRUCTIONS FOR # 161333

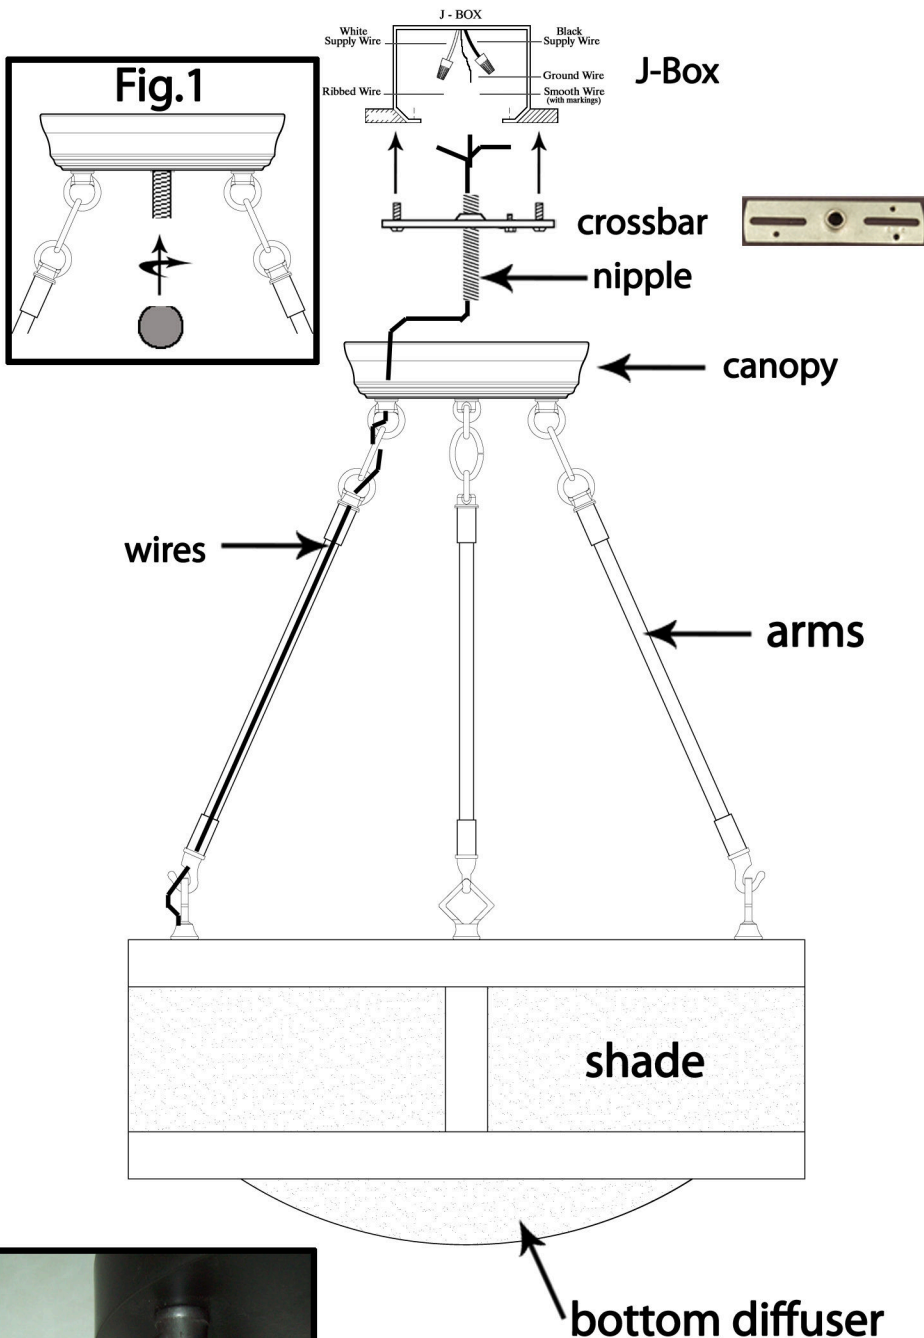

## IMPORTANT

**TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION**

**CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED**

- 1) Start by attaching your crossbar to J-Box. Your crossbar should then have a nipple screwed into center. (See main diagram.)
- 2) Assemble fixture as shown, start with the loop on the shade that has the wire coming out of it.
- 3) Run the wire and ground wire through the length of the arm. Finish running the two wires, sending it through the canopy loops. (See fig.2)
- 4) Now attach all of the arms, connecting the canopy to the shade. (As shown)
- 5) Bring fixture to ceiling, attach all electrical wires in J-Box to the fixture's wires as per local codes.
- 6) Slide canopy onto nipple attached to crossbar, and secure in place with ball finial. (See fig.1)
- 7) Place light bulbs supplied by others.
- 8) Place bottom diffuser into bottom of shade, secure with metal tabs.
- 9) Power on, enjoy your new fixture and have a Meyda Fine Day!



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)