
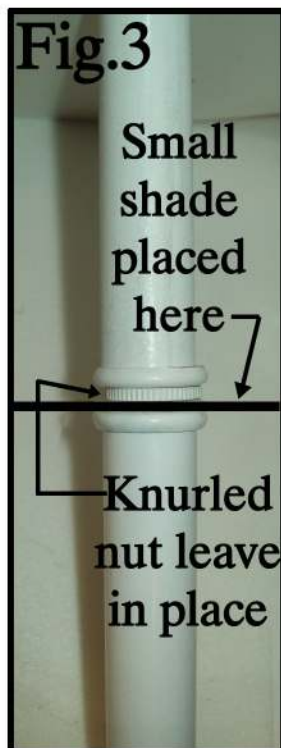
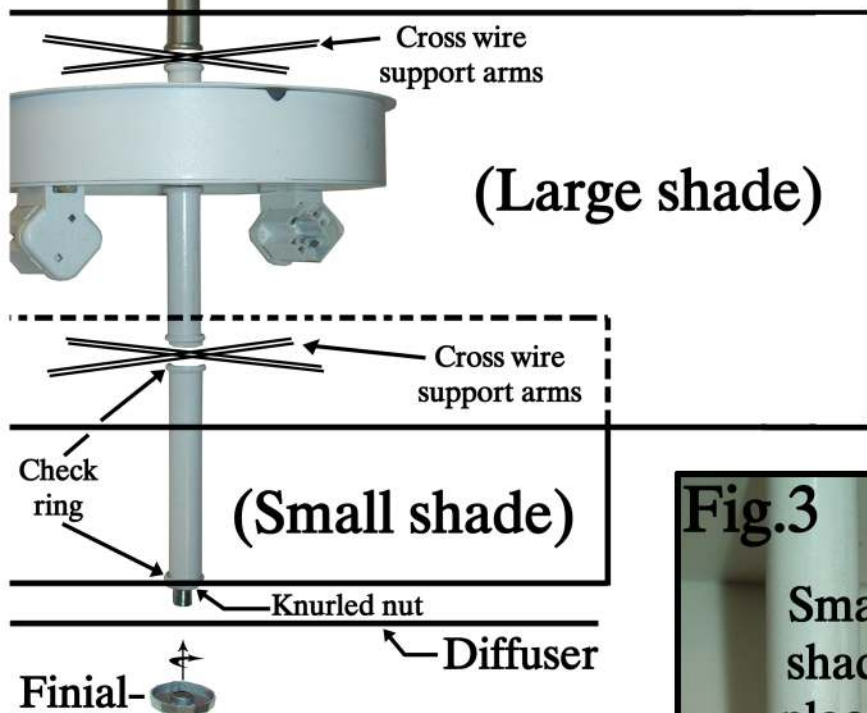


# ASSEMBLY INSTRUCTIONS FOR # 161663

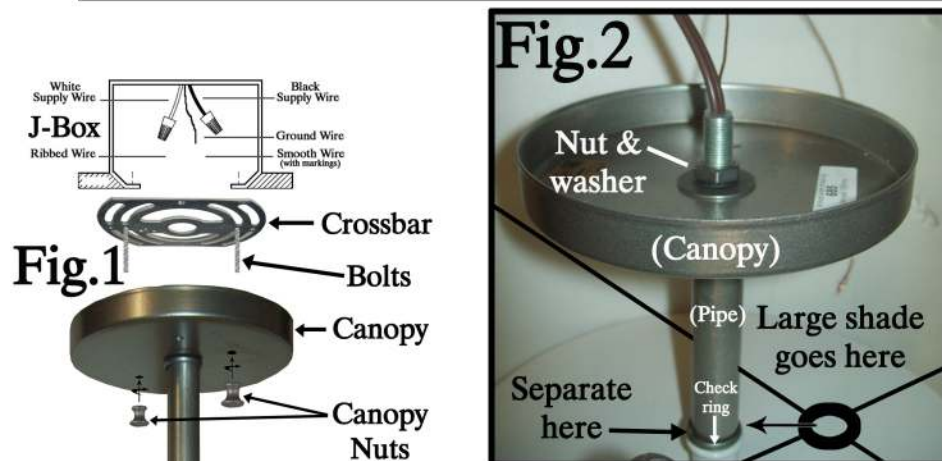

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) First remove the nut and washer on top of canopy, now the canopy, pipe & check ring will slide off. (Fig.2) Place large shade onto threaded rod. Replace check ring, pipe, canopy, washer, & nut, in that order. (Fig.1&2)
- 2.) On the bottom half remove finial, knurled nut, check ring, pipe, & second check ring. (Fig.1) Place smaller shade onto bottom threaded rod. Replace the top check ring followed by the pipe, check ring, knurled nut. (Fig.1&3)
- 3.) Now place diffuser onto threaded rod, and secure in place with the finial. (Fig.1)
- 4.) Attach crossbar to J-Box or ceiling, there should be two bolts pointing down from crossbar to receive the canopy. (Fig.1)
- 5.) Bring fixture to ceiling, attach all electrical wires as per your local codes. (Fig.1)
- 6.) Slide canopy onto crossbar bolts, and secure fixture in place with the two canopy nuts provided. (Fig.1)
- 7.) You may bulb at this time, Power on, & Enjoy your new fixture!
- 8.) Have a Meyda Fine Day!



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)