

ASSEMBLY INSTRUCTIONS FOR # 161667

Fig.1


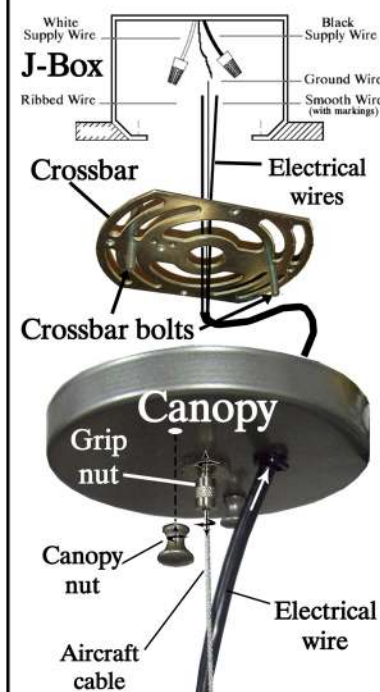


Fig.2

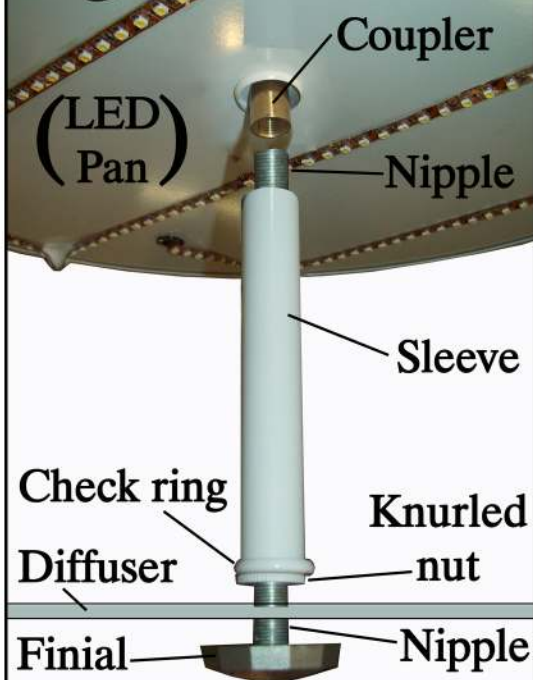

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION


CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach your LED Pan to your shade by lining up the arms with the tabs on the shade. Secure in place with nuts and bolts provided. (Fig.4)
- 2.) Assemble diffuser rod: Screw nipple into coupler, slide sleeve up onto nipple. Follow that with the checkring, then the knurled nut. Place diffuser into shade, it should sit on the tabs protruding from bottom of shade. Let the nipple pierce the diffuser's center, and screw on the finial. (Fig.2)
- 3.) Unfurl the electrical wire and aircraft cable that sits upon the LED Pan's arms. (Fig.3)
- 4.) Run your aircraft cable through the middle of your canopy: Unscrew your grip nut just a little, and push towards your canopy while you push your cable through. Letting go of nut will cause grip nut to grip. When your ideal height for your fixture has been determined, screw grip nut back towards the canopy. (Fig.1)
- 5.) Run your electrical wire through the canopy. Attach your crossbar to your ceiling or J-Box. There should be two bolts pointing down from crossbar to receive the canopy. Bring fixture to ceiling, attach all electrical wires as per your local codes. (Fig.1)
- 6.) Slide canopy up onto the two bolts and secure canopy (& fixture) to ceiling by screwing the canopy nuts onto the two crossbar bolts.

Fig.3



Fig.4

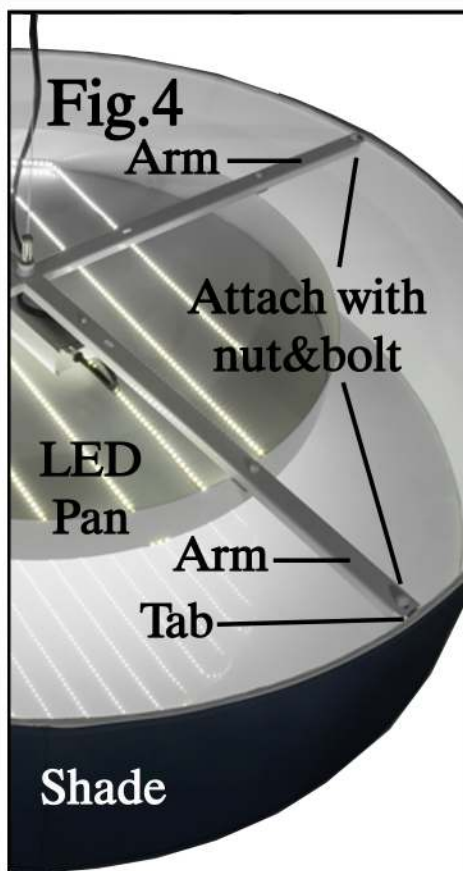

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com