
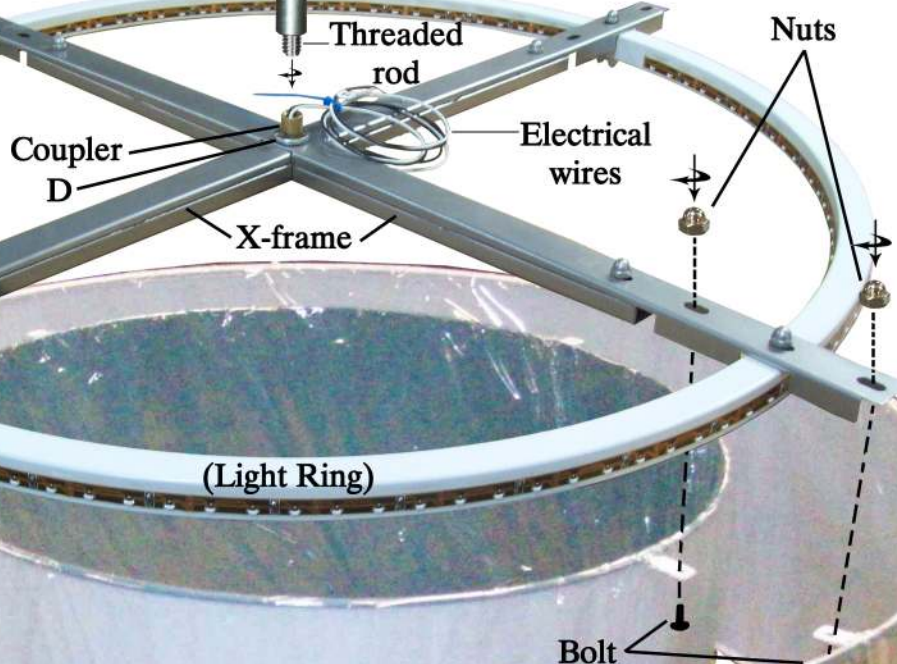
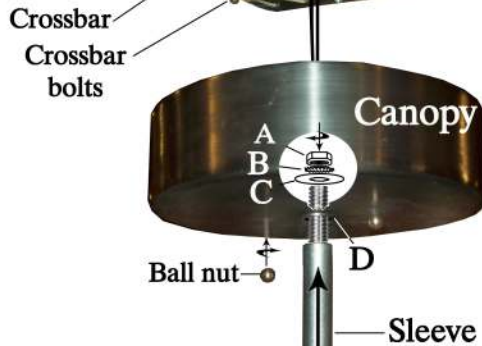


ASSEMBLY INSTRUCTIONS FOR # 161668

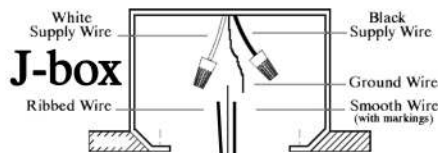

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Lay your two shades on a table smaller one within the other. Flat tabs up, rod tabs on bottom. You may place diffuser onto rod tabs now.
- 2.) Place your light ring & X-frame onto the two shades, secure X-Frame onto the two shades using provided bolts and nuts. Nuts go on top.
- 3.) Run electrical wires through the threaded rod. Screw threaded rod into coupler in center of X-frame. Slide your sleeve over threaded rod, follow that with check ring (D). Place canopy onto threaded rod, and secure in place with a washer (C), spider washer (B), and then your canopy nut (A), in that order.
- 4.) The wires, that you ran from the X-frame through the canopy, should now be attached to the wires inside the canopy. Connect the Black (neutral) to Black (inside canopy) & White (hot) to Red (inside canopy).
- 5.) Attach crossbar to ceiling or J-Box leaving two crossbar bolts pointing down to receive canopy.
- 6.) Now connect the other wires Brown (hot), Blue (neutral), & Green/Yellow (ground) to your power source, as per local codes.
- 7.) Slide canopy up onto the crossbar bolts, & secure to your ceiling with the ball nuts provided.
- 8.) Power on, Enjoy your new fixture!
- 9.) Have a Meyda Fine Day!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com