



# ASSEMBLY INSTRUCTIONS FOR # 161670


## Fig.1

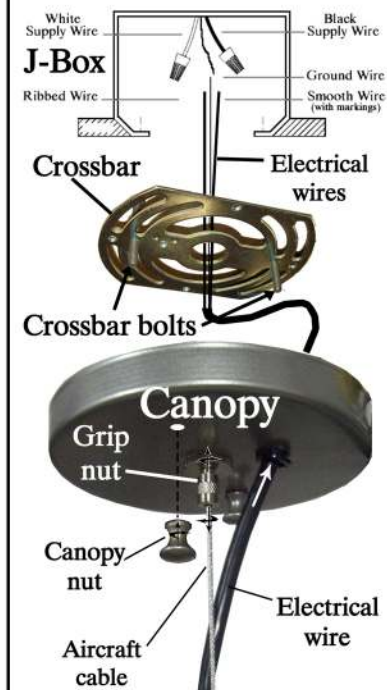


## Fig.2

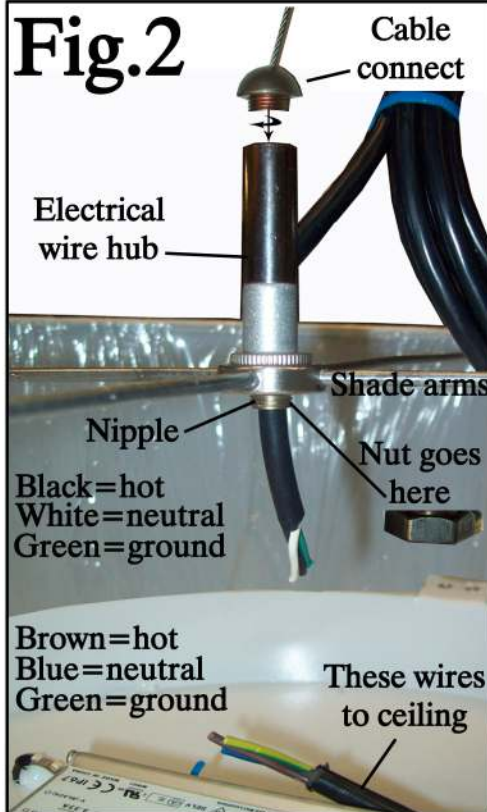

## Fig.3

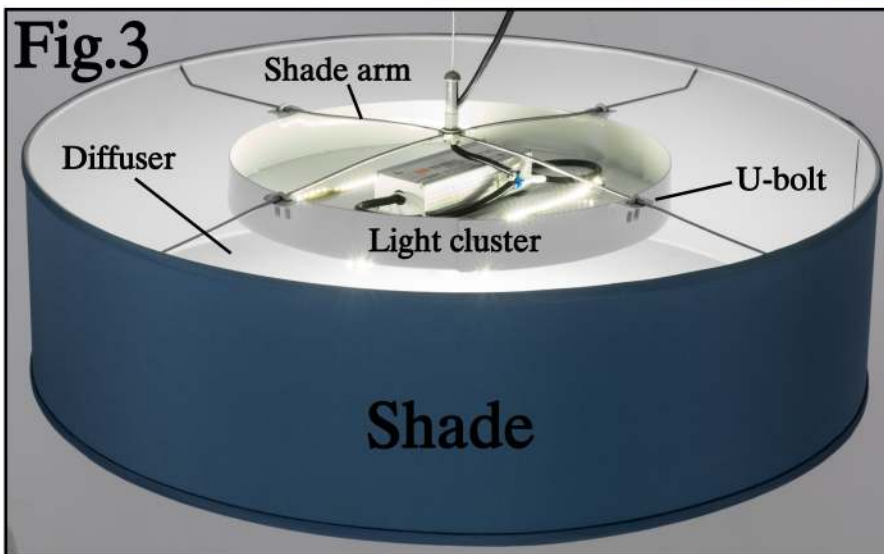

## Fig.4

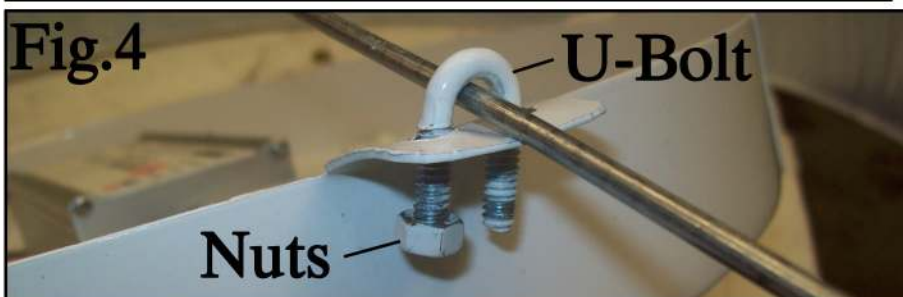

### IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach light cluster to shade by placing underneath the shade's arms. Secure in place with the ubolts provided.(Fig.3&4)
- 2.) Insert your electrical wire hub into the center of the shade's arms. Slip your nut onto the wire that protrudes down from hub, and screw nut onto nipple. Also screw your cable connect to the top of electrical hub.(Fig.2)
- 3.) Attach all electrical wires inside light cluster as per your local codes.(Fig.2)
- 4.) Run your aircraft cable through the middle of your canopy: Unscrew your grip nut just a little, and push towards your canopy while you push your cable through. Letting go of nut will cause grip nut to grip. When your ideal height for your fixture has been determined, screw grip nut back towards the canopy.(Fig.1)
- 5.) Run your electrical wire through the canopy. Attach your crossbar to your ceiling or J-Box. There should be two bolts pointing down from crossbar to receive the canopy. Bring fixture to ceiling, attach all electrical wires as per your local codes.(Fig.1)
- 6.) Slide canopy up onto the two bolts and secure canopy (& fixture) to ceiling by screwing the canopy nuts onto the two crossbar bolts.
- 7.) Power on, enjoy your new fixture!
- 8.) Have a Meyda Fine Day!



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)