

# GLASS INSTALLATION INSTRUCTIONS FOR #161946



#1 ACORN NUT

#2 ACORN NUT(S)

SOCKET

SIDE GLASS PANEL

RUBBER CAP





PIPE

SCREW(S) (2)

SOCKET

PLUG

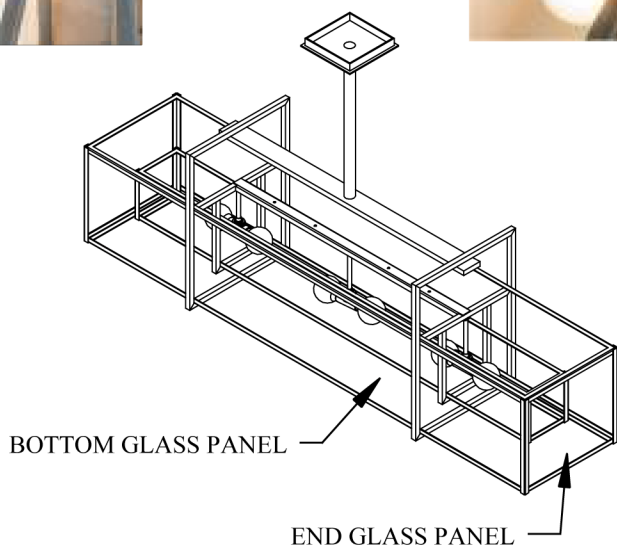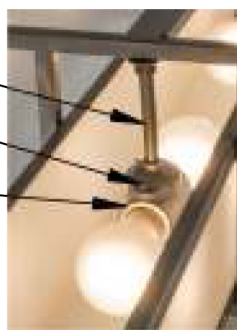

BOTTOM GLASS PANEL

END GLASS PANEL

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR  
CIRCUIT BREAKER BOX BEFORE STARTING  
INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE NOT  
INCLUDED

THIS FIXTURE WEIGHS OVER 50 LBS.  
NEC:314.27B, A luminaire that weighs more then 23kg  
(50lb) shall be supported independently of the outlet  
box unless the outlet box is listed AND MARKED for  
the MAXIMUM weight supported.

1. UNSCREW ALL THREE SOCKETS  
FROM LIGHT BAR BY:
  - a) REMOVING SCREWS
  - b) UNSCREWING PIPE
2. INSERT INNER BOTTOM GLASS  
PANEL
3. INSERT INNER END GLASS  
PANELS.
4. INSERT INNER SIDE GLASS  
PANELS.
5. REPLACE RUBBER CAPS.
6. SCREW THREE SOCKETS BACK  
ON.
7. REPEAT STEPS 2-5 FOR OUTER  
FRAME GLASS PANELS.
8. REMOVE #1 ACORN NUT,  
CAREFULLY SLIDE ASSEMBLED  
INNER BOX INSIDE OUTER FRAME.
9. SCREW ON #1 & #2 ACORN NUTS.
10. CONNECT PLUG.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at [www.meyda.com](http://www.meyda.com)