
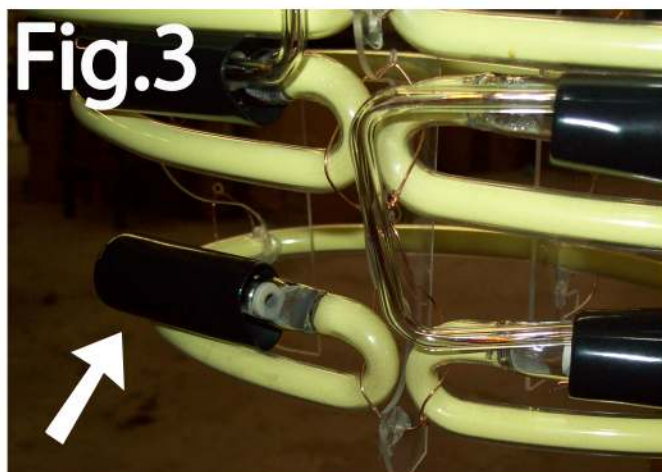
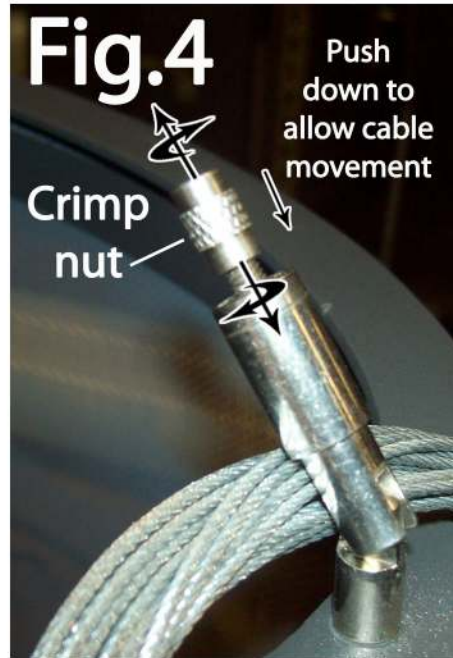


ASSEMBLY INSTRUCTIONS FOR #162930

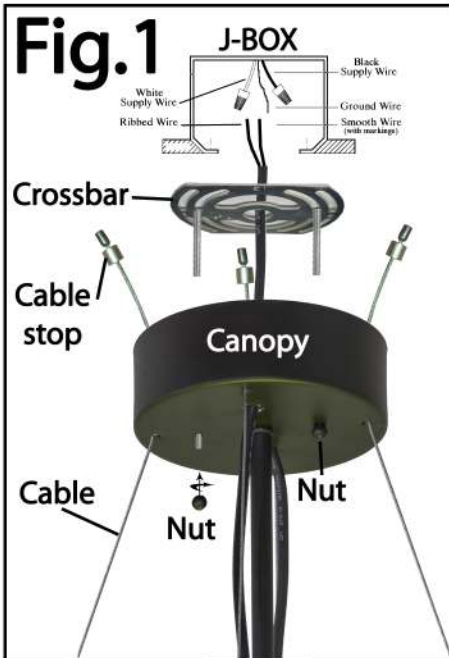

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) First attach your crossbar to your ceiling as per local codes. There should be two threaded rods pointing down. (Fig.1)
- 2.) Run your four cables through the four holes in the outer edge of canopy. Run your cables inside so that the cable stop rests inside the canopy. (Fig.1)
- 3.) Raise your canopy w/light to your crossbar, make (at your J-box) all electrical connections as per local codes.
- 4.) Secure canopy with light cage to your ceiling using the nuts provided. (Fig.1)
- 5.) You will need to make electrical connections on the "cage of light". Remove the protective sleeve, twist wires together. Replace protective sleeve. (Fig.2) Repeat for the bottom connection which will be opposite of the one on top. (Fig.3)
- 6.) Your cables should be hanging freely. Raise your shade to the cables. Connecting shade will be easier with two people. Run cable through cable crimp. To do this unscrew the nut of cable crimp and push down. Your cable should pass freely through the crimp, let go of the nut and it will grab the cable. (Fig.4) Go slowly so as not to ruin the light cage. When all cables are gripped at the best length screw your crimp nut back down. You may clip extra cable only when you are sure of the height.
- 7.) As long as the two connections are made on the light cage, and the connections are made inside the ceiling/canopy, you are ready to power on. Enjoy your new fixture! & Have a Meyda Fine Day!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com