


# ASSEMBLY INSTRUCTIONS FOR #162956

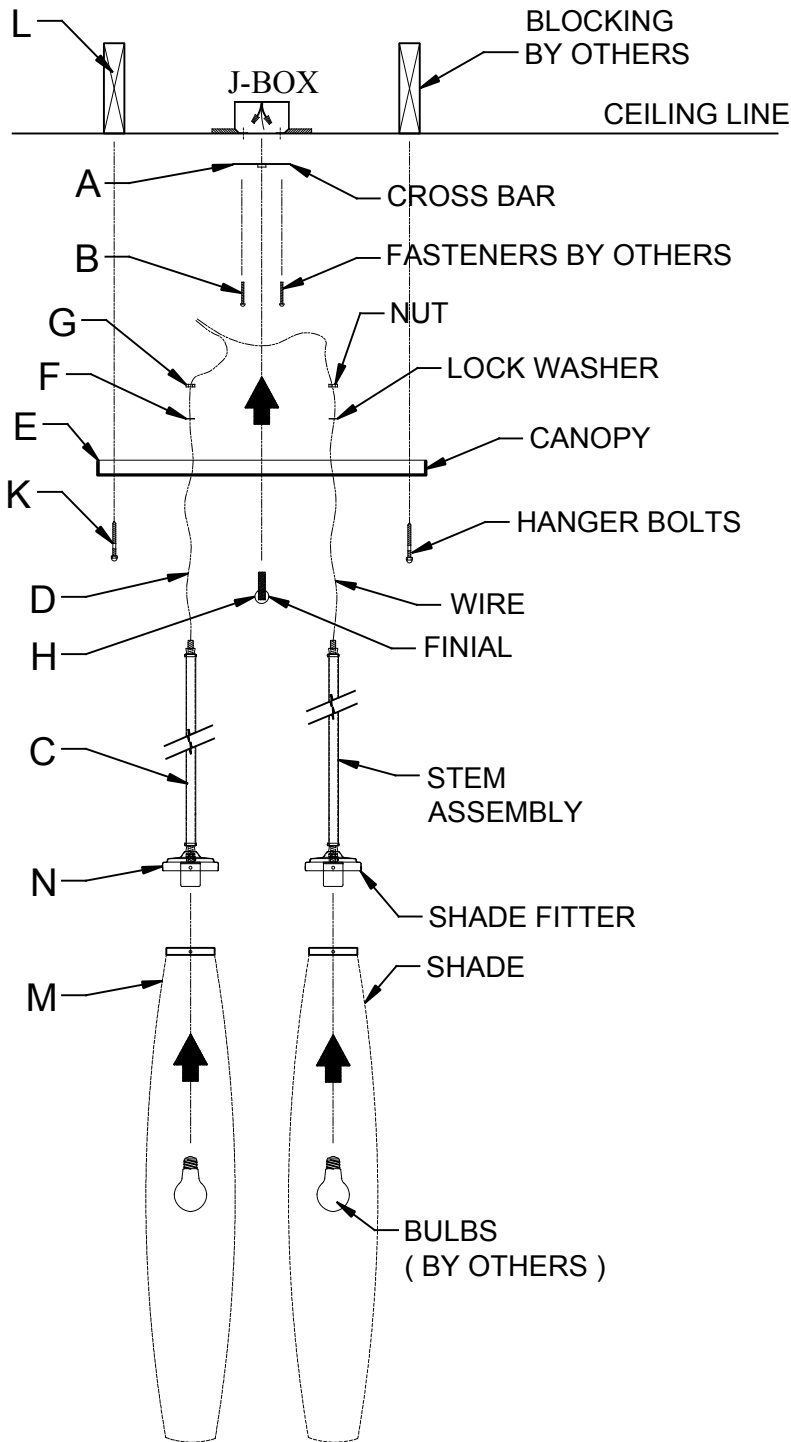


**SIDE VIEW**

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1) ATTACH CROSS BAR (A) TO CEILING WITH FASTENERS (B) PROVIDED BY OTHERS.
- 2) ADJUST STEM ASSEMBLY (C) LENGTHS AS REQUIRED TO DESIRED LENGTHS.
- 3) RE-THREAD WIRE (D) BACK THROUGH ANY STEMS THAT HAVE BEEN ADJUSTED.
- 4) THREAD WIRES (D) FROM ALL THREE STEM ASSEMBLIES (C) THROUGH CANOPY (E) HOLES & LOCK WASHER (F) THEN NUT (G) & SECURE EACH STEM ASSEMBLY (C) IN PLACE WITH LOCK WASHER (F) & NUT (G).
- 5) MAKE ELECTRICAL CONNECTION AT "J" BOX PER LOCAL ELECTRICAL CODE.
- 6) SECURE CANOPY (E) TO CEILING WITH FINIAL (H).
- 7) DRILL HOLES IN CANOPY (E) TO ACCEPT HANGER BOLTS (K) PROVIDED, ALIGNED WITH SUPPORT BLOCKING (L) IN CEILING, BY OTHERS.
- 8) INSTALL LAMPING (BULBS). BULBS PROVIDED BY OTHERS.
- 9) SECURE SHADES (M) TO SHADE FITTERS (N) WITH SCREWS PROVIDED WITH SHADE FITTERS (N).

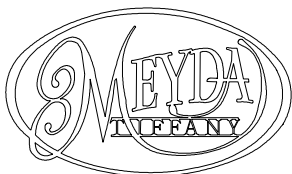

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at [www.meyda.com](http://www.meyda.com)