

ASSEMBLY INSTRUCTIONS FOR # 163161

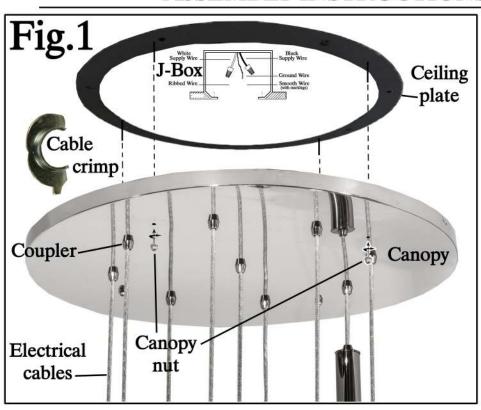

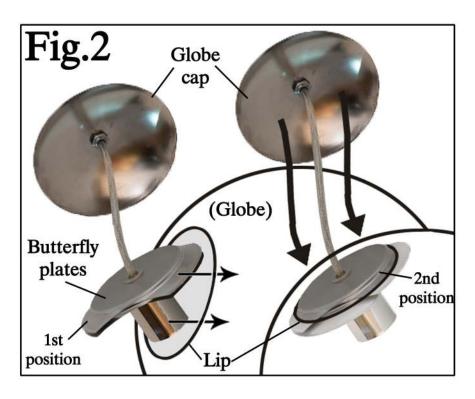

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

DO NOT ATTACH FIXTURE TO J-BOX

- 1.)Protect the finish from the oils present in hands & fingers.
- 2.) Secure ceiling plate to ceiling. There should be four bolts pointing down from it to recieve the canopy. (Fig. 1)
- 3.)Prepare canopy for installation: Run your electrical cables through the couplers on canopy. You may tie a simple knot above canopy while adjusting the lengths of cables. Once you are sure of the length, put your cable crimp onto cable (inside canopy) and sqeeze. Make sure it is not too tight, you want it snug.(Fig.1)
- 4.)Bring canopy to ceiling plate and connect all electrical wires as per your local codes.
- 5.) Slide canopy up onto the four ceiling plate bolts, and secure in place with the canopy nuts provided. (Fig.1)
- 6.) You may bulb your fixture at this time.
- 7.) When placing globes onto hardware/socket: You have above the socket two plates (butterfly), at least one of them will spin. Spin your plates to the first position in Fig.2. Place globe onto the plates at an angle. When lip is fully over the plates, spin the plates so that they form a full circle as in the 2nd position of Fig.2. Slide the globe cap down onto the globe gently. Repeat for the rest of the globes. (Fig.2) 8.) Power on, enjoy your new fixture!

9.) Have a Meyda Fine Day!



"A Commitment to Excellence in Lighting and Service"