
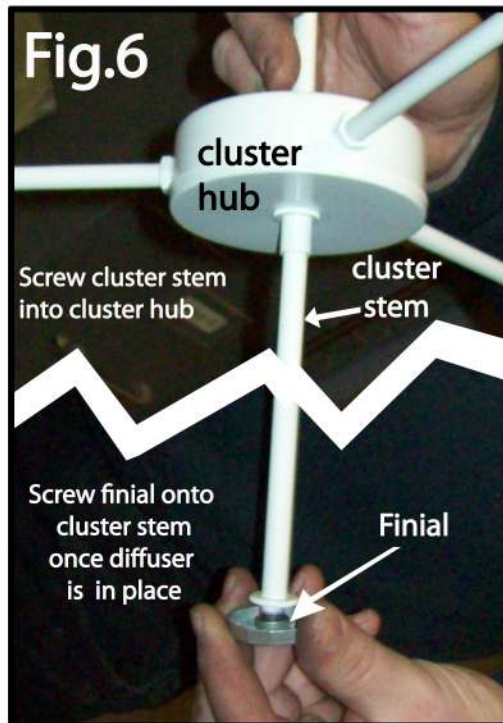
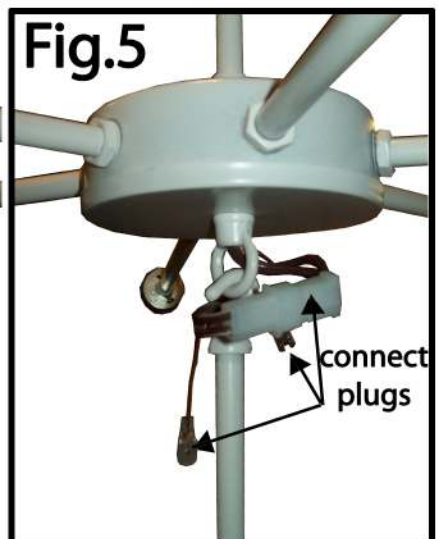
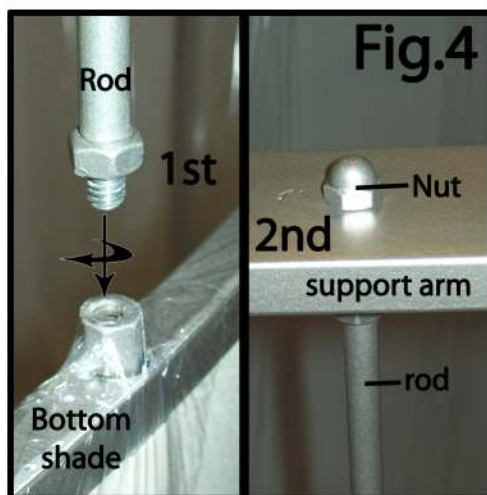
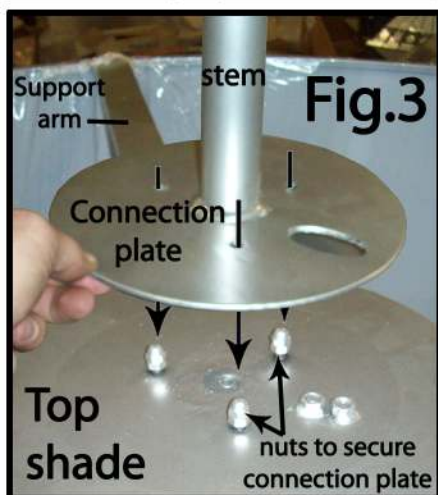
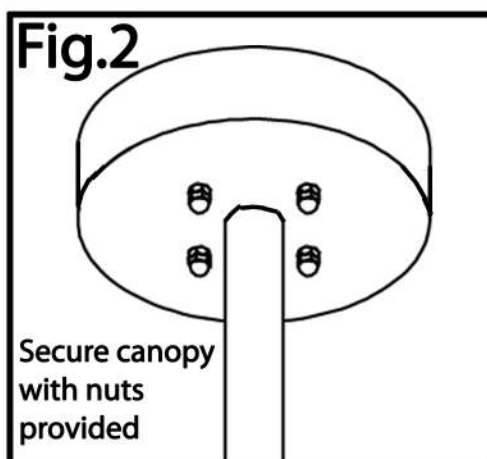


!!Special Note: When receiving, shade may appear to have deformity in fabric, once suspended it will straighten out!!

# ASSEMBLY INSTRUCTIONS FOR #163656

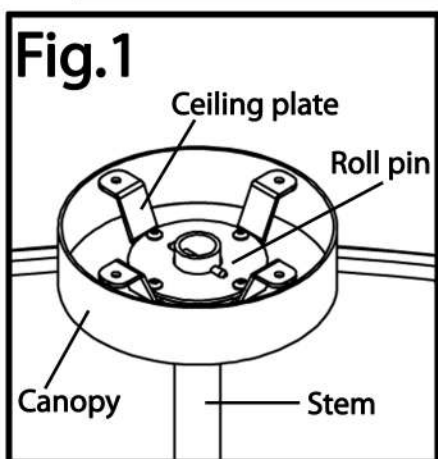

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

**THIS FIXTURE WEIGHS OVER 50 LBS. NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.**

- 1.) **IMPORTANT!!!** Before making any height adjustments: you must not make your stem any shorter than 6" in order to assure proper heat ventilation. If cutting stem, you must also drill a roll pin hole, (Fig.1) so take note of size and location of existing hole.
- 2.) Attach your ceiling plate to your ceiling. (100lbs. see warning above.) (Fig.1)
- 3.) With your canopy on your stem, slide the stem into the center of your ceiling plate. Keep it in place by pushing your roll pin through the hole at the very top of the stem. (Fig.1)
- 4.) Raise top shade to connection plate. There will be wires/cable bundled on top of the shade. You must pull/push gently the wires through the length of the stem, and the center of ceiling plate. (Fig.1)
- 5.) Make all electrical connections at the ceiling as per local codes. Connect safety cable. Raise & secure canopy with nuts provided. (Fig.1&2)
- 6.) Join the shade to the connection plate, making sure the threaded rods line up and accommodate the two nuts protruding. Secure with nuts. (Fig.3)
- 7.) Screw your rods into bottom shade, raise bottom shade into the top shade, & line up the rods with the holes on the top shade's support arms. Secure with the nuts provided. (Fig.4)
- 8.) Attach light clusters: You will take each stem and screw it into cluster. Starting at the top, hook stem onto loop, and connect the plugs together. Repeat for each cluster. (Fig.5) You may bulb at this time.
- 9.) Slightly bend diffuser like a wide taco to fit into bottom shade. Let it rest on the bottom shade's lip, while allowing the rod (screwed into bottom light cluster) to penetrate the center of diffuser. Screw your finial onto this rod. (Fig.6)
- 9.) Power on, Enjoy, & Have a MEYDA Fine Day!!



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)