
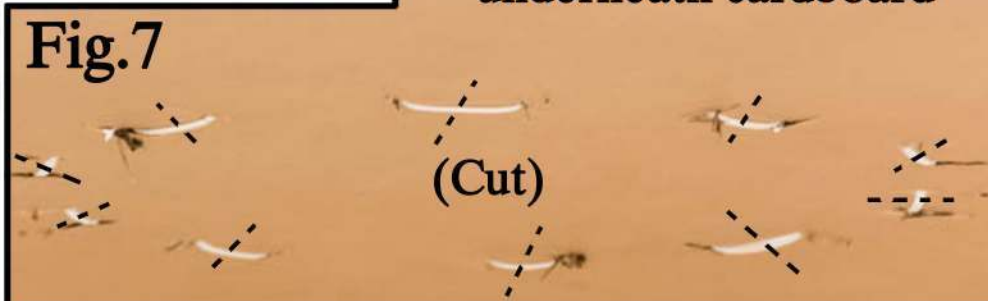
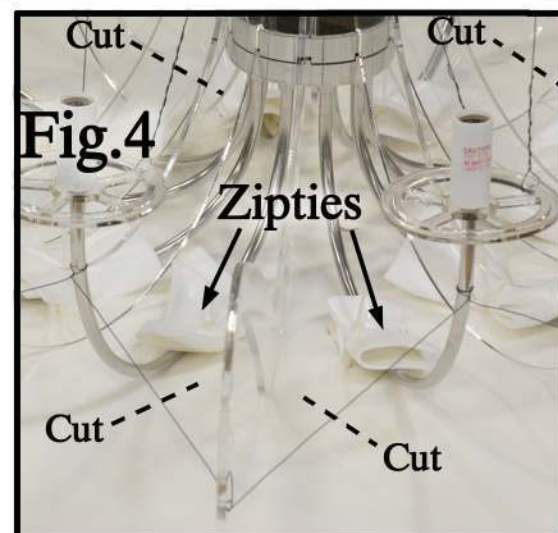
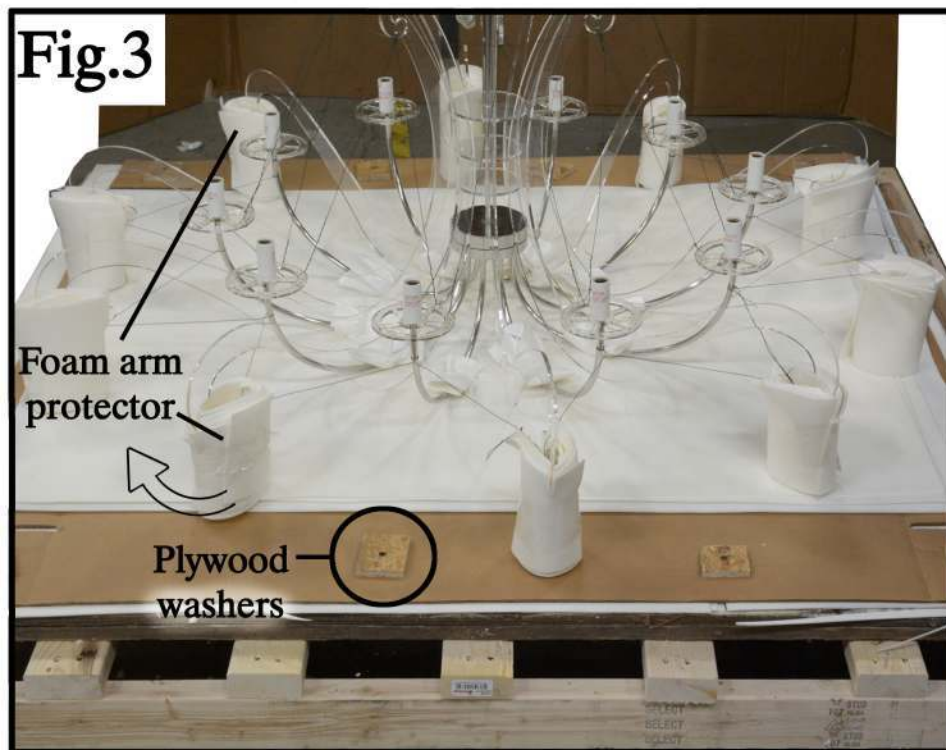


UNCRATING INSTRUCTIONS FOR # 166844

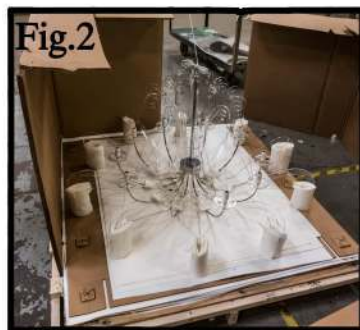

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Remove plastic wrap, remove wood 2X4's encasing the cardboard box. Remove also the top to the box. (Fig.1)
- 2.) Remove the screws along the bottom perimeter of box. Remove screws along two seams that run from the bottom to the top on two of the four sides. (Fig.1 marked in yellow)
- 3.) Carefully peel the box walls away from fixture, As you do this peanuts will fall away from fixture, you may want to have a bag or box handy to aid in peanut cleanup. (Fig.2&3)
- 4.) Unscrew the plywood washers, tilt (bottom towards you) the foam arm protectors off of the arms. (Fig.3)
- 5.) Remove all of the rubber coated wires. (Fig.4)
- 6.) Remove the zip ties: best done from underneath, which you would have to lift fixture into the air to get underneath the cardboard. (Fig.6&7)
- 7.) Assemble and install your fixture!
(See assembly instructions.)

Zip ties as seen from underneath cardboard



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

ASSEMBLY INSTRUCTIONS FOR # 166844

Fig.1


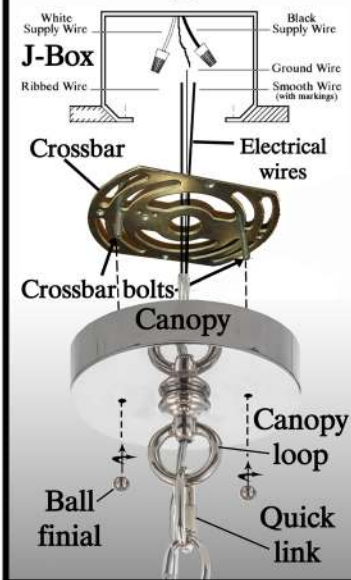


Fig.2

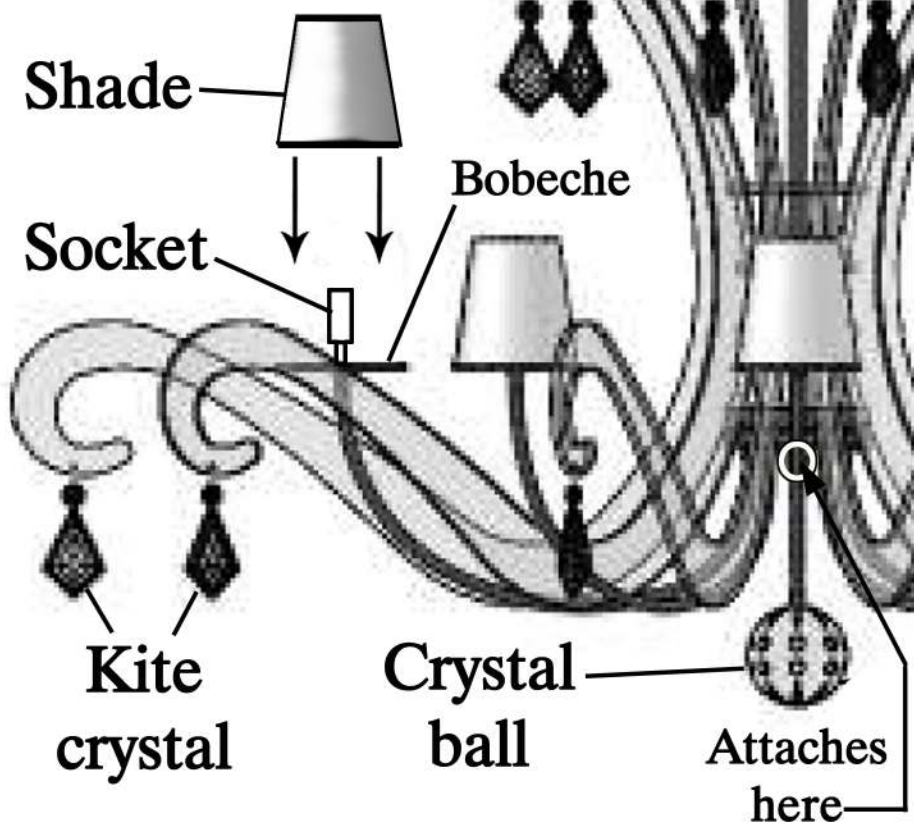

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

Steps 1-5 See Fig.1

- 1.) Attach your crossbar to ceiling or J-Box. Make sure you have two bolts pointing down towards fixture to receive the canopy.
- 2.) Determine overall desired height (fixture is 33.5" H from bottom of ball to top of loop that connects to chain.) Attach your chain to top of fixture's loop, & attach the other end to your canopy loop. You can easily open quick links to attach chain to loops.
- 3.) Run your wire up the length of chain and through the hole of the canopy loop & through the canopy.
- 4.) Bring fixture to ceiling and attach all electrical wires as per your local codes.
- 5.) Secure canopy flush to ceiling by sliding canopy onto the two bolts from step 1, & screw on your two ball finials.
- 6.) Place shades: the shades fit within a channel on the bobeche. (see main drawing)
- 7.) Place crystals: Kite crystals attach to a hole on each arm. (Fig.2 & main drawing) Crystal ball attaches to a hole in the metal finial at the bottom center of fixture. (See main drawing)
- 8.) Bulb your fixture, power on, enjoy your new fixture!
- 9.) Have a Meyda Fine Day!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com