

ASSEMBLY INSTRUCTIONS FOR #16733 (M48-TR860-22-5)



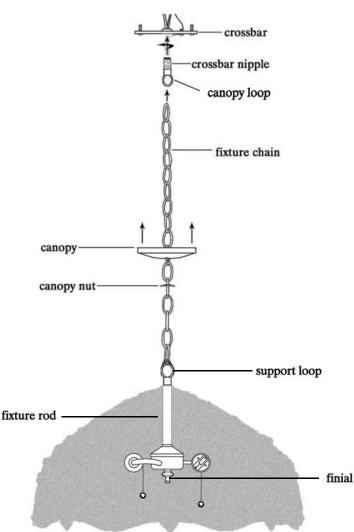

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Turn off power to J-Box
- 2. Screw crossbar into J-Box
- 3. Screw crossbar nipple into crossbar
- 4. Determine length of chain needed, attach chain to fixture loop and support loop
- 5. Screw canopy nut down and off canopy loop, let canopy nut and canopy slide down chian.
- 6. Place fixture with wire through vase cap of shade, support loop, chain, canopy loop and crossbar.
- 7. Wire as per local electical code.
- 8. Screw threaded nipple into bottom of canopy loop.
- 9. Place canopy to ceiling and secure with canopy nut.
- 10. Screw finial onto threaded nipple and tighten.
- **CAUTION: Do not over tighten, shade will break.**
- 11. Turn on power to J-Box.



"A Commitment to Excellence in Lighting and Service"

