

ASSEMBLY INSTRUCTIONS FOR # 167686

Fig.1


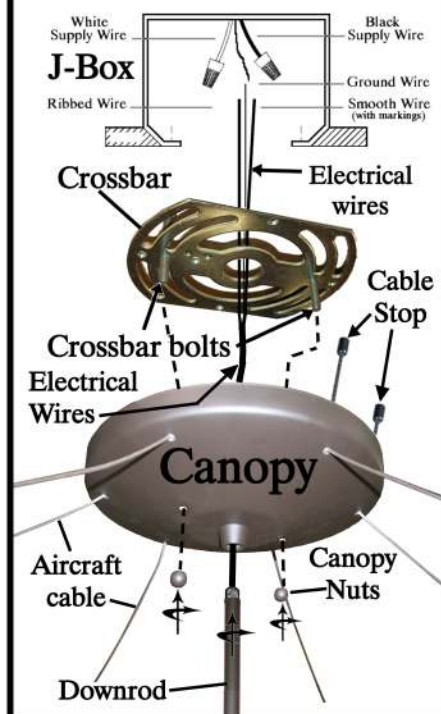


Fig.2

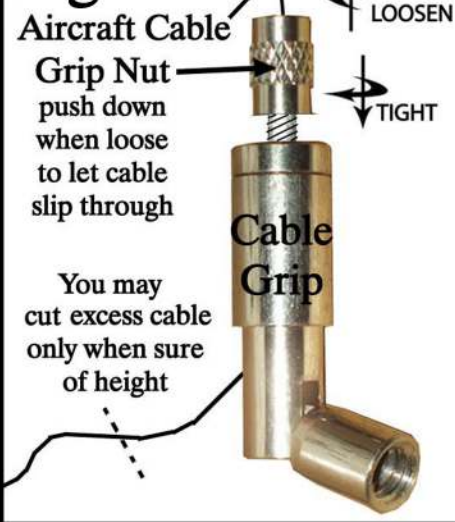

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to ceiling or J-Box. (Fig.1)
- 2.) Assemble your light cluster: Run electrical wire through the length of the downrod (If it is not already). Now screw your downrod (w/the wire inside) into the top of your light cluster. Run the wire through the canopy, and screw the downrod into the canopy as well. (Fig.1)
- 3.) Run your aircraft cables through the holes in canopy so that the cable stop rests inside the canopy. (Fig.1)
- 4.) Raise canopy to ceiling and connect all electrical wires as per your local codes. Attach canopy to the ceiling by sliding them onto the bolts that point down from crossbar. Secure canopy in place with the canopy nuts provided. (Fig.1)
- 5.) Prepare shade: insert hardware's bolt through the holes around perimeter of shade. Place washer onto bolt on the inside of shade and secure hardware with nuts provided. (Fig.3)
- 6.) Prepare your cable grippers: On the cable grip you will have a grip nut that you will unscrew a little. Pulling back on this nut will allow the cable to pass through easily. Let go of the nut and it will grip the cable. In this manner you will adjust each cable to level your shade and also position it at the desired height. Raise bowl shade to aircraft cables and run them through the cable grippers. When your shade is at the desired height, you will screw the grip nut back down to ensure a tight grip. (Fig.2&3)
- 7.) Bulb your fixture, Power on, Enjoy!
- 8.) Have a Meyda Fine Day!

Fig.3



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com