

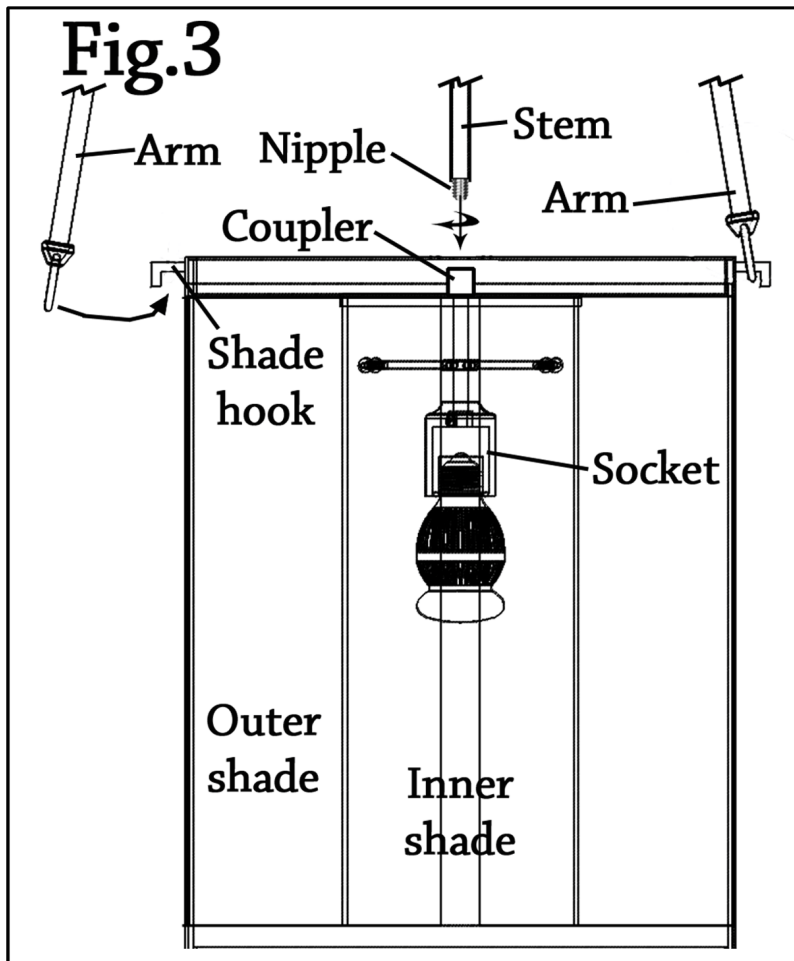
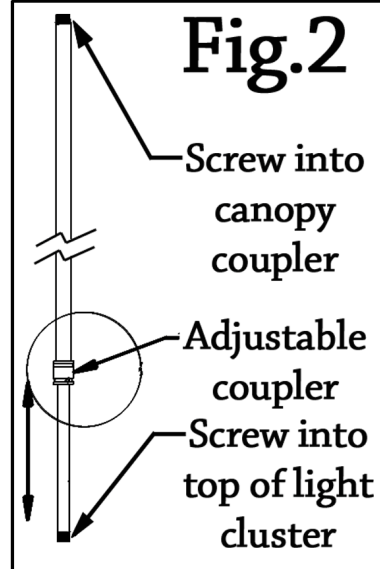



ASSEMBLY INSTRUCTIONS FOR #167874

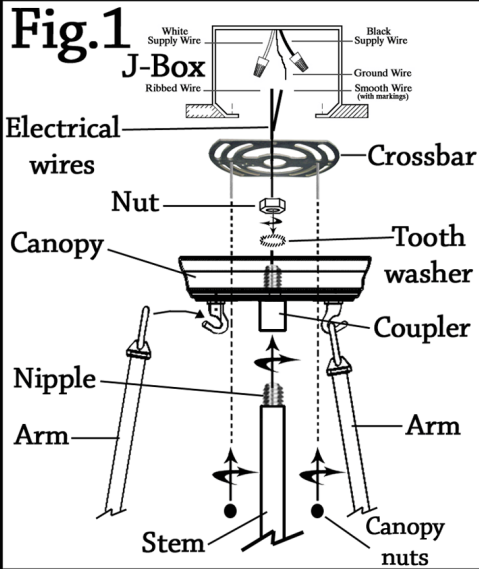

- IMPORTANT**
- TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION
- CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED
- 1.) Attach crossbar to ceiling or J-Box. Be sure there is two bolts pointing down to receive your canopy.(Fig.1)
 - 2.) Run your electrical wire through your adjustable stem.(Fig.2) Screw adjustable stem into the coupler on the top of the light cluster.(Fig.3) Now screw the other side of the adjustable stem into the coupler located on the underside of the canopy.(Fig.1)
 - 3.) Raise your light cluster/ canopy to the ceiling and connect all electrical wires as per your local codes. Slide canopy up onto the two bolts pointing down from crossbar. Secure canopy to the ceiling by screwing the two canopy nuts onto the crossbar bolts.(Fig.1)
 - 4.) If there is not already, screw your four threaded pegs into the cross washer. You may need to do this while holding the inner shade in its position (sliding the pegs through the glass holes and then screwing them into the cross washer). Hold inner shade in place with the cross nuts.(Fig.4)
 - 5.) Attach outer shade: Place all arms on their canopy hooks.(Fig.1) Raise shade to bottom of arms, hook the shade onto the bottom of each arm.(Fig.3)
 - 6.) Bulb your fixture (bulbs provided by others), power on, enjoy your new fixture!
 - 7.) To adjust your stem, simply unscrew the adjustable coupler, slide stem to where you want it, and screw coupler back tight.(Fig.2)

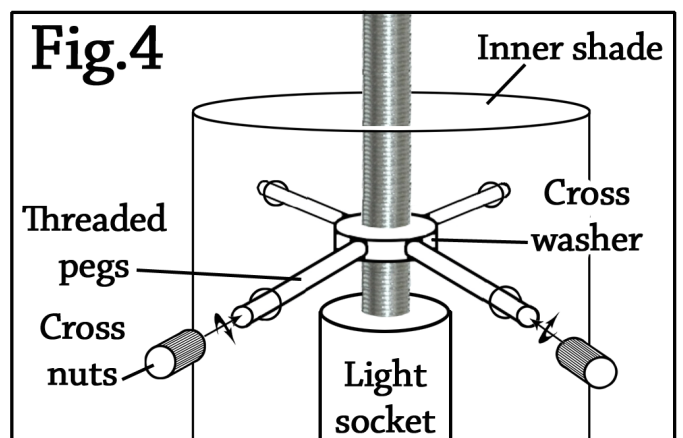

2ND AVE.™

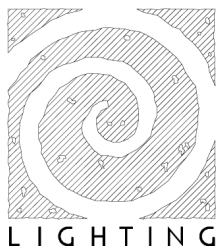

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-843-1602

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.2ndave.com