
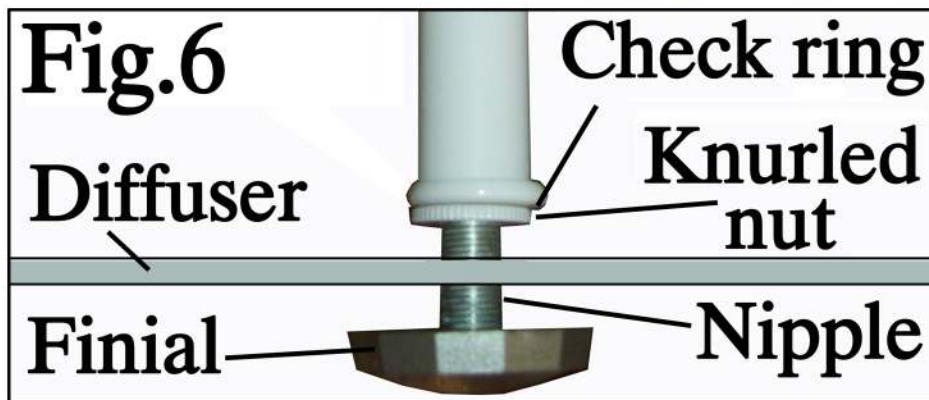
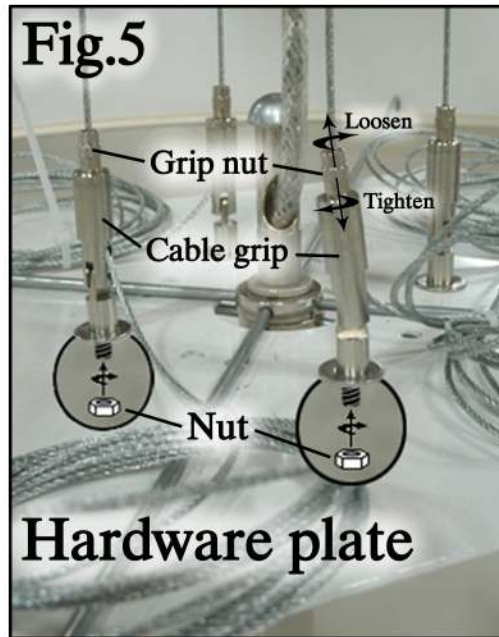
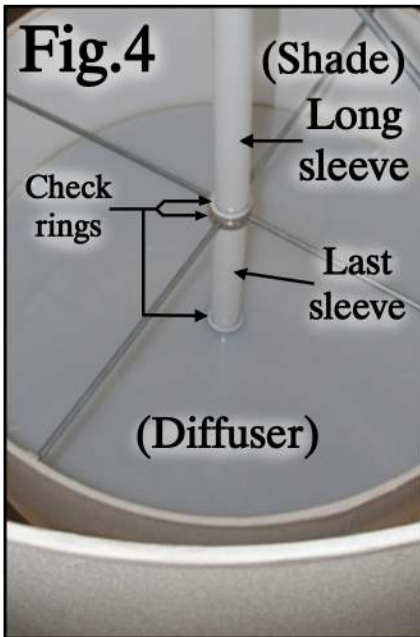
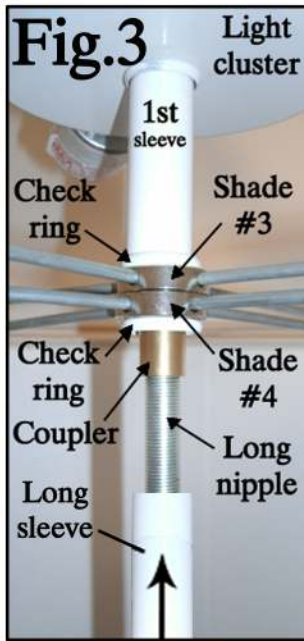
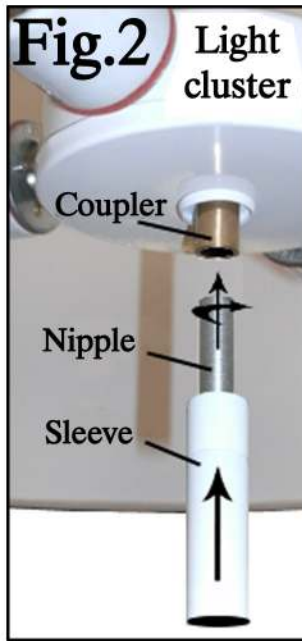


ASSEMBLY INSTRUCTIONS FOR # 168312

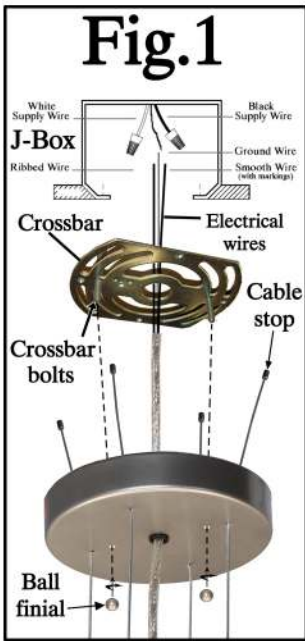

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

!!! SPECIAL NOTE !!!

BEFORE TAKING APART THE ROD THAT SANDWICHES YOUR SHADES, YOU MUST UNDERSTAND THE SMALL SLEEVE CLOSEST TO YOUR FINIAL (Fig.6) WILL BE YOUR BOTTOM SLEEVE AND NIPPLE. DON'T CONFUSE WITH TOP SLEEVE & NIPPLE!

1.) Attach your cable grips to the top of the hardware plate: simply insert the cable grip thread down into the four holes in hardware plate. Secure them in place with the four nuts provided. (Fig.5)

2.) Assemble your shades with light cluster: Your two top shades will already be attached to your light cluster. Under your light cluster, screw in your first threaded nipple, into the coupler. Slide your first sleeve onto the nipple, (Fig.2) follow that with a check ring, shade 3, shade 4, another check ring, & secure all this with a coupler. Screw into that the long nipple and follow with the long sleeve. (Fig.3) Follow the long sleeve with a check ring, shade 5, check ring, and secure all of this with a coupler. Finally screw in your last small nipple into that coupler. Slide your last small sleeve onto that nipple, follow that with check ring, knurled nut, diffuser, & finial. (Fig.4&6)

4.) Attach your crossbar to ceiling or J-Box. Be sure there is two bolts pointing down from crossbar to receive canopy. Prepare your canopy for placement: Run your four cables through the four holes in the canopy, so that the cable stop rests inside the canopy. Unfurl the electrical cord and run it through the center of the canopy. (Fig.1)

5.) Determine overall height, and adjust electrical cable to canopy accordingly. Take your four cables and run them through your cable grips: unscrew your grip nut (not all the way) and push down on the grip nut, this will allow the cable to pass freely through the cable grip. Let go of the grip nut and it will grasp your cable, allowing you to make minute adjustments. (Fig.5)

6.) Bring fixture to ceiling, connect all electrical wires as per local codes. Slide canopy onto the two bolts from step 4, & secure flush to ceiling with the two ball finials provided.

7.) When satisfied with length (& balance), screw grip nuts back down. When you are absolutely sure of length you may cut excess cable.

8.) Whew! Bulb your fixture, power on, enjoy!

9.) Have a Meyda Fine Day!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com