
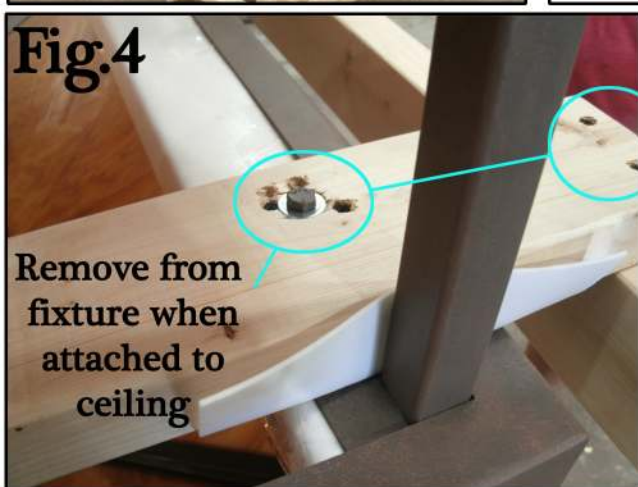
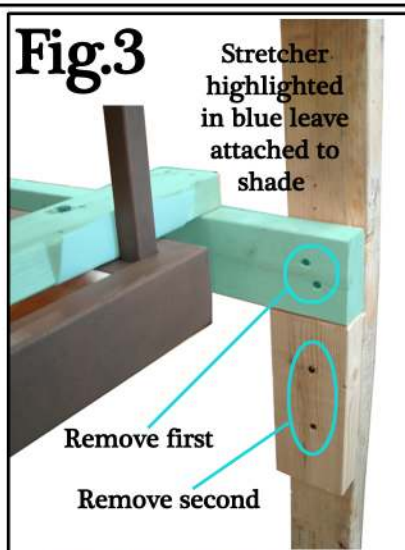


# ASSEMBLY INSTRUCTIONS FOR # 169767

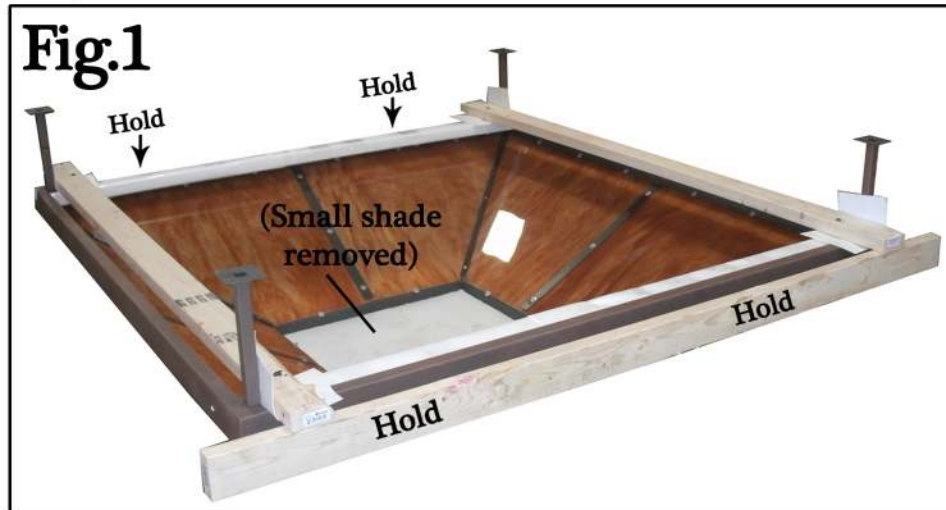

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.)When removing shades start from bottom shade up. (Fig.2)You will use the wood beams attached to each shade much like a stretcher. (Fig.1)You may leave the stretcher beams attached to your shade all the way up to the ceiling and then remove them once shade is on ceiling. (Fig.3&4)
- 2.)To remove shade from crate, first remove the front diagonal wood beam (Fig.2), then remove the screws shown in Fig.3 You will want to remove the stretcher screws first. Next with your people in place, remove the screws from the bottom brace that supports the stretcher beams.(Fig.3) It will fall away at this point so your people had better have a handle on it.
- 3.)Maneuver the shade out of crate, you may need to lower and angle it.(Fig.2) Once out of the crate you will want to install it straight away onto your ceiling. However before removing shade from crate, you may remove the smaller shade from the larger shade. (Fig.1)To do so, just remove the 4 screws (Fig.5) on the small shade. Removing the small shade will allow you to set the large shade on the floor for however long you need. You can attach the small shade later when the large is on the ceiling.
- 4.)Once shade is on ceiling remove the wood stretcher components.(Fig.4)



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)