



NEC:314.27B, A luminaire that weighs more than 23kg (50lbs.) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM WEIGHT to be supported.


## ASSEMBLY INSTRUCTIONS FOR #169774

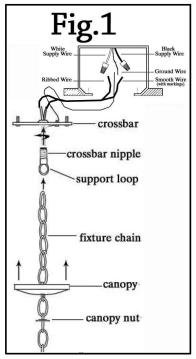

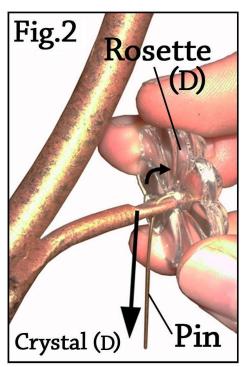

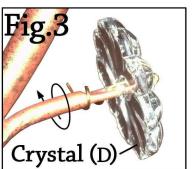

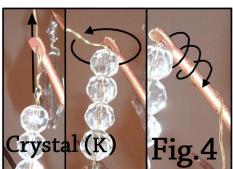

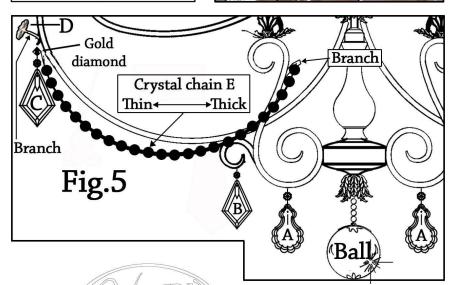

#### **IMPORTANT**

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Attach crossbar nipple with support loop to crossbar.
- 2. Attach crossbar to secure location in your ceiling.
- 3. Attach fixture chain to hub loop. (See 2nd Pg. Diagram)
- 4. Place canopy nut than canopy on to fixture chain as shown.
- 5. Attach fixture chain to support loop.
- 6. Wire as per local electrical code.
- 7. Slide canopy up to ceiling, screw canopy nut onto crossbar nipple and tighten to canopy.
- 8.)Attach crystal to the chandelier. Start from the top and work your way down.

### Steps 9-17 See Diagram on Pg. 2

9.)Connect crystal "L" to the top thin arm.
10.)Place crystal "K" onto the lower thin arm at the top of your fixture. Run your crystal's wire up through the hole, bend wire down, and wrap the wire around once or twice between the top bead and the thin arm. Now wrap your wire around the thin arm a few times. You may cut excess wire when you are sure that it is secure.(Fig.4)


11.) Screw the spires (J) into the middle of the highest leaf group.

12.)Connect crystal "G" to either side of the spire's(J) leaf group on the front (in front of "I"). The second package of "G" crystals, will be placed on either side of the higher candle's front leaves.

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009 MONDAY - FRIDAY 8:00a.m - 6:00p.m ET visit us on the web at www.meyda.com NEC:314.27B, A luminaire that weighs more than 23kg (50lbs.) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM WEIGHT to be supported.

## ASSEMBLY INSTRUCTIONS FOR # 169774

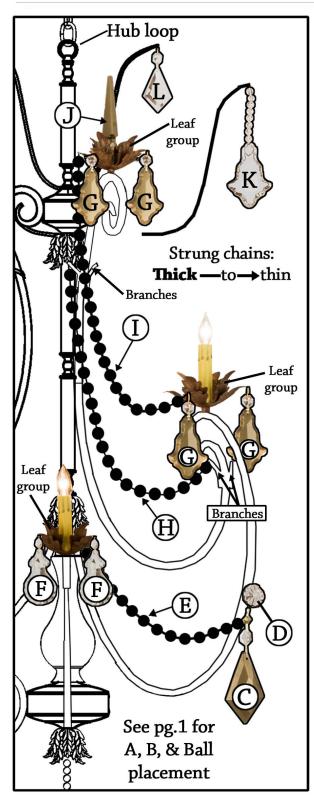

# When placing strung crystal remember the thick side of the chain is always toward the center.

13.)Connect crystal chain "I" next, chain "I" (thin side) will connect to the front leaves of the higher candle. This will be the same hole that the lower "G" crystals are connected to. The thick side of "I" will connect to the back leaves of the spire leaf group.

14.)Place "H" strung crystal chains at this time. The thin side will be hung from branches below the higher candle. The thick side will connect to branches below the spire(J).

15.)Connect crystal "F" to the front leaves of the lower candle's leaf group.

16.)Connect the rosette(D) next, send the pin straight down through the front branch hole. Hold the bottom of the pin, and tilt "D" forward so that the pin rests on top of the metal. This will ensure the rosette will stay put, and not stray.(See pg.1 Fig.2) Holding "D" in place, wrap the hanging pin around the branch.(See pg.1 Fig.3) 17.)Next connect "C" to outermost arm. This will have a small gold diamond shaped crystal which is for attaching strung crystal chain E to. Chain "E" will have two attaching to either side of this gold crystal. The thick side will connect to a branch behind the lowest candle. This branch will have two "E" chains connected to it.(See This Diagram & Pg.1 Fig.5)

18.)Connect crystal B & then A around in a circle. (See Pg.1 Fig.5)

The crystal ball will have a half-ball finial that you will screw into the bottom of the chandelier. (See Pg.1 Fig.5) 19.)Bulb your fixture, power on, enjoy your new fixture!

