

ASSEMBLY INSTRUCTIONS FOR # 170480

Fig.1

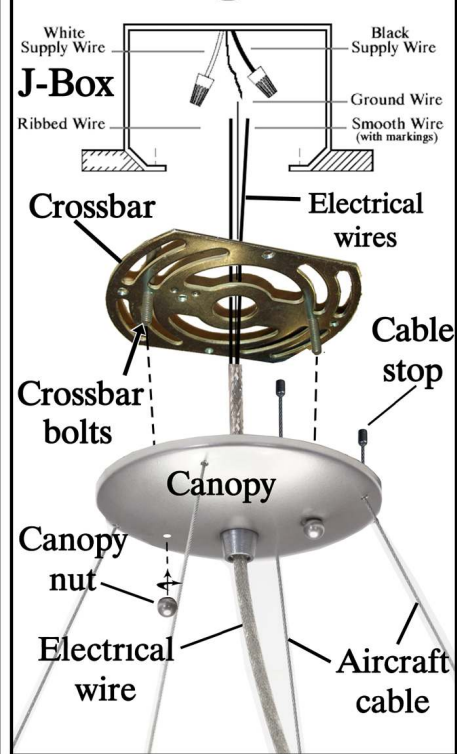


Fig.2

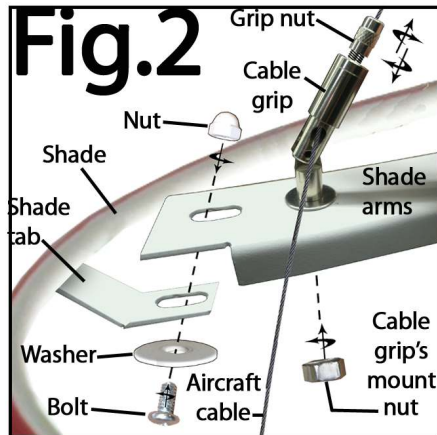


Fig.3

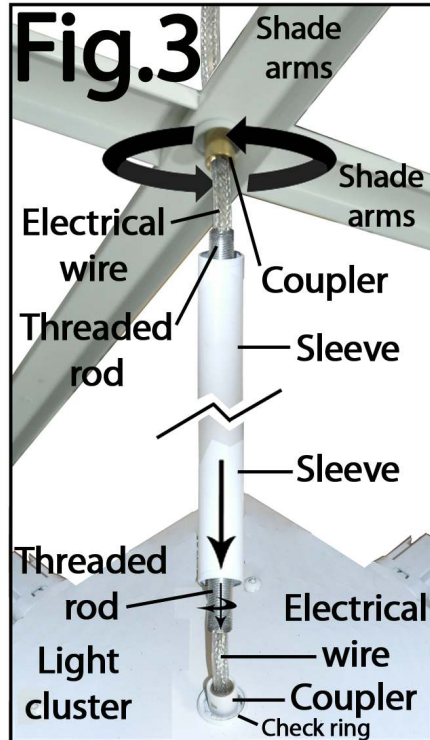


Fig.4


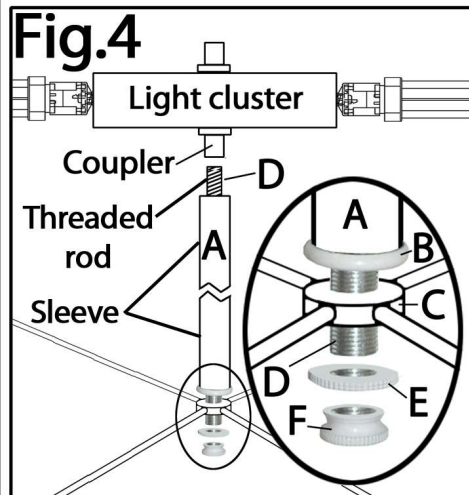


Fig.5

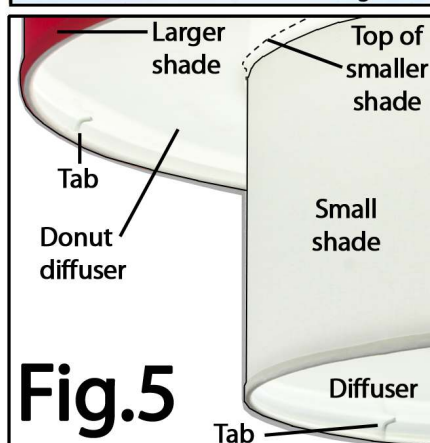


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to ceiling or J-Box. Be sure there is two bolts pointing down to receive canopy.(Fig.1)
- 2.) Attach shade arms to light cluster: Your sleeve & threaded rod will have electrical wire already run through it, screw your threaded rod into the coupler on top of your light cluster. Slide sleeve down into check ring. Run your electrical wire through the center of shade arms. Screw the shade arms onto top of threaded rod.(Fig.3)
- 3.) Attach large shade to shade arms. Attach cable grips to shade arms if not already.(Fig.2)
- 4.) Run your aircraft cable through the tiny holes around perimeter of canopy, so that the cable stops will end up inside the canopy.(Fig.1) Run your electrical wire through the center of canopy. Run the ends of your aircraft cables through the cable grips: unscrew the grip nut a little, not all the way. If you push down on grip nut, cable will pass freely. Let go of nut, and cable will be gripped. Adjust your overall height at this time. Once you are satisfied with height screw grip nut back down.(Fig.2)
- 5.) Bring canopy to ceiling, and connect all electrical wires as per your local codes. Slide canopy up onto the two bolts pointing down from the crossbar.(Fig.1)
- 6.) Slide the diffuser donut onto the small shade, so that it rests just below the arms.
- 7.) Screw in bottom threaded rod (D) into underside of light cluster's coupler. Slide on the sleeve (A), cap it with the check ring (B), now slide small shade up onto the threaded rod. With diffuser attached, and at an angle(so that it goes above the tabs at the bottom of larger shade), secure in place with knurled nut (E). Finally screw on your cap nut (F).(Fig.4) Let your donut diffuser lay on larger shade's bottom inside tabs.(Fig.5)
- 8.) Bulb your fixture if you have not already.
- 9.) Place bottom diffuser into smaller shade (at an angle). Let it lay on the shade's inside bottom tabs.(Fig.5)
- 10.) Power on, enjoy your new fixture!
- 11.) Have a Meyda Fine Day!

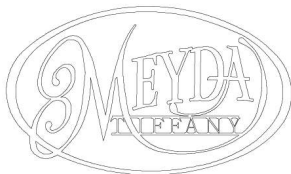

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com