
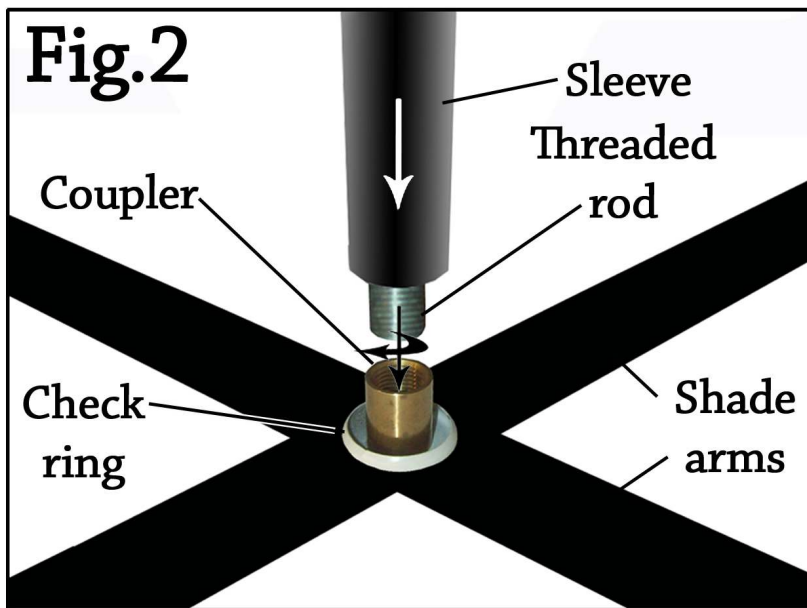


# ASSEMBLY INSTRUCTIONS FOR # 170891

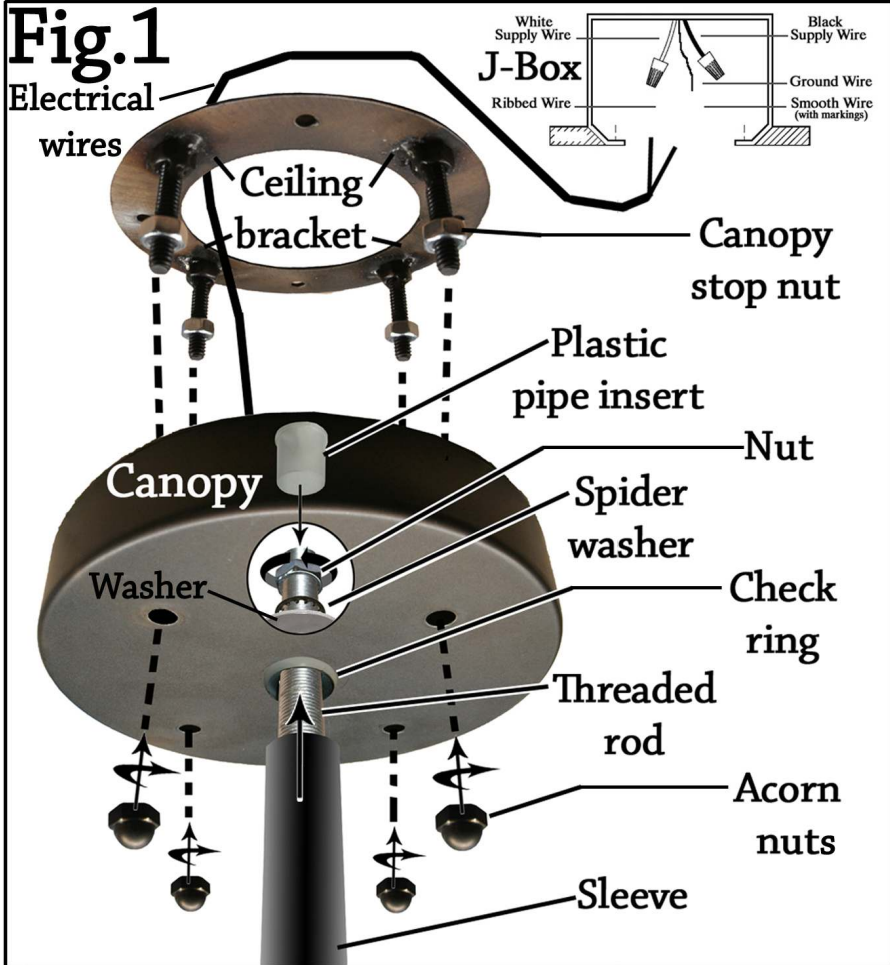

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Begin by attaching ceiling bracket to ceiling. Keep your canopy stop nuts at the level which will have the top of bracket, flush with top of canopy.(Fig.1)
- 2.) Put plastic pipe insert, as seen in Fig.1, into both ends of threaded pipe. Run your wire from shade/light cluster, up through threaded rod. Screw threaded rod into coupler that sits upon shade arms. Slide sleeve onto threaded rod so that it sits within the check ring.(Fig.2)
- 3.) Place other check ring onto the top of sleeve, so that the threaded rod penetrates the check ring. Rod also penetrates the center of canopy. Place your washer then spider washer onto the threaded rod. Screw your nut down onto threaded rod, so that your canopy is tightly secured to stem & rest of fixture.(Fig.1)
- 4.) Bring fixture to ceiling, connect all electrical wires as per your local codes.
- 5.) Slide canopy/fixture up onto the four bolts of ceiling bracket. Secure canopy flush to ceiling using the four acorn nuts provided. (Fig.1)
- 6.) Bulb your fixture (bulbs not included). Power on, enjoy your new fixture!



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at [www.meyda.com](http://www.meyda.com)