


ASSEMBLY INSTRUCTIONS FOR #170893


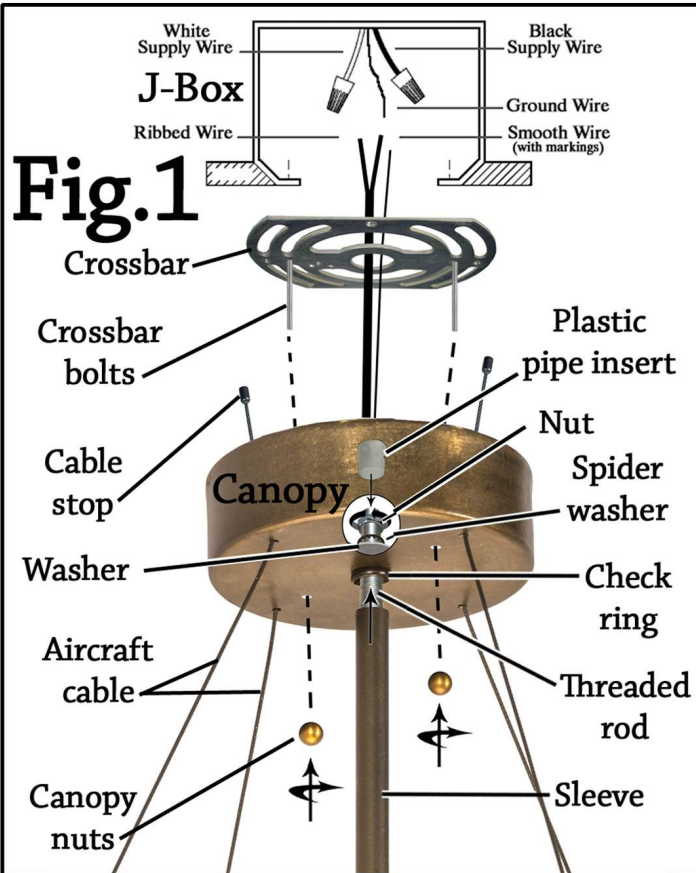


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach your crossbar to ceiling or J-Box. Be sure there is two bolts pointing down from crossbar, ready to receive canopy. (Fig.1)
- 2.) Run the electrical wire from the shade's cross arms through the threaded rod, and sleeve. Screw the threaded rod into the coupler on top of cross arms. Slide your sleeve onto rod. (Fig.2) Run wire through check ring, canopy, spider washer, nut, & plastic pipe insert. Top the sleeve off with a check ring, (rod will penetrate). Follow that with the canopy, spider washer, & screw nut onto threaded rod. Place pipe insert into pipe. (Fig.1)
- 3.) Run your aircraft cables through the four holes in canopy. Be sure the cable stop rests within the canopy. (Fig.1)
- 4.) Run your aircraft cables through the cable grips attached to shade. (Fig.3) You may cut excess cable when installed & sure of its length.
- 5.) Bring fixture to ceiling and connect all electrical wires as per your local codes. (Fig.1)
- 6.) Slide canopy/fixture up onto the two canopy bolts, secure fixture flush to ceiling by screwing the two canopy nuts onto the two crossbar bolts. (Fig.1)
- 7.) Bulb your fixture, (bulbs not included). Power on, enjoy your new fixture!

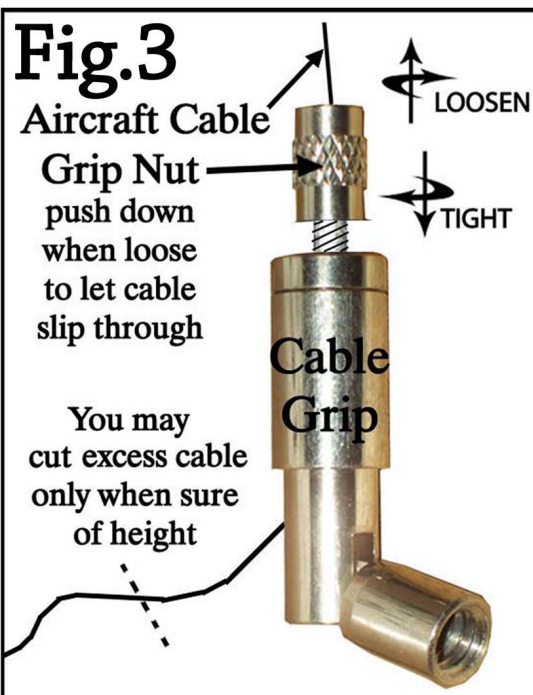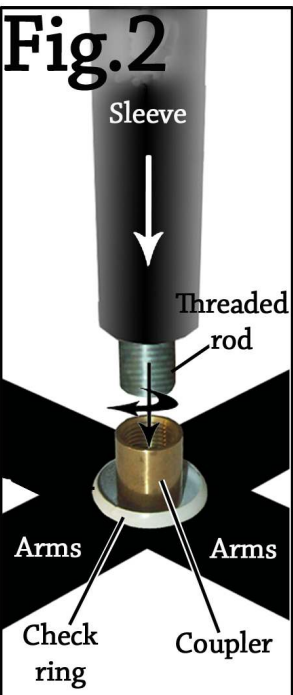

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com