
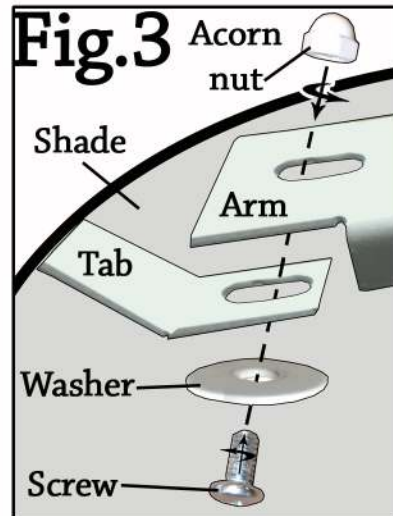
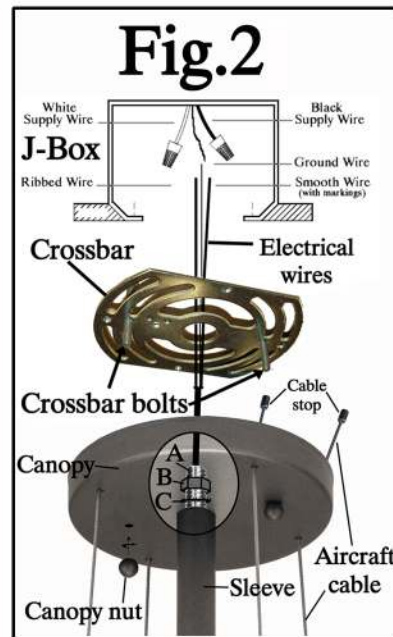


# ASSEMBLY INSTRUCTIONS FOR # 171177


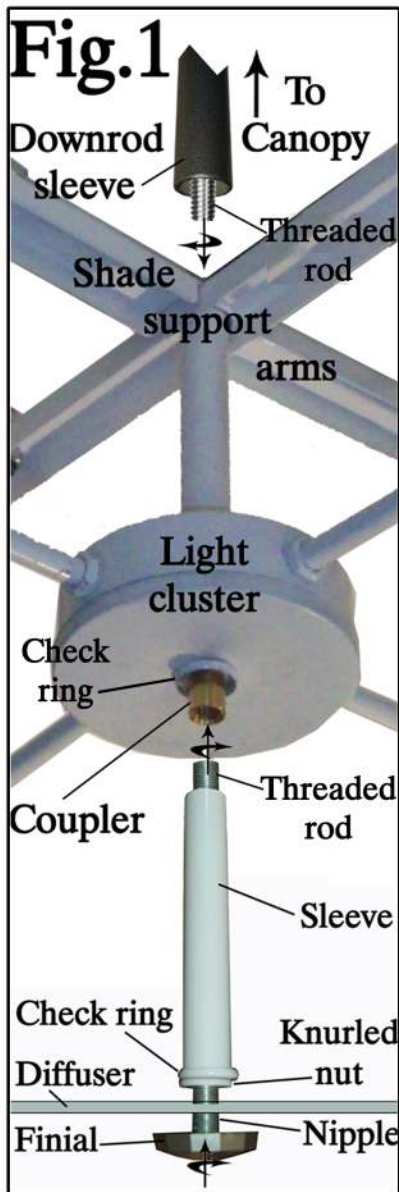


## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Assemble your unit's hardware: Your light cluster is shipped attached to your shade arms. Screw your shorter threaded rod into the underside of your light cluster's coupler.(Fig.1) Slide the white sleeve over it so that it sits within the check ring. Follow the sleeve with another check ring, and then a knurled nut. Assemble rod above the shade support arms by screwing threaded rod into coupler, followed by the sleeve, (Fig.1) then canopy. Secure canopy in place with a lock washer(C), then nut(B) tighten onto the threaded rod(A). (Fig.2)
- 2.)Run your four aircraft cables through the four holes in your canopy so that the cable stops rest inside the canopy.(Fig.2)
- 3.)Attach your crossbar to your J-Box or ceiling.(Fig.2) Two bolts point down.
- 4.)Insert your diffuser into your shade. Lower your light cluster into the shade, letting the threaded rod pierce the center of the diffuser. Secure diffuser with finial provided. Match support arms to shade by lining up the tabs to the arms. Secure arms to tabs with the arm's nuts and bolts.(Fig.3)
- 5.)Attach cable grip on arm with nut under arm. Run your aircraft cables through the cable grips by unsewing the grip nut a little. Push in to allow cable movement. Let go of grip nut and it will grip cable. When you are sure of length screw grip nut back down. When you are absolutely sure of length you may cut excess cable.(Fig.4)
- 6.)Bring fixture to ceiling and attach all electrical wires as per local codes. Slide canopy onto bolts that point down from crossbar. Secure to ceiling using the canopy nuts provided.(Fig.2)
- 7.)Bulb it, power on, Enjoy!
- 8.)For field adjustment: Cut equal lengths off of sleeve and threaded rod. When using both sleeves and threaded rod, you will join them with a coupler. You will cap off both sleeves with check rings. Start joining rod assembly above light cluster ending at canopy.(Fig.5)

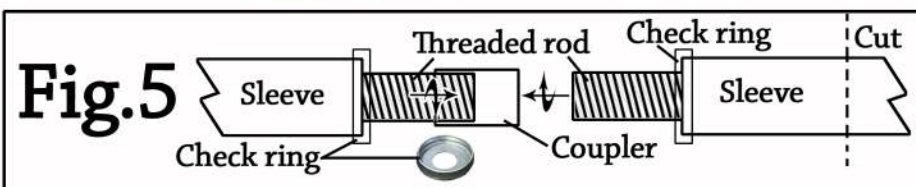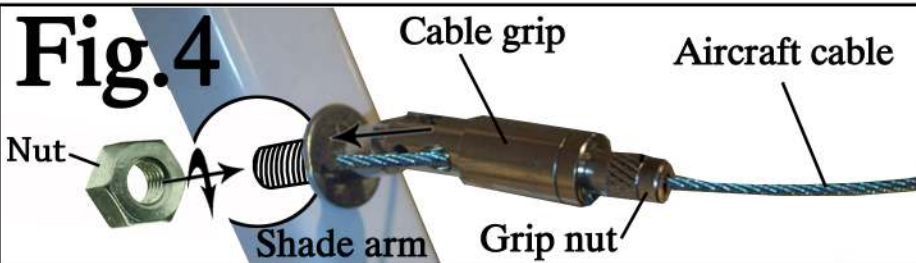

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)