

# INSTALLATION INSTRUCTIONS

FOR ITEM 17311 POND LILY 3 LIGHT WALL SCONCE

*Meyda*  
CUSTOM LIGHTING


**CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE.** We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.\*

**Caution:** Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

## **Caution:**

***Be sure power is off at the main breaker box prior to installation.  
Read all instructions in their entirety before beginning installation.***

1. Carefully unpack all components and make certain that everything is accounted for.
2. Remove Screws from face of Sconce to separate Decorative Cover. Reserve parts for later use.
3. Remove Hex Nuts to separate Rear Cover Plate and Crossbar with Studs. Reserve parts.
4. Using Customer Supplied Fasteners, attach Crossbar to Junction Box ensuring that connection is suitable to hold a minimum of 10lbs and that Electrical Supply Wires remain accessible.
5. Following Local Codes and Procedures, make Connection from Fixture Wires to Supply Wires.
6. Slide Rear Cover Plate over Crossbar with Studs passing through Slot. FIG. A
7. Slide Sconce onto Studs and secure with reserved Hex Nuts. FIG. B
8. Replace Decorative Cover and secure with reserved Screws. FIG. C
9. Insert Glass Shades into Socket Cups.
10. Install 3-E12 15Watt Bulbs(not included) into Sockets.
11. Power on and ENJOY!!!

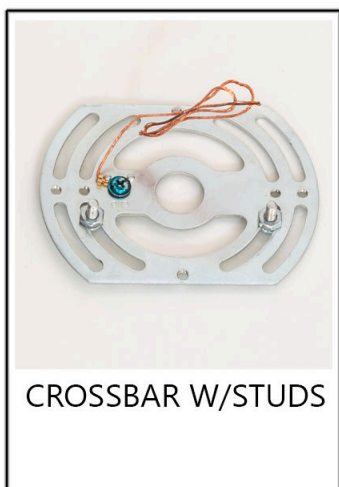

CROSSBAR W/STUDS



REAR COVER PLATE  
OVER CROSSBAR  
FIG. A



SCONCE ATTACHED  
TO CROSSBAR STUDS  
FIG. B



DECORATIVE COVER  
ATTACHED  
FIG. C

